Assembly Instruction Sheet #IS-553P11-1 For Style 5553P11-1

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (1) E26 Base Bulb 60W Maximum (Not include).

Estimated Assembly Time: 15-30 minutes

Preparation: identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

▲Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture.

We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.




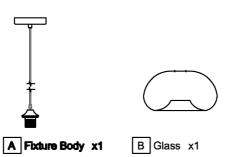

Hardware Contents

PART	DESCREPTION	QUANTITY	-	
M	Decorative Caps	2ров		
BB	Electrical Marrets	2ров		
CC	Outlet Box Screw	2pcs		
DD	Mounting Screw	2ров		
Œ	Mounting bracket	1pcs		
M	BB	CC	DD	Œ
=	A R	Î		
		_	_	

STEP 1 - Attach Mounting Screws, Lock Washers

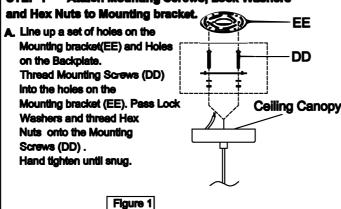

STEP 2 - Attach Mounting bracket to Outlet Box

A Pass the supply wires through the Mounting bracket (EE).

Attach the Mounting bracket (EE) to the Outlet Box

with the head of the Green Ground Screw facing you.

Secure it with Outlet Box

Screws .
Tighten until snug.

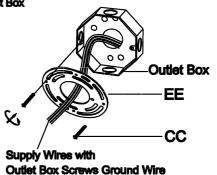


Figure 2

STEP 3 - Fit Backplate to Mounting bracket Assembly

A. Fit the backplate to Mounting Screws (DD) and secure with Decorative Caps (AA). Note: The backplate should be snug against the ceiling and the Decorative Caps (AA).

If not, adjust the length of the Mounting Screws (DD) by unscrewing the Hex Nut and Lock Washer and then screwing Mounting Screws (DD) in or out of the Mounting bracket (EE) until the correct length is achieved. Once the Celling Canopy is secure, remove the Decorative Caps (AA) and Celling Canopy and proceed to Step 4



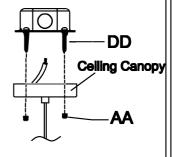


Figure 3




A. Use standard wire connectors to make all wire connections, Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

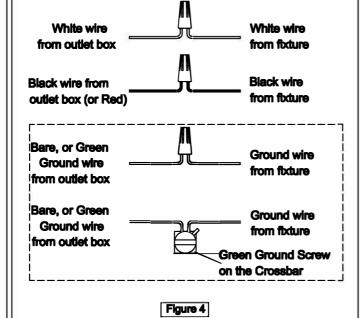

STEP 6 - Install Glass and bulb.

A. Put the (B) Glass to the Fixture Body A.

B, install bulbs into sockets and screw snug into place.

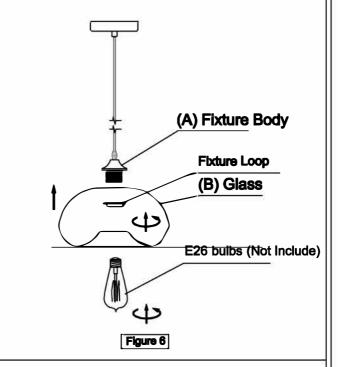

STEP 5 - Install Celling Canopy to Celling

A.Carefully tuck all wires into the outlet box and position the Celling Canopy of the Fixture Body (A) over the outlet box. Align the holes in the Celling Canopy with the Mounting Screws (DD). Secure with Decorative Caps (AA) and hand tighten until snug.

