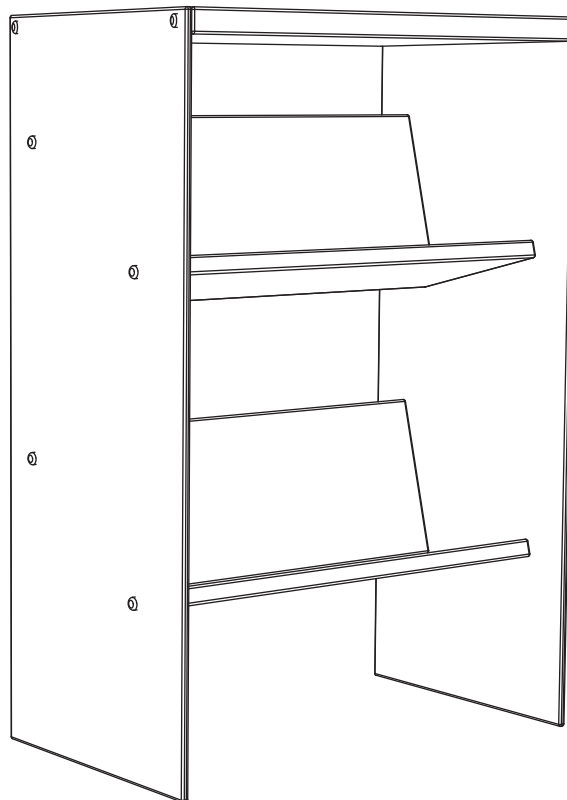


# CONVENIENCE CONCEPTS

## SOHO BOOKCASE

131559



### ASSEMBLY INSTRUCTIONS

---

We have designed our furniture with you , the customer in mind . Our clear , easy to follow , step by step instructions will guide you through the project from start to finish . Feel confident that this will be a fun and rewarding project . The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment .

---








Please do not return to the store

Broken or missing parts?


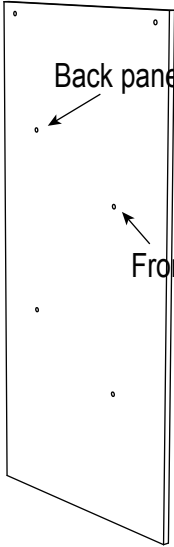
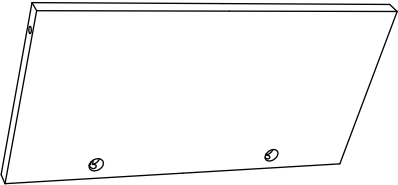
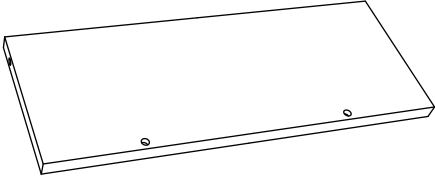
Need help with assembly?

If you have any questions just call 1-800-468-6447 or email us at [parts@convenience-concepts.com](mailto:parts@convenience-concepts.com)

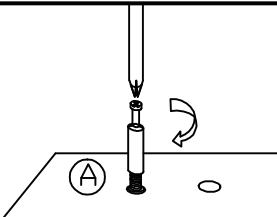
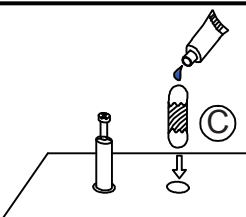
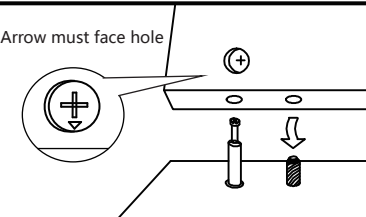
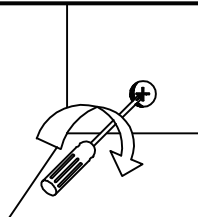
## Hardware List

<b>A</b> 	<b>B</b> 	
Cambolt ( 4pcs )	Camlock ( 4pcs )	
<b>C</b> 	<b>D</b> 	<b>E</b> 
Screw and washer (12pcs )	locking nut ( 12pcs )	sticker ( 4pcs )

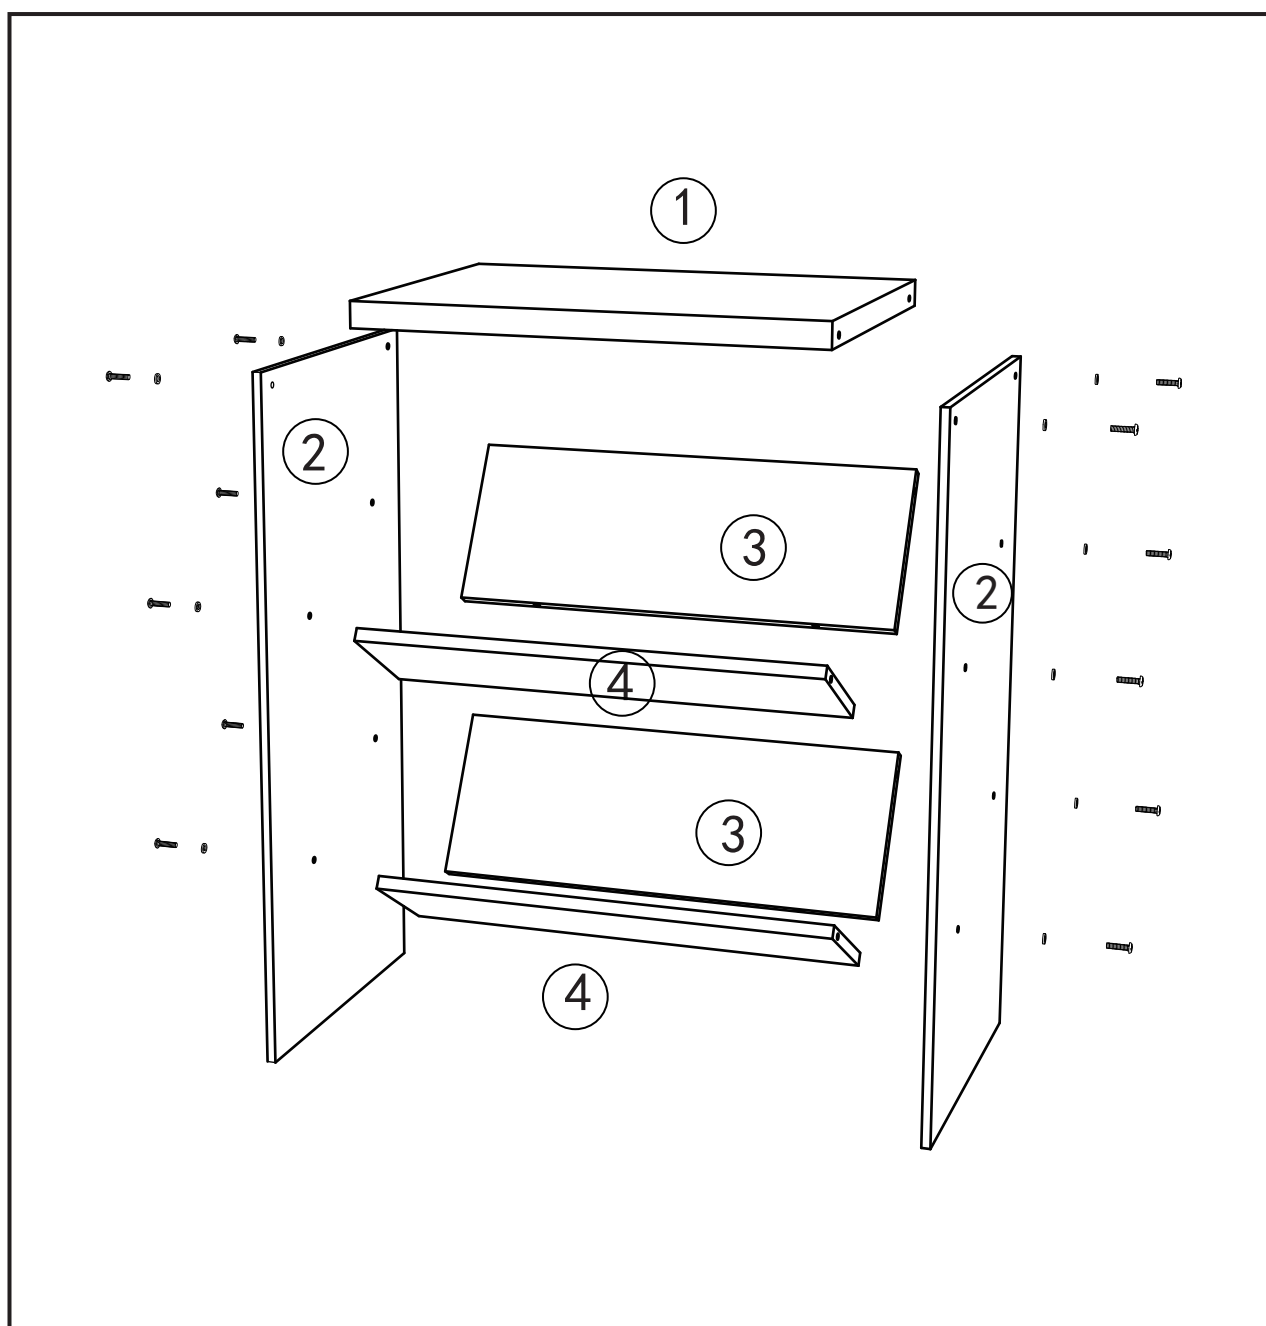
## Panel List

<b>①</b>  <p>Top panel (1PC)</p>	<b>②</b>  <p>Back panel hole</p> <p>Front panel hole</p> <p>Side panel (2PC)</p>
<b>③</b>  <p>Back panel (2PCS)</p>	<b>④</b>  <p>Front panel (2PCS)</p>

## Assembling the unit with camlocks and wood dowels.

			
<p>Gently screw cam bolt into the threaded anchor.</p>	<p>Lightly glue one end of the wood dowel and tap halfway into hole.</p>	<p>Lightly glue wood dowel and connect to second panel by inserting dowels into holes.</p>	<p>Screw the camlock firmly into locked position.</p>

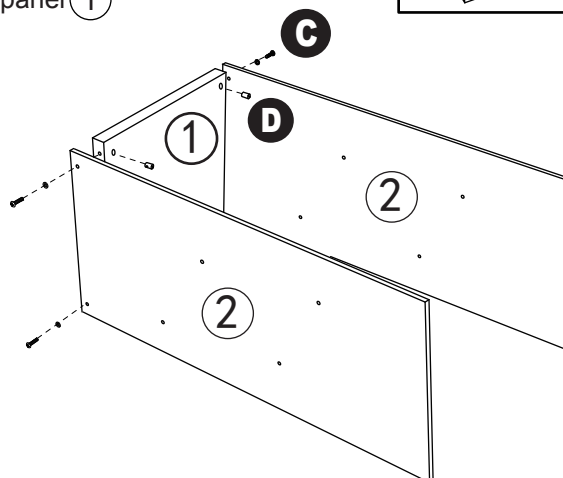
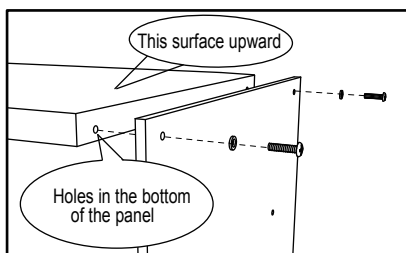
## Hardware List



## Step 1

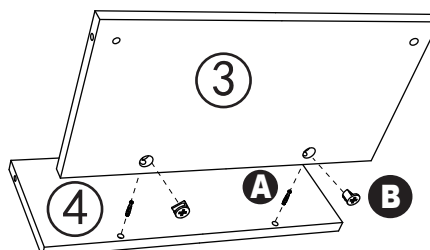
\*Assemble unit on carpet or soft surface.

1. Insert locking nuts **D** into top panel **1**.
2. Connect the side panels **2** to top panel **1** using screws and washers **C**.



## Step 2

1. Screw cambolts **A** into front panel **4**. Then connect back panel **3** using camlocks **B**. Use care not to overtighten.
2. Repeat for second shelf.



\*Refer to page 3 for camlock/ cambolt instructions.

## Step 3

1. Insert locking nuts **D** into front panel **4** and back panel **3**.
2. Connect front panel **4** and back panel **3** to unit as shown using screws and washers (C).
3. Place stickers **E** over camlock holes.

Front panel hole  
Back panel hole

