#### WARNING

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN. WARNING \*\*\* SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL. ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

## CARE AND MAINTENANCE

To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.

To clean the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the interior surface of the fixture.

Do not use any cleaners with chemical, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.

## NOTICE& IMPORTANT SAFETY INSTRUCTIONS

\* Please make sure that you have all parts indicated before you begin assembly of this item

\* This item should be assembled on a soft surface to prevent scratching the finish during assembly

\* To reduce the risk of fire, electrical shock or injury to persons or property, please follow the guideline below for safe use and installation

\*The external flexible cable or cord of this luminaire cannot be replaced


If the cord is damaged, the luminaire shall be destroyed

# Part List and Hardware List

| PIECE | DESCRIPTION     | PICTURE | QUANTITY | PIECE | DESCRIPTION         | PICTURE | QUANTITY |
|-------|-----------------|---------|----------|-------|---------------------|---------|----------|
| A     | wire connector  | 0       | 3X       | К     | mounting bracket    |         | 5X       |
| В     | mounting plate  |         | 1X       | L     | wood screw          | -       | 10X      |
| С     | ground screw    |         | 1X       | М     | screw               |         | 5X       |
| D     | machine screw   |         | 2X       | Ν     | hex kry             |         | 1X       |
| E     | Retaining Screw |         | 4X       | 0     | towel ring          |         | 1X       |
| F     | lamp body       |         | 1X       | Р     | robe hook           | R       | 1X       |
| G     | glass           |         | 3X       | Q     | toilet paper holder |         | 1X       |
| н     | socket ring     |         | 3X       | R     | body of towel bar   |         | 2X       |
| I     | bulb            | Û       | 3X       | S     | towel bar           |         | 1X       |
| J     | wall anchors    | Crock   | 10X      |       |                     |         |          |



Model#: JYL1505 Product Dimensions: 26"W X8.25"EX 9.75"H

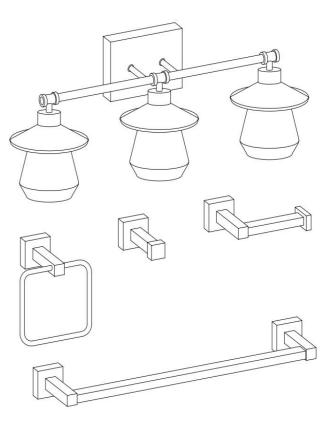


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product. Estimated Assembly Time: 20 minutes.

If there are any questions relating to defects, missing parts, assembly issues, replacements, or device connectivity issues, please send a detailed email to cs@jonathany.com

- 1. Separate the mounting plate (B) from the lamp body (F) by removing the Retaining Screw (E) anti-clockwise. then fix the mounting plate (B) to the outlet box with machine screw (D).
- 2. Make wire connections, with wire connectors(A), following the reference chart listed below.

| Connect, Hot, Black or Red Outlet Supply Wire to:            | Connect, Neutral, White Outlet Supply Wire to:            |  |  |
|--|---|--|--|
| Black  | White   |  |  |
| * Parallel Cord (round & smooth)                             | * Parallel Cord (square & ridged)                         |  |  |
| Clear, Brown, Gold or Black without Tracer (colored stripes) | Clear, Brown, Gold or Black with Tracer (colored stripes) |  |  |
| Insulated Wire (not green) with copper metal conductor       | Insulated Wire (not green) with Silver metal conductor.   |  |  |
|  |   |  |  |



\*Note: When parallel wire (SPT I & SPT II) is used. The neutral wire is square shaped and ridged and the hot wire will be round in shape and smooth. (See Illustration on left.)


Grounding Instructions:

a) For installation in the United States: Wrap ground wire from outlet box around green ground screw (C) on mounting plate, no less than 2" from wire end. Tighten ground screw. If fixture is supplied with a ground wire, connect to outlet ground wire with a wire connector.
b) For installation in Canada: If fixture is supplied with ground wire, wrap ground wire around green grounding screw on mounting plate. Tighten ground screw.

- 3. Attach the Lamp Body (F) to the Mounting Plate (B) and secure with Retaining Screw (E).
- 4. Place the glass (G) onto the socket, then fasten it by socket ring (H)
- 5. Install bulb (I). Be sure to use light bulb(s) with wattage no greater than specified on this fixture. Always make sure that electrical current is turned off before changing bulbs.

# PLEASE USE ON/OFF TYPE"A" BULB MAX 40-WATT OR LED BULB MAX 9 -WATT THERE ARE 3PCS 4WATT LED BULB IN THE BOX

## ENJOY YOUR LAMP

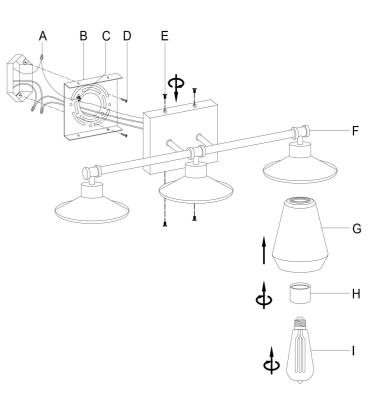

#### Installing the towel ring

1. Determine the location for the towel ring (O). Using the mounting bracket (K) as a template, mark the location of the holes for the wall anchors (J). Drill the appropriate size holes for the wall anchors (J). (the holes should be slightlysmaller than the size of the wall anchors (J). ). The wall anchors (J) are then punched into the drilled holes, And allowing for the wood screws (L) to protrude through the hole on mounting bracket (K), then screw the wood screw (L) to the wall anchors (J).

2. Place the towel ring (O) over the mounting bracker (K) and use the hex key (N) to secure it in place by using screw (M).

## Installing the robe hook

1. Determine the location for the robe hook (P). Using the mounting bracket (K) as a template, mark thelocation of the holes for the wall anchors (J). Drill the appropriate size holes for the wall anchors (J). (the holes should be slightlysmaller than the size of the wall anchors (J). ). The wall anchors (J) are then punched into the drilled holes, And allowing for the wood screws (L) to protrude through the hole on mounting bracket (K), then screw the wood screw (L) to the wall anchors (J).

2. Place the robe hook (P) over the mounting bracker (K) and use the hex key (N) to secure it in place by using screw (M).

## Installing the toilet paper holder

1. Determine the location for the toilet paper holder (Q). Using the mounting bracket (K) as a template, mark the location of the holes for the wall anchors (J). Drill the appropriate size holes for the wall anchors (J). (the holes should be slightlysmaller than the size of the wall anchors (J). ). The wall anchors (J) are then punched into the drilled holes, And allowing for the wood screws (L) to protrude through the hole on mounting bracket (K), then screw the wood screw (L) to the wall anchors (J).

2. Place the toilet paper holder (Q) over the mounting bracker (K) and use the hex key (N) to secure it in place by using screw (M).

NOTE: The toilet paper holder Can be installed in left and right instal.

## Installing the towel bar

1. Place the towel bar (S) to the body of towel bar (R).

2. Determine the location for the body of towel bar (R). Using the mounting bracket (K) as a template, mark the location of the holes for the wall anchors (J). Drill the appropriate size holes for the wall anchors (J). (the holes should be slightlysmaller than the size of the wall anchors (J). ). The wall anchors (J) are then punched into the drilled holes, And allowing for the wood screws (L) to protrude through the hole on mounting bracket (K), then screw the wood screw (L) to the wall anchors (J).

3. Place the body of towel bar (R) over the mounting bracker (K) and use the hex key (N) to secure it in place by using screw (M).

