

# DROP IN BATHTUB INSTALLATION INSTRUCTIONS

## Important Information

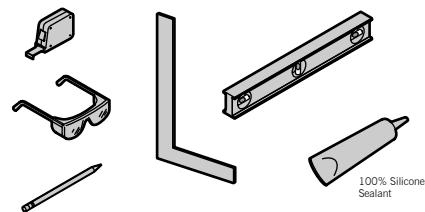
The bath must only be supported by the feet or base. Do not support the bath by the rim.

Before installing a rim-mount bath faucet, refer to the online product specification sheet. Ensure clearance under the rim before drilling faucet holes in the rim.

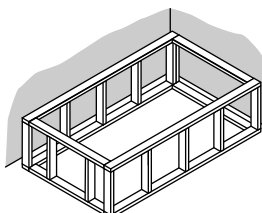
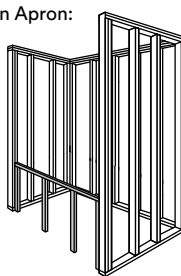
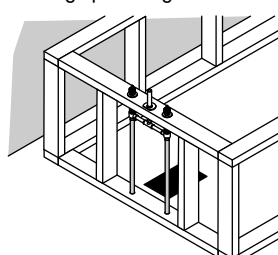
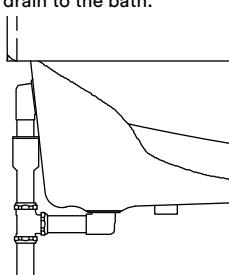
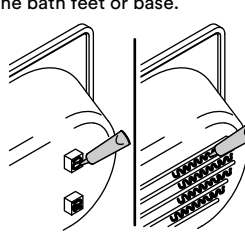
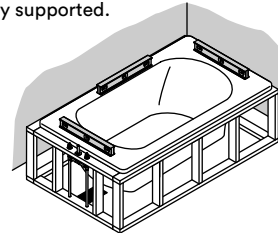
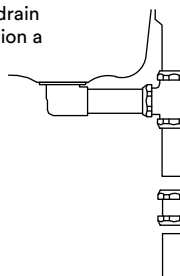
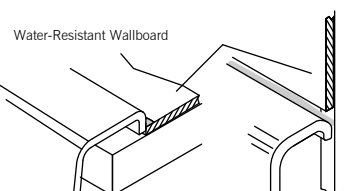
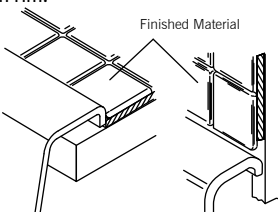
Provide adequate floor support. Refer to the specification sheet for specific floor-loading requirements.

Make sure the subfloor is level. Provide drain access from below. Provide access to all plumbing connections. Observe all local building and plumbing codes.

## Conventional woodworking tools and materials for better installation



\*Drop cloth  
\*Construction Adhesive

<p><b>1. Construct the framing. Refer to the specification sheet.</b></p> 	<p><b>2. Optional Add-On Apron:</b> Refer to the apron instructions and provide necessary support.</p> 	<p><b>3. Install the rough plumbing.</b></p> 	
<p><b>4. Install the drain to the bath.</b></p> 	<p><b>5. For adhesive installation, apply a generous amount of construction adhesive to the bath feet or base.</b></p> 	<p><b>7. With help, lift the bath into position. Verify level. Ensure the feet or base are fully supported.</b></p> 	
<p><b>8. Make the final drain connections. Position a protective liner in the bath basin.</b></p> 	<p><b>9. Install water-resistant wallboard</b></p> 	<p><b>10. Install the finished wall and deck material to within 1/16" (2 mm) of the bath rim.</b></p> 	
<p><b>11. Apply 100% silicone sealant around the bath along the finished walls and deck.</b></p> 