











MADISONPARK

Assembly Instruction--Accent Bench


PARTS #	PARTS NAME	DRAWING	QTY
P1	Left Front Legs		1
P2	Right Front Legs		1
P3	Left Back Legs		1
P4	Right Back Legs		1
P5	Accent Bench		1

Hardware#	PARTS NAME	DRAWING	QTY
H1	Bolts $\phi 5/16 \times 2-3/8$ "		8
H2	Lock Washers $\phi 5/16$ "		8
H3	Flat Washers $\phi 5/16$ "		8
H4	Allen Wrench $\phi 5/16$ "		1

1. Turn the bench upside down and lay on protective carpet, take out the legs and hardwares from the bottom.

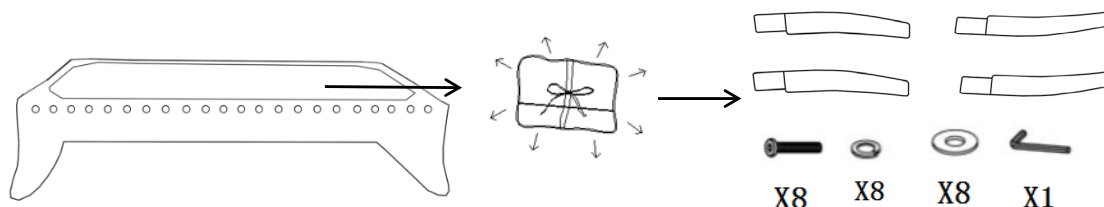

2. Using bolts (H1), lock washers (H2), flat washers (H3), connect legs(P1,P2,P3,P4) to bench (P5). Tighten bolts (H1) with Allen Wrench (H4).

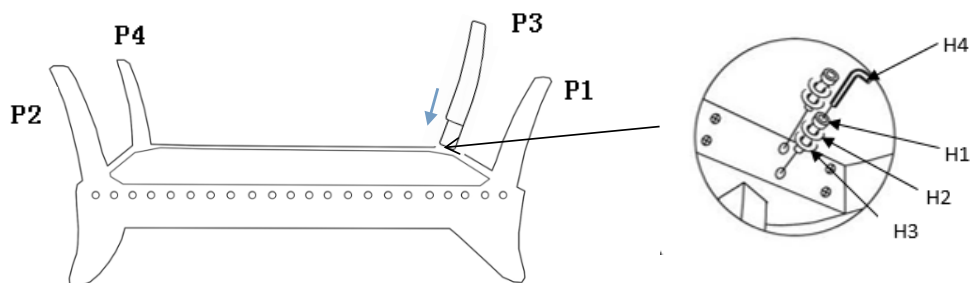

3. Place bench upright on a level surface. Assembly is complete.

