


CHIC TEAK

MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING
NEED ASSEMBLY ASSISTANCE?
CALL US AT 866-814-8325

Assembly Instruction

INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING

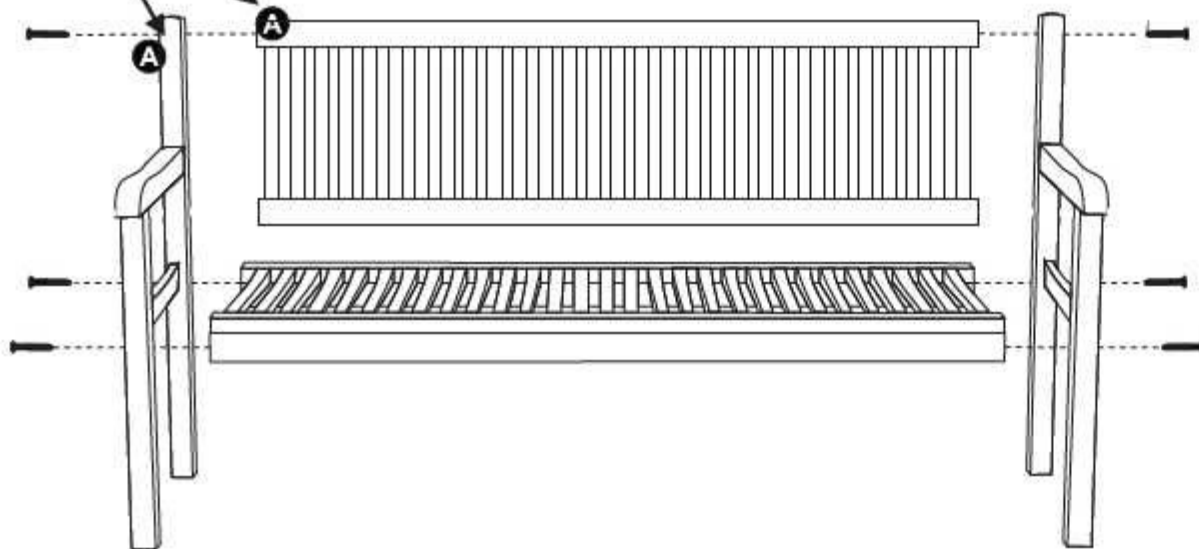

**Make sure to use Gorilla Glue (Not Included)
on all wood joints before assembly**

Code

AM166D

Hardware



F. Bolt 6 Pcs

Tool



Socket Wrench 4m/m Ht

Total Section

4 Section