




ASSEMBLY INSTRUCTIONS

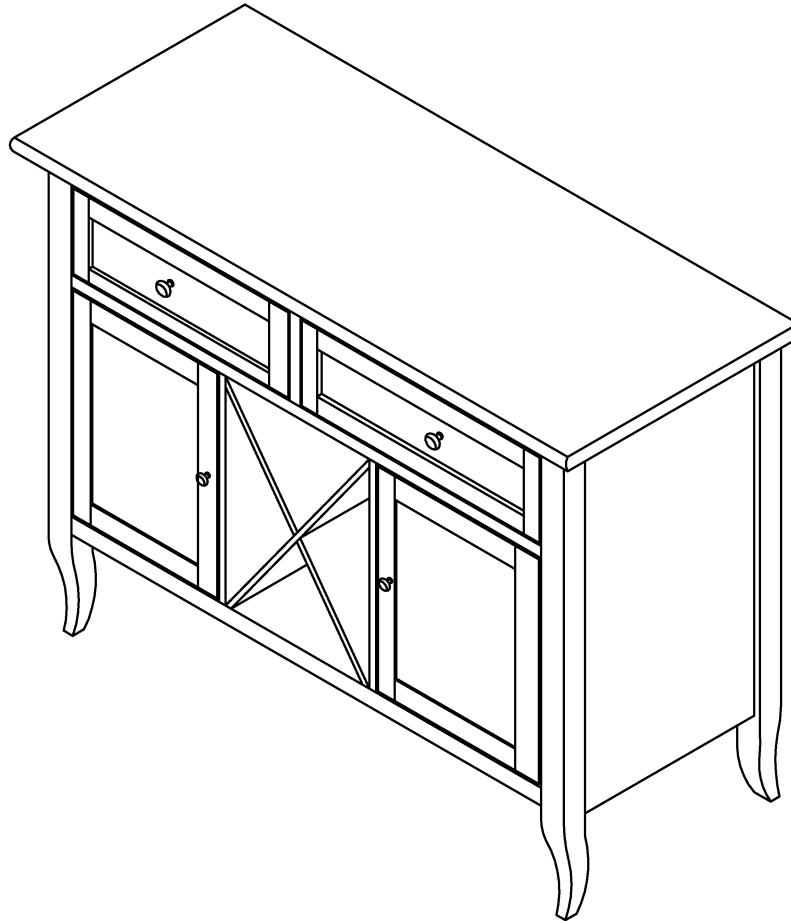

NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

To insert a cam lock: (Please read below instructions before assembling)

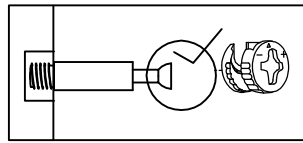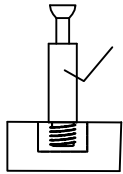

1. Insert cam screw into hole as shown in diagram A .

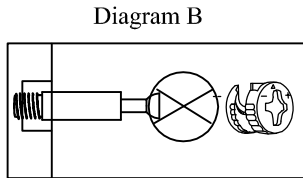
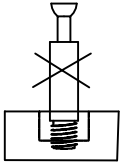


Diagram B

Make sure not to insert the cam screw:
Too deep as shown in figure B as this will cause the
cam screw to be misaligned and unable to
interlock properly.




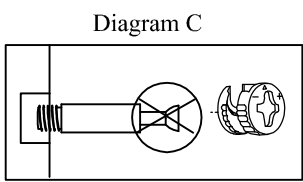


Diagram C


Also avoid inserting the cam screw too close to the
surface of the hole as shown in figure C, as this will
cause the cam lock to be too loose, and not interlock
properly.

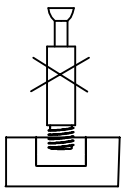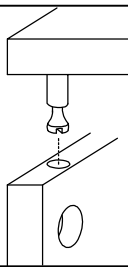


2. Connect the panels together.

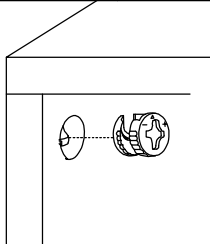

ARROW SIGN



3. When inserting the cam lock make sure the arrow
of the cam lock faces the cam screw.

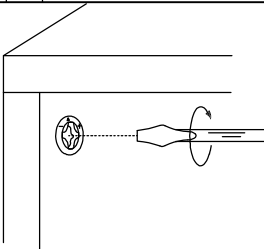

















4. To tighten the cam lock turn the cam lock clockwise
90-180 degree or until the arrow is facing opposite
the place cam lock was inserted.

NOTE: DO NOT USE AN AUTOMATIC
SCREWDRIVER TO TIGHTEN CAM LOCKS.




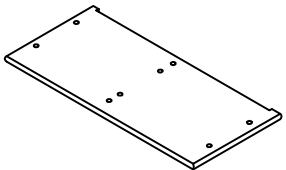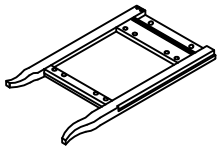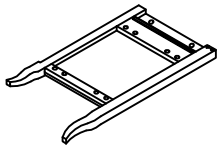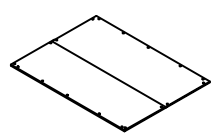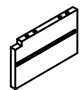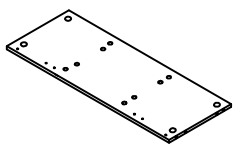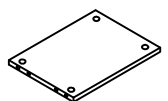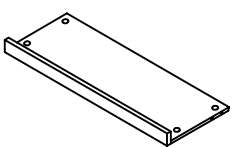




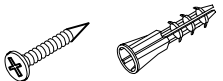
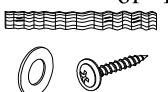
Note:

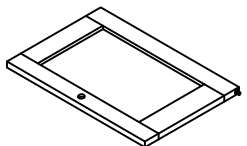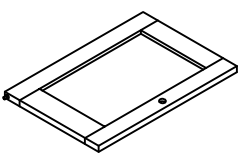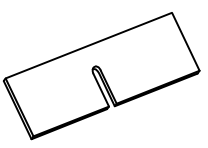- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.


Part List

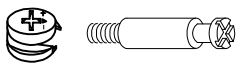A1  Top Panel	Quantity of 1	A2  Left Side Frame	Quantity of 1	A3  Right Side Frame	Quantity of 1	A4  Back Panel	Quantity of 1
A5  Top Divider	Quantity of 1	A6  Top Shelf	Quantity of 1	A7  Low Divider	Quantity of 2	A8  Bottom Panel	Quantity of 1
A9  Darwer Front Panel	Quantity of 2	A10  Darwer Side Panel	Quantity of 4	A11  Darwer Bottom Panel	Quantity of 2	A12  Darwer Back Panel	Quantity of 2
A13  Left Door	Quantity of 1	A14  Right Door	Quantity of 1	A15  X Panel	Quantity of 2	A16  Connect Bar	Quantity of 1

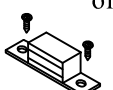Hardware List

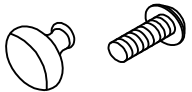B1  Camlock	Quantity of 26	B2  Wood Dowel	Quantity of 22	B3  Stopper with Screw	Quantity of 2	B4  Magnet with Screw	Quantity of 2	B5  Screw	Quantity of 18
B6  Screw	Quantity of 16	B7  Knob with Bolt	Quantity of 4	B8  Door Pin	Quantity of 4	B9  Anchor with Screw	Quantity of 1	B10  Anti-tip Kit	Quantity of 1


Step 1: Insert the wood dowels B2 to the side panels A2&A3 and top panel A1. Attach the cam-bolts B1 to the side panels A2&A3 and top panel A1.

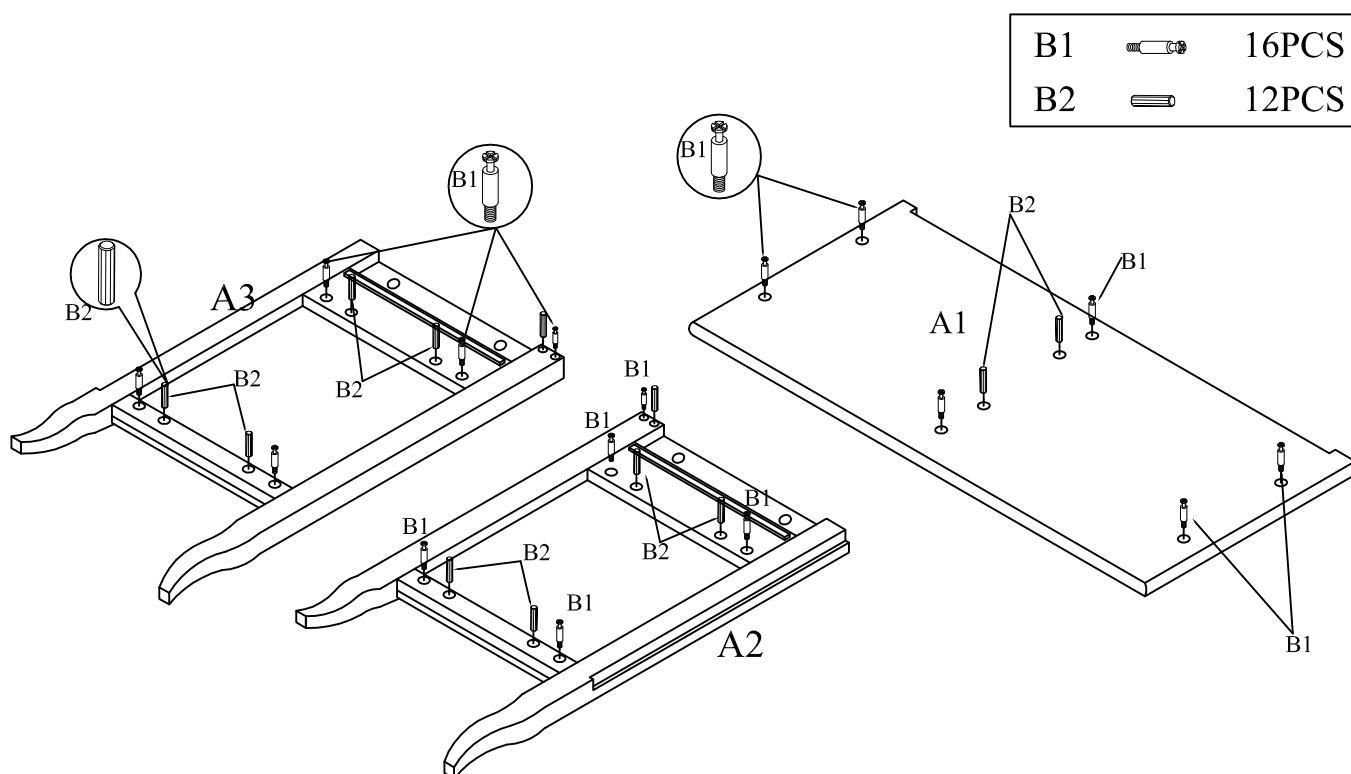


Step 2: Insert the wood dowels B2 and camlocks B1 into the top shelf A6, then attach the magnet B4 to the top shelf A6 with included screws. Refer Fig.1.

Step 3: Assemble the top divider A5 to the top shelf A6 using camlocks B1 and wood dowels B2, then attached stopper B3 to the top shelf A6 with included screws. Refer Fig.2.


Step 4: Assemble the low dividers A7 to another side of top shelf A6 using camlocks B1 and wood dowels B2 .Refer Fig.3.

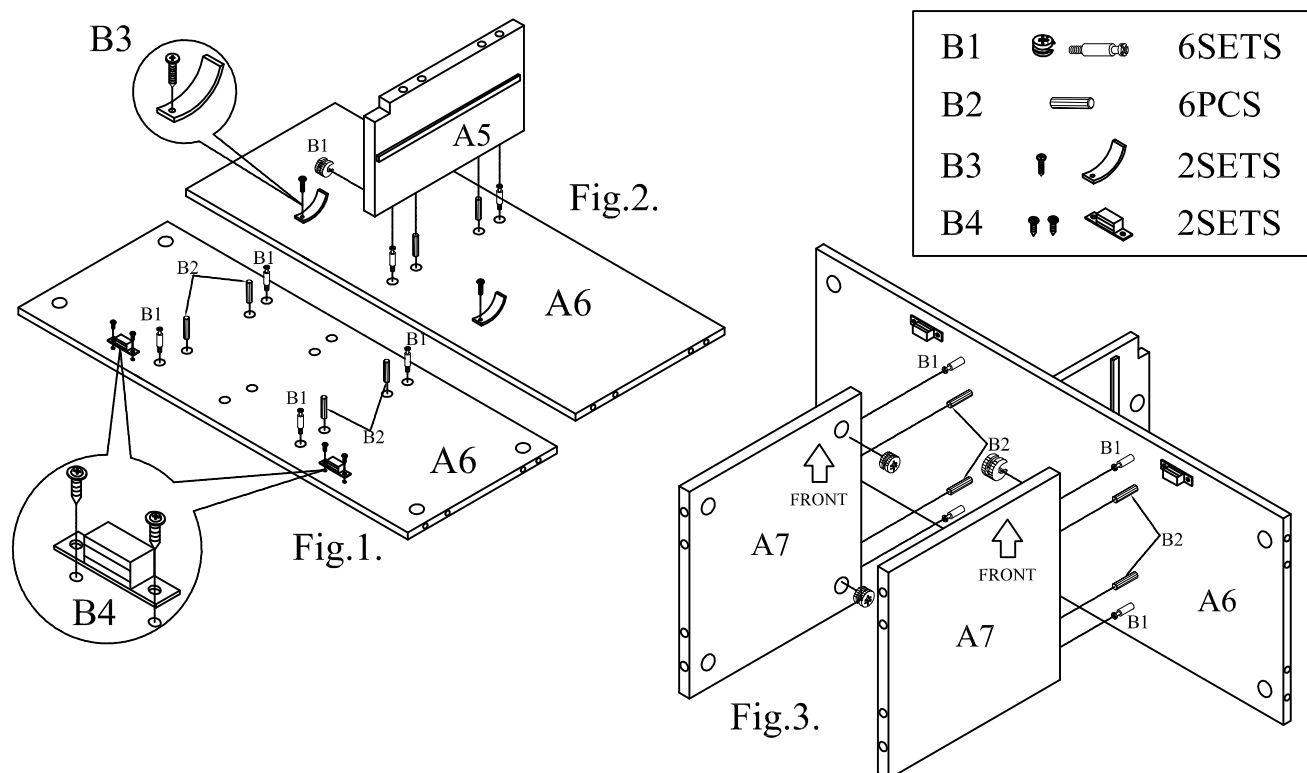

Step 5: Assemble the bottom panel A8 to the low dividers A7 using camlocks B1 and wood dowels B2.

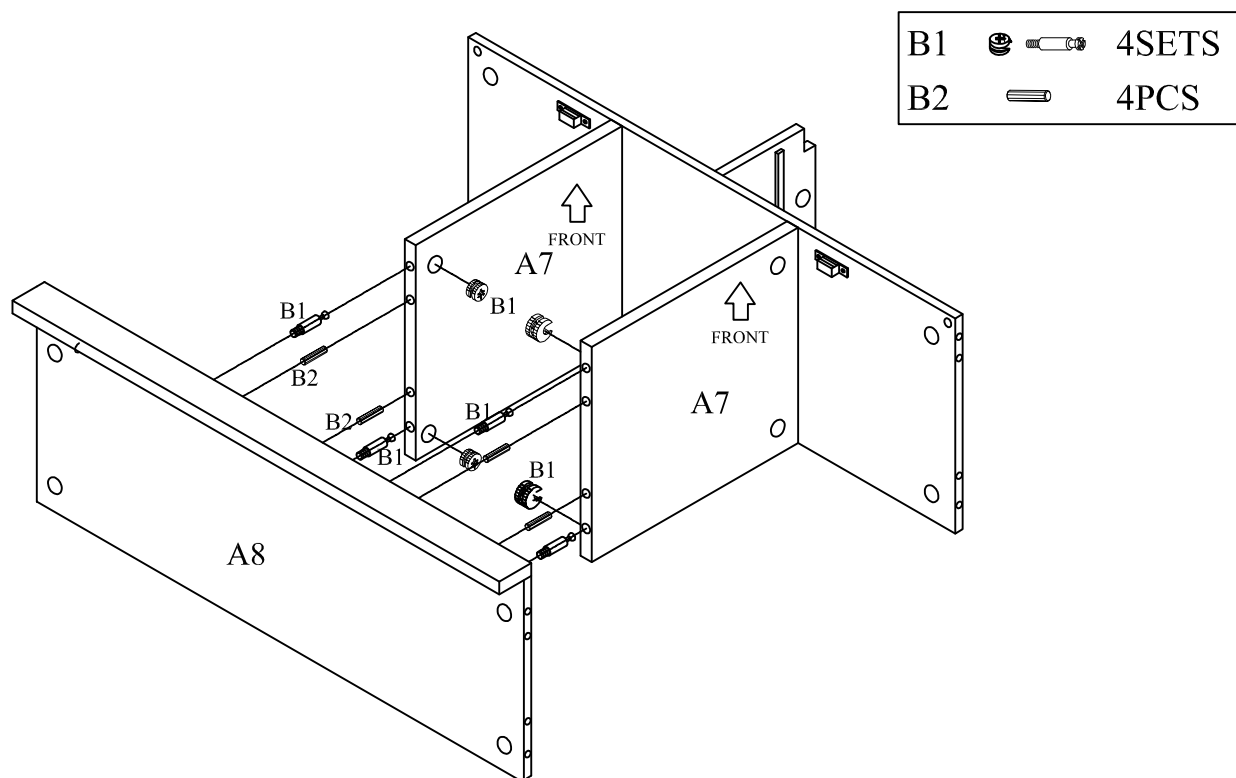


Step 6: Assemble the side panels A2&A3 to the connect bar A16, top shelf A6 and bottom panel A8 using cam-locks B1.

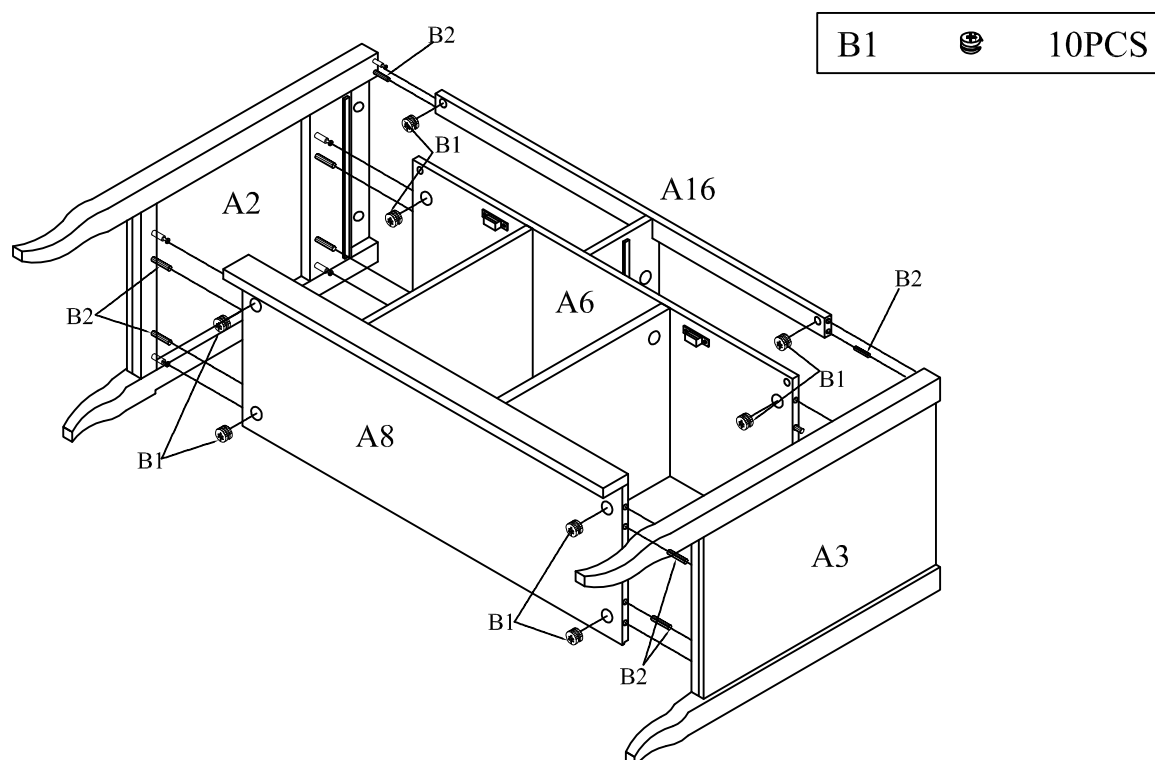


Step 7: Assemble the top panel A1 to the side panels A2&A3 and the top divider A5 using cam-locks B1.

B1  6PCS

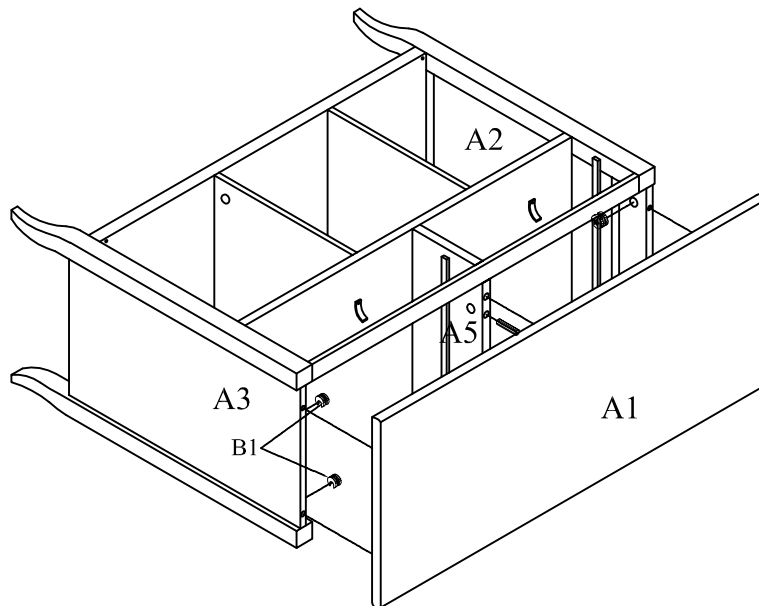

Step 8: Assemble the back panel A4 to the end of top panel A1, bottom panel A8 and side panels A2&A3 using screws B5.

B5  18pcs

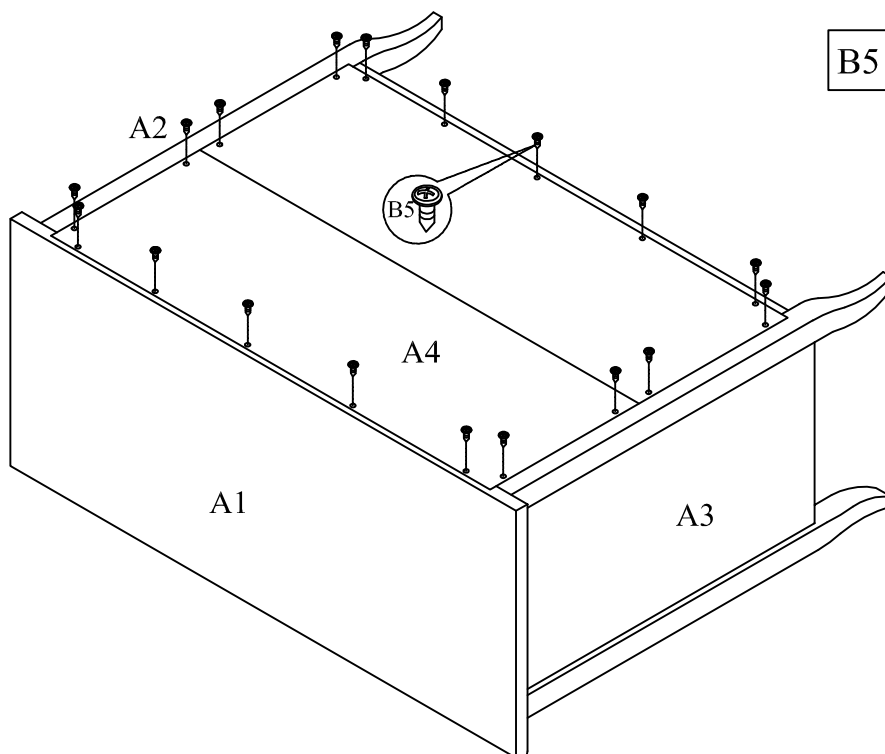


Step 9: Assemble the drawer side panels A10 to the drawer back panel A12 using screws B6.

Step 10: Insert the drawer bottom panel A11 into the grooves on drawer side panels A10 and drawer back panel A12.


Step 11: Assemble the drawer front panel A9 to the drawer side panels A10 using screws B6.

Step 12: Attach the knob B7 to the drawer front panel A9 with included bolt.

Step 13: Insert the drawers as shown above.

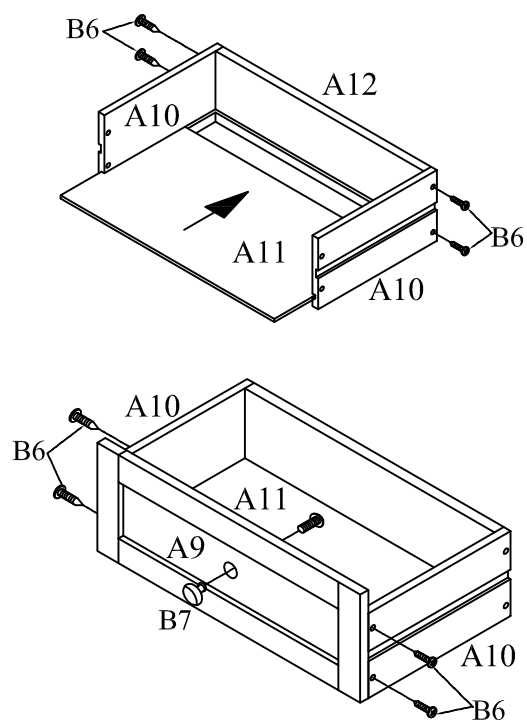


B6		16PCS
B7		2SETS

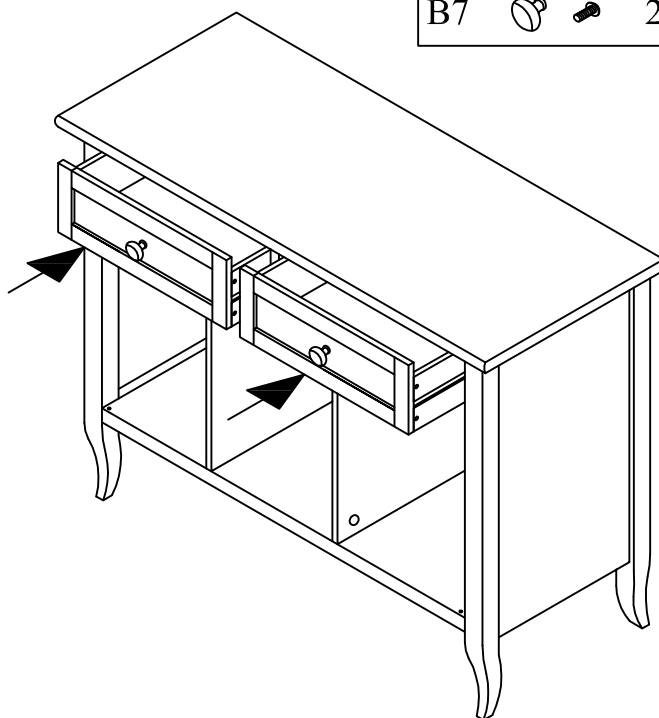


Step 14: Cross the "X" panels A15 and then put them into the center of this wine rack as shown above.

Step 15: Insert the door pins B8 into the holes on the doors A13&A14.


Step 16: Attach the knobs B7 to doors A13&A14 with included bolts.

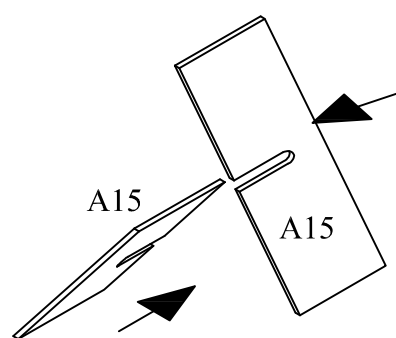

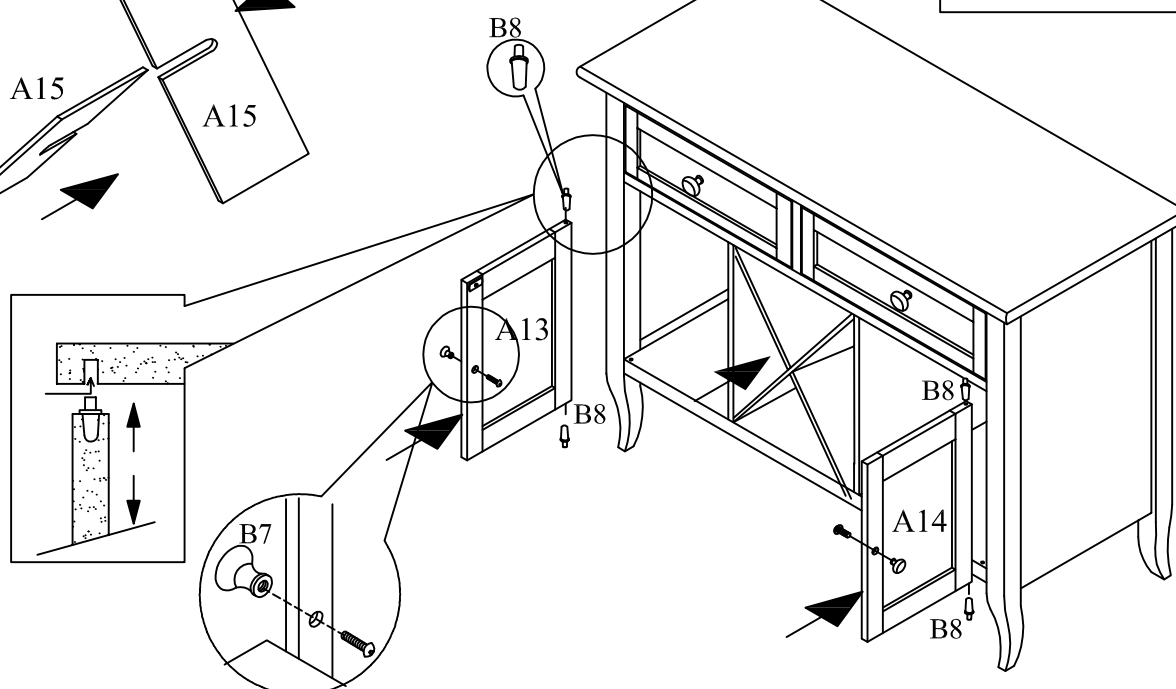

B8		4PCS
B7		2SETS









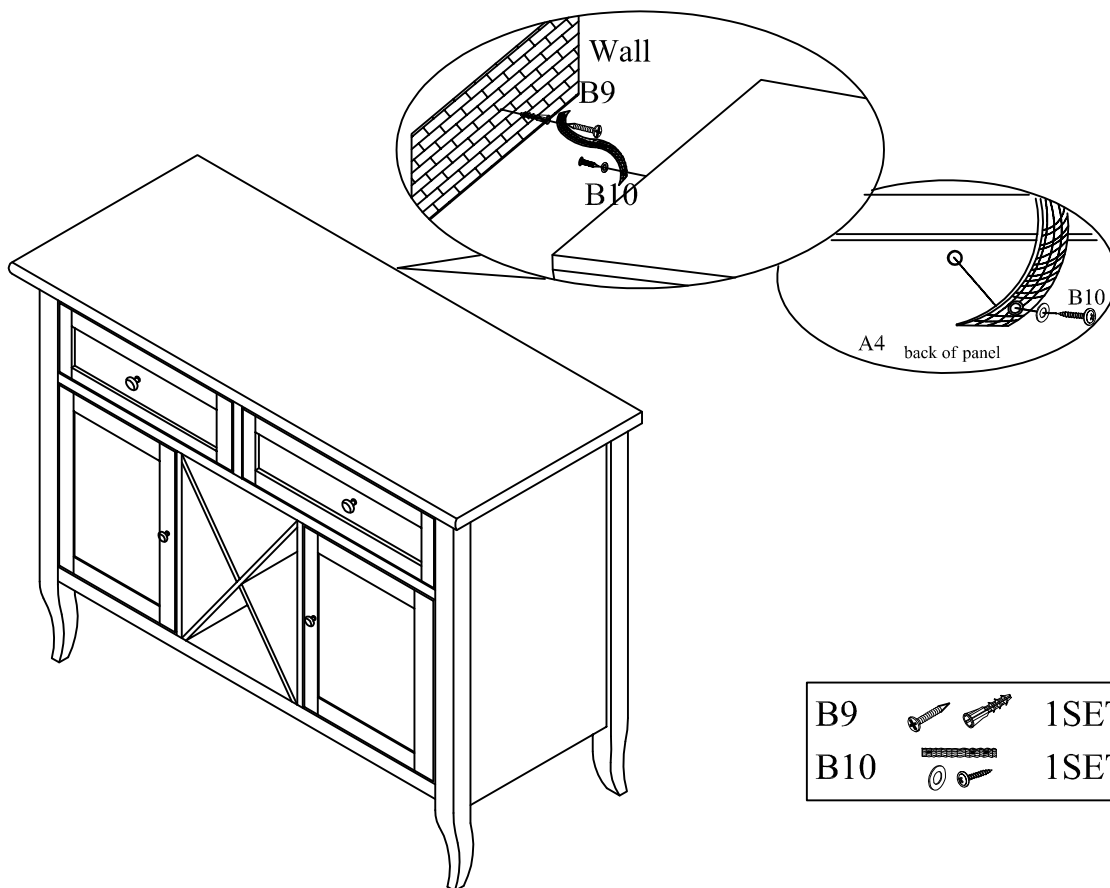


Step 8: For your safety, please attached this unit to the wall by Anchor with Screw B9 and Anti-tip Kit B10.



B9		1SETS
B10		1SETS

APPENDIX: Dimension of Hardwares in this AI.
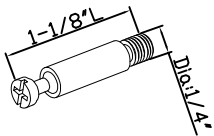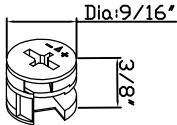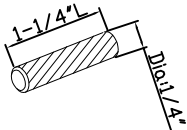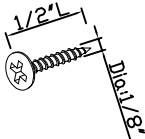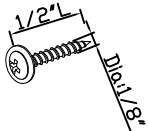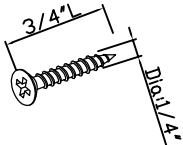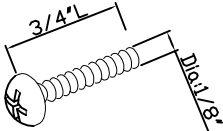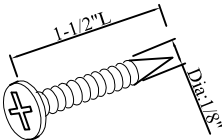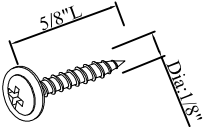
<div>B1</div> <div></div> <div>Cam-bolt</div>	<div></div> <div>Cam-Lock</div>	<div>B2</div> <div></div> <div>Wood Dowel</div>	<div>B3</div> <div></div> <div>Screw</div>
<div>B4 B5</div> <div></div> <div>Screw</div>		<div>B6</div> <div></div> <div>Screw</div>	<div>B7</div> <div></div> <div>Bolt</div>
<div>B9</div> <div></div> <div>Screw</div>	<div>B10</div> <div></div> <div>Screw</div>		