


Assembly Instruction Item No: BOC-347C

Description: 48IN. CREDENZA

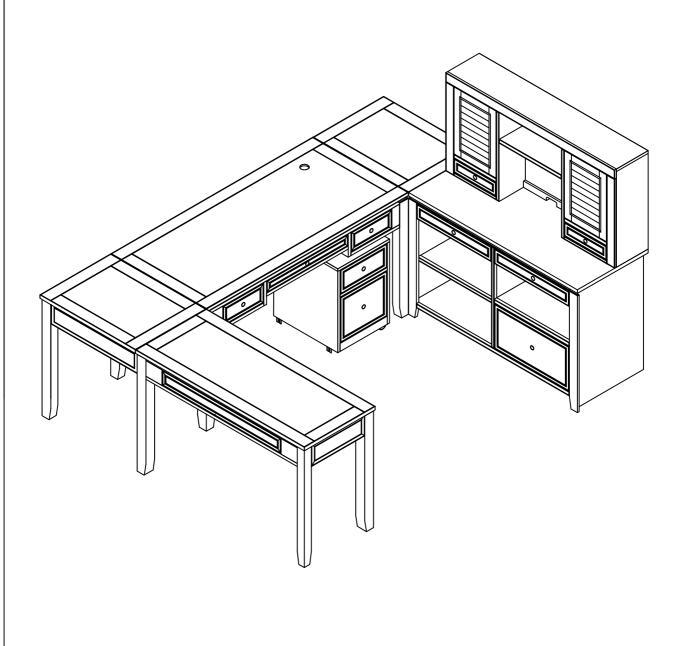




Item No: BOC-347C
Description: 48IN. CREDENZA


HARDWARE LIST

No	Description	Sketch	Q'TY
А	File rods 498mm x Ø7		2PCS



HARDWARE

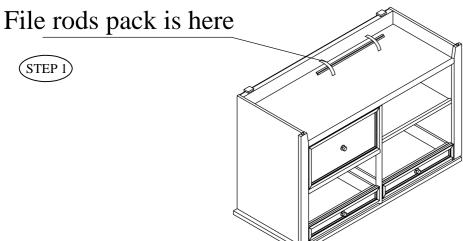

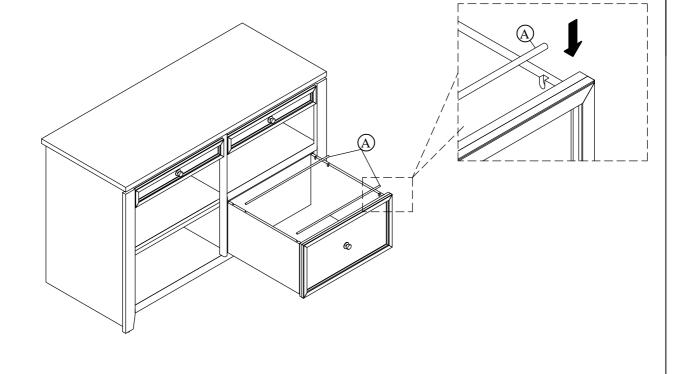




Item No: BOC-357D Description: DESK

Rev 2 :2021-11-05

HARDWARE LIST


Description No Sketch Q'TY 1PC Allen wrench 5mm Bolt Ø 5/16"x2-1/2" 8PCS Lock washer Ø5/16"x12mm С 8PCS D 0 Flat washer Ø5/16"x19mm 8PCS Ε Grommet 1PC

PARTS LIST

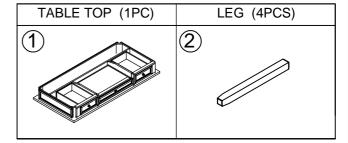





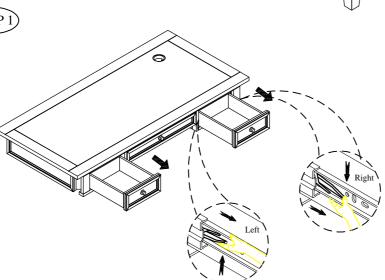


- To remove the drawer:
- A. Pull the drawer fully open so the black lever is visible in the inside channel of the guides.
- B. Push 'down' on the right lever and 'up' on the left lever. While holding levers in place, pull drawer forward until slides release. If the slides will not release, push both levers in opposite directions.

Page 2 of 3



Item No: BOC-357D Description: DESK

Rev 2 :2021-11-05

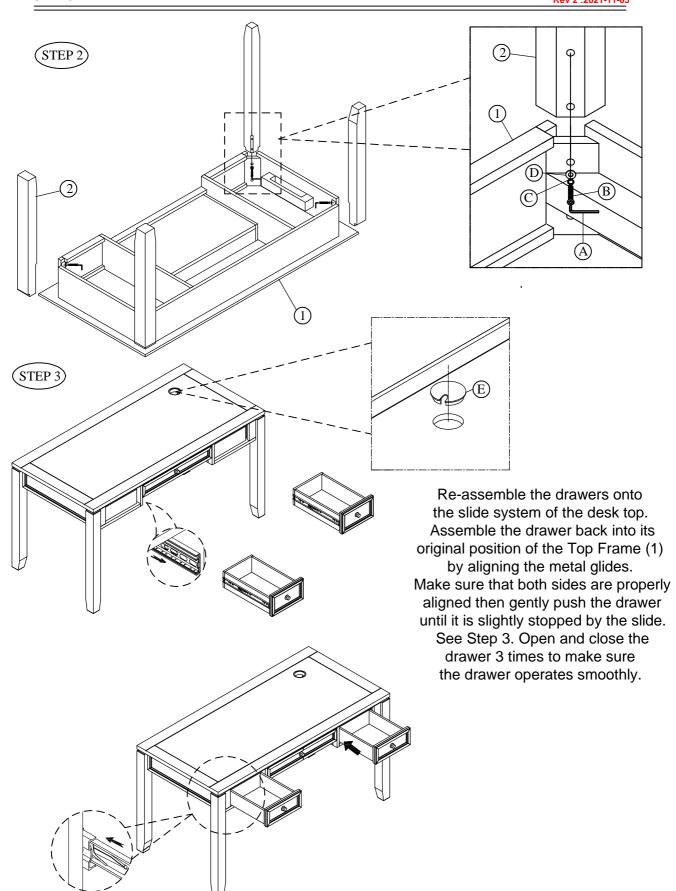




Item No: BOC-370 Description: CORNER TABLE


Rev 2 :2021-11-05

HARDWARE LIST


No	Description	Sketch	Q'TY
Α	Allen wrench 5mm		1PC
В	Bolt Ø 5/16"x2"	0	2PCS
С	Lock washer Ø5/16"x12mm	U	2PCS
D	Flat washer Ø5/16"x19mm	0	2PCS
Е	Allen wrench 4mm		1PC
F	Bolt Ø 1/4"x1-1/2"	0	5PCS
G	Bolt Ø 1/4"x3/4"	0	8PCS
Н	Lock washer Ø1/4"x12mm	Ú	13PCS
I	Flat washer Ø1/4"x19mm	0	13PCS
J	Long metal bracket	/	1PC
K	Short metal bracket		1PC

PARTS LIST

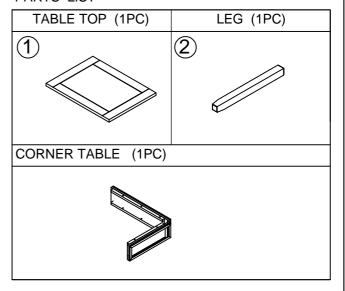

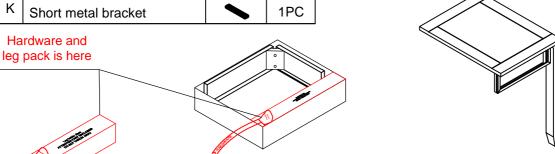


To set up a left corner table, please match the "L" label on the apron to the "L" label found underneath the corner table's top. to set up a right corner table, please match the "R" label on the apron to the "R" label found underneath the corner table's top.

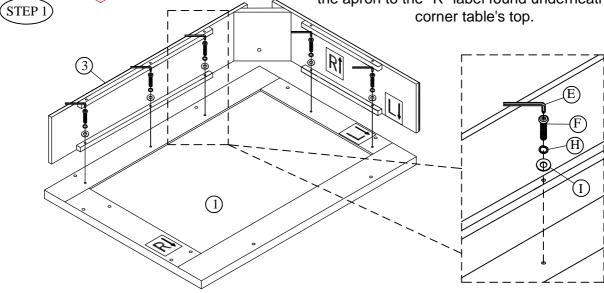



Item No: BOC-370
Description: CORNER TABLE

Rev 2 :2021-11-05

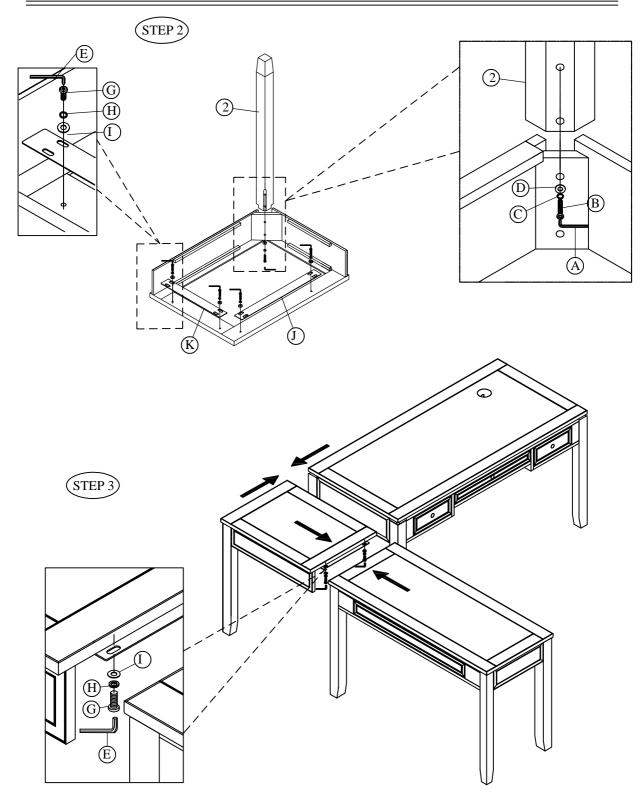

Configuration for BOC-370, BOC-357D & BOC-347D assembing together.