








# ASSEMBLY INSTRUCTION

Item#: 5960-50002-MWD La Coste Wine Cellaret

**\*\* Please make sure you have all parts indicated below prior to assembly.  
This wine cellaret is heavy and can best be assembled with the help of two people.**

NO.	HARDWARE LIST		Q'TY
A		ALLEN WRENCH	1
B		BOLT	8
C		LOCK WASHER	8
D		FLAT WASHER	8
E		ADJUSTABLE LEVELER	4
F		ALLEN WRENCH	1
G		THREADED ROD	4

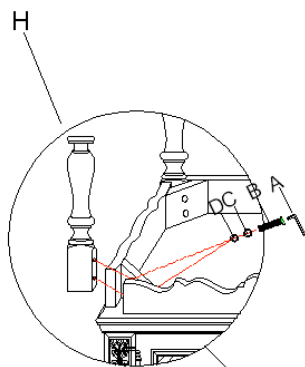
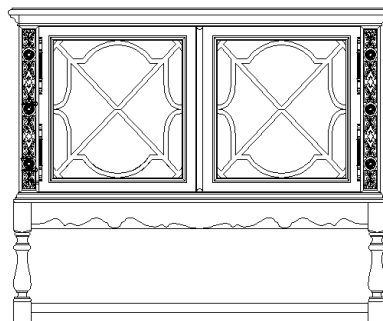


Diagram 1



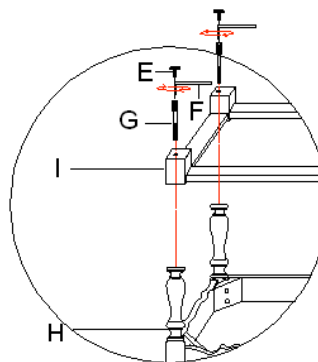


Diagram 2

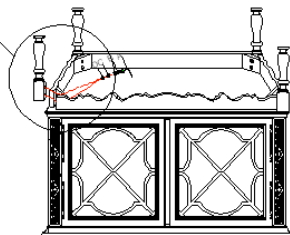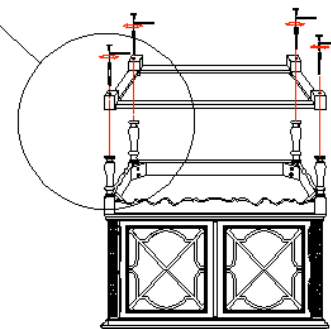

## Assembly Steps:

1. Put wine cellaret top upside down on a soft surface to prevent it from being scratched.
2. Screw center posts (H) into cellaret top by using flat washers (D), lock washers (C) and bolts (B), tighten with allen wrench (A) in clockwise direction (See Diagram 1).
3. Well place base frame (I) onto center posts (H) to make sure all pre-drilled holes are in alignment. Insert threaded rods (G) into posts through base frame (I), secure with allen wrench (F) in clockwise direction (See Diagram 2).
4. Screw adjustable levelers (E) into base frame (I) by hand.
5. Turn wine cellaret upright.

**Cleaning Instruction:** Clean finished parts with a damp cloth using a mild dishwashing liquid and water solution. Polish the finish with soft cloth and an industry recognized furniture polish.