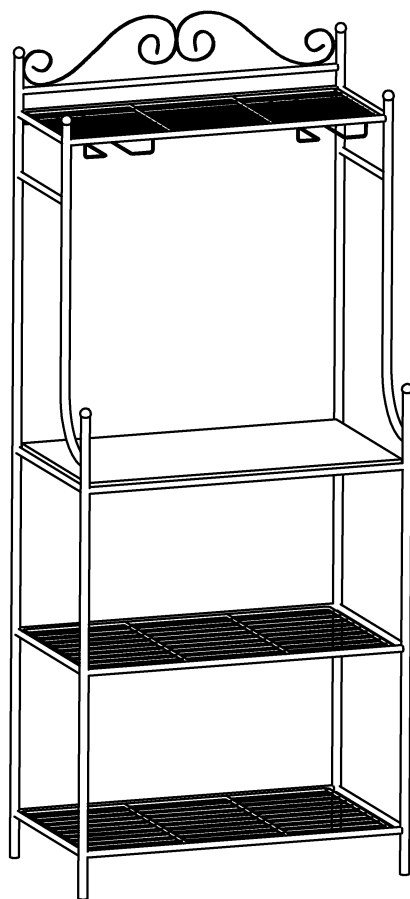


ASSEMBLY INSTRUCTIONS









Kitchen Rack



NOTE TO CUSTOMERS:






- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Never allow any liquid to remain on your furniture as absorption can cause the wood to warp or the finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

Part List

A1  Lower Side Frame	Quantity of 2	A2  Upper Left Side Frame	Quantity of 1	A3  Upper Right Side Frame	Quantity of 1	A4  Lower Net Rack	Quantity of 2
A5  Middle Frame	Quantity of 1	A6  Upper Back Apron	Quantity of 1	A7  Upper Net Rack	Quantity of 1	A8  Middle Panel	Quantity of 1


Hardware List

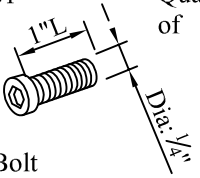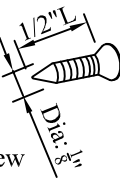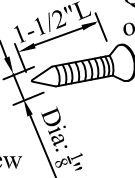H 1pc

B1  Bolt	Quantity of 18	B2  Screw	Quantity of 4	B3  Screw	Quantity of 2	B4  Anchor	Quantity of 2	 Allen Wrench
--	----------------	---	---------------	---	---------------	---	---------------	---


STEP 1

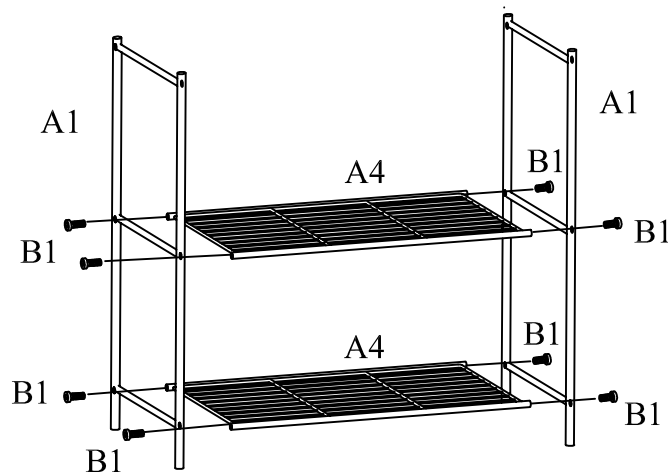B1  8pcs




Assemble Lower Side Frames A1 to Lower Net Racks A4 using Bolts B1.
Note: Please do not tighten Bolts B1 until Step 6.

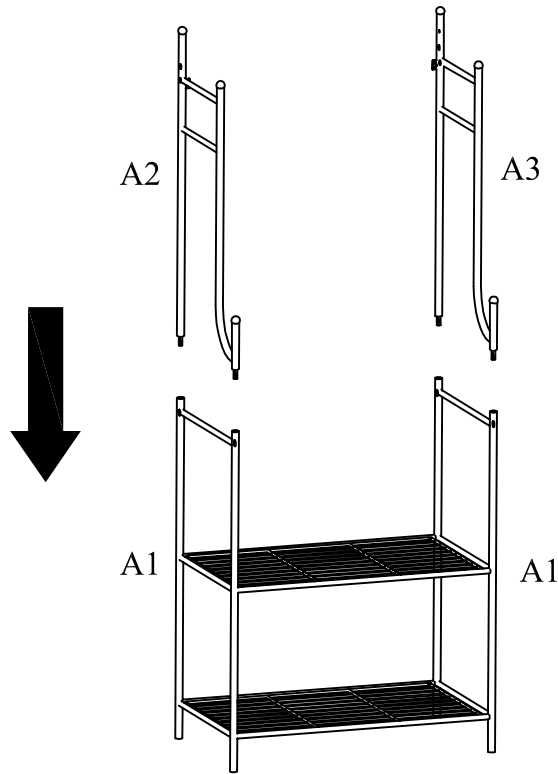STEP 2




Insert Upper Side Frames A2&A3 to Lower Side Frames A1 as shown above.

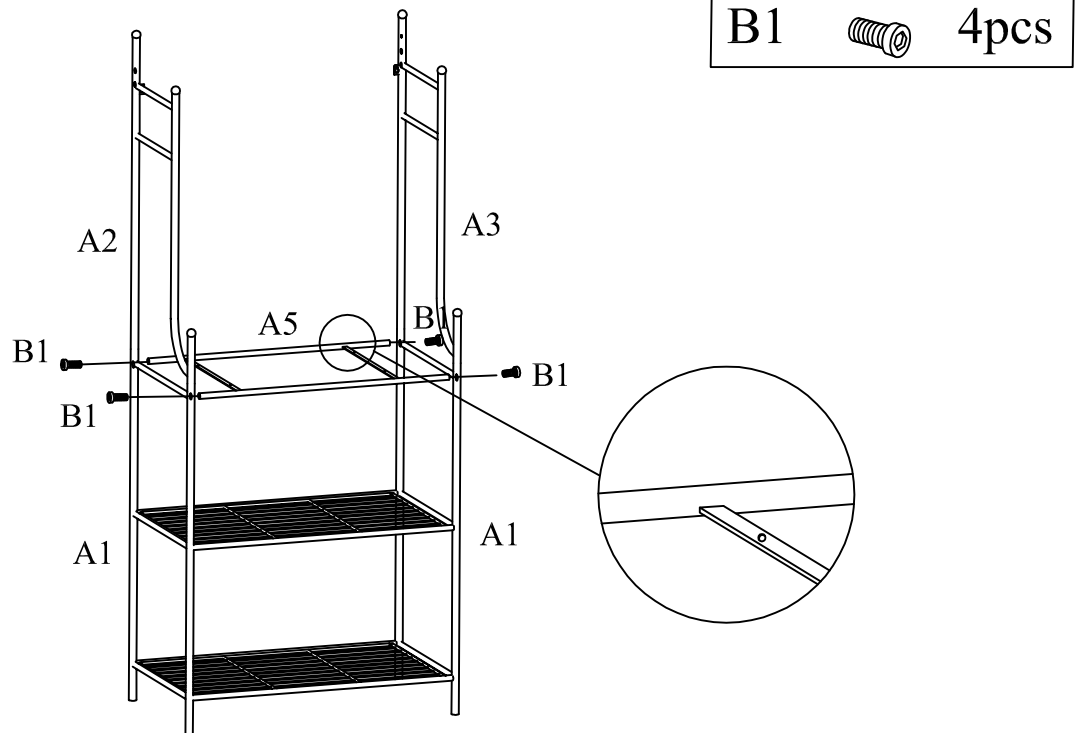STEP 3



Assemble Middle Frame A5 to Side Frames A1&A2&A3 using Bolts B1.
Note: Please do not tighten Bolts B1 until Step 6.

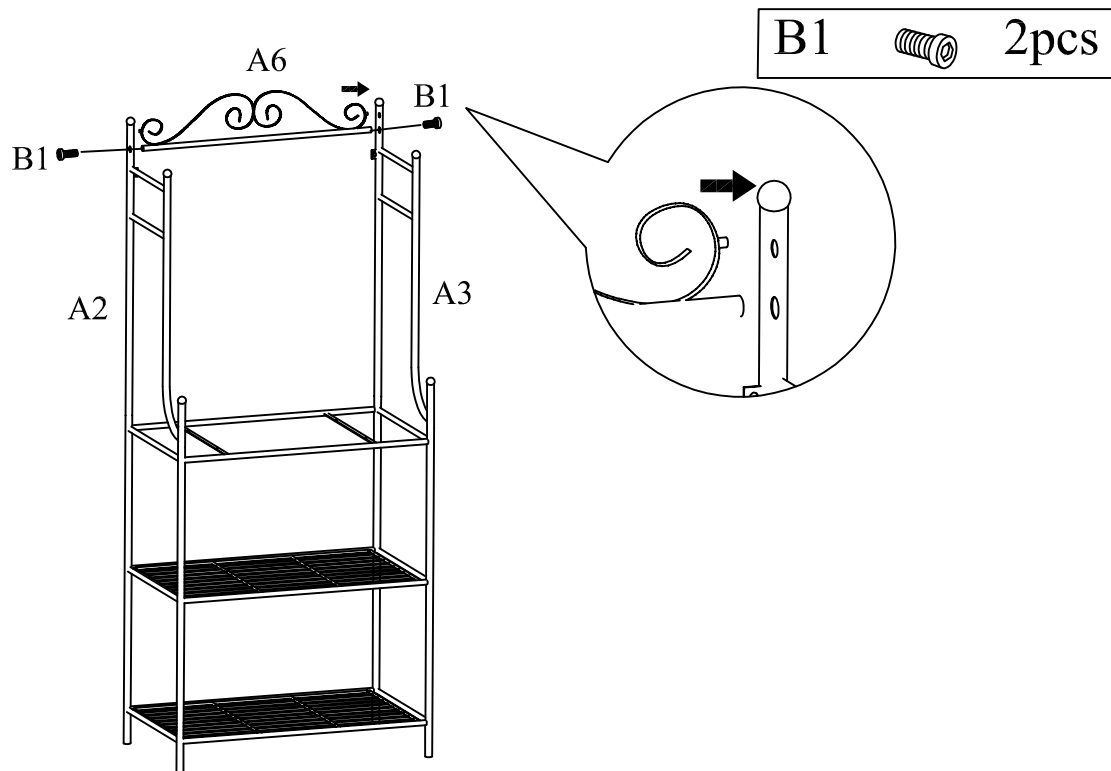
STEP 4



Assemble Upper Back Apron A6 to Upper Side Frames A2&A3 using Bolts B1 as shown above.

Note: Please do not tighten Bolts B1 until Step 6.

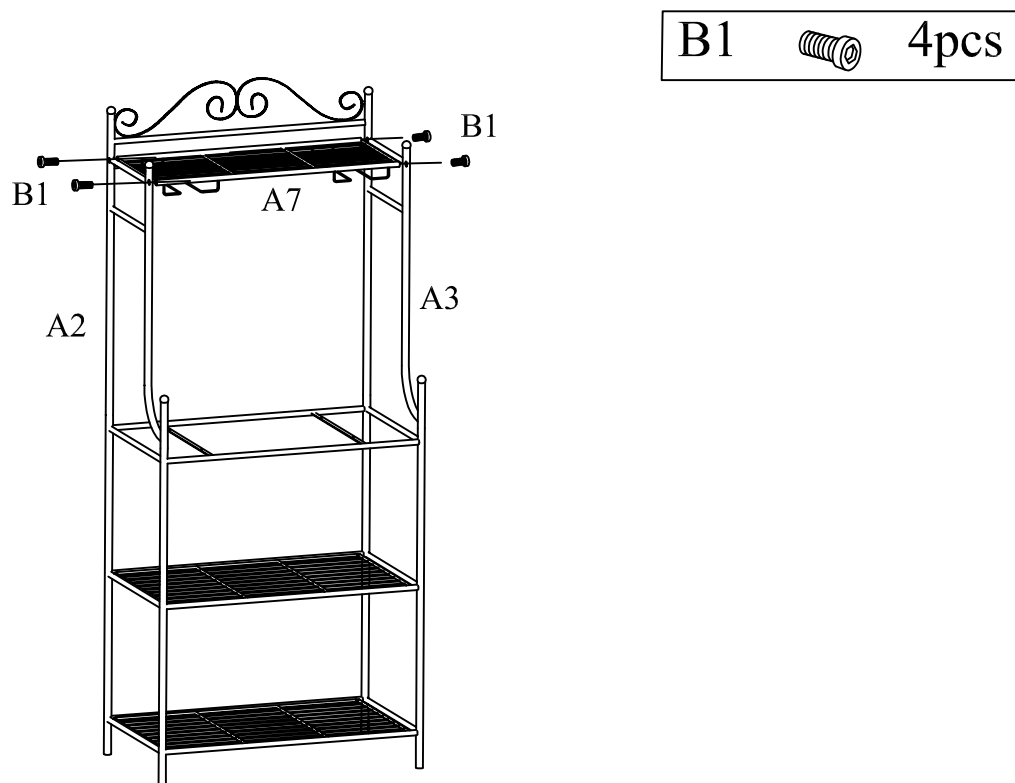STEP 5




Assemble Upper Net Rack A7 to Upper Side Frames A2&A3 using Bolts B1.

Note: Please do not tighten Bolts B1 until Step 6.

STEP 6

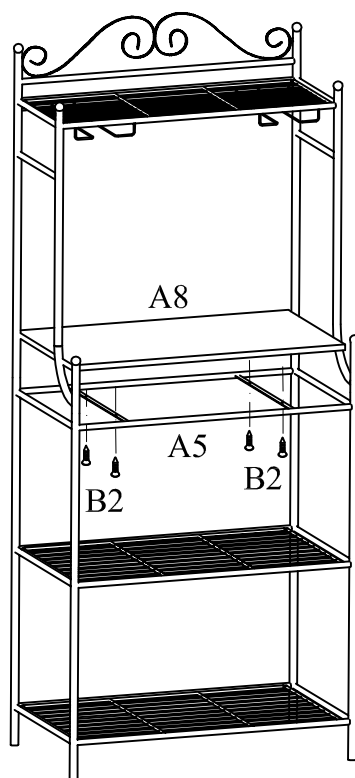
B2  4pcs




Assemble Middle Panel A8 to Middle Frame A5 using Screws B2.
Note: Please tighten all bolts B1 at this point.

STEP 7

B3  2pcs

B4  2pcs

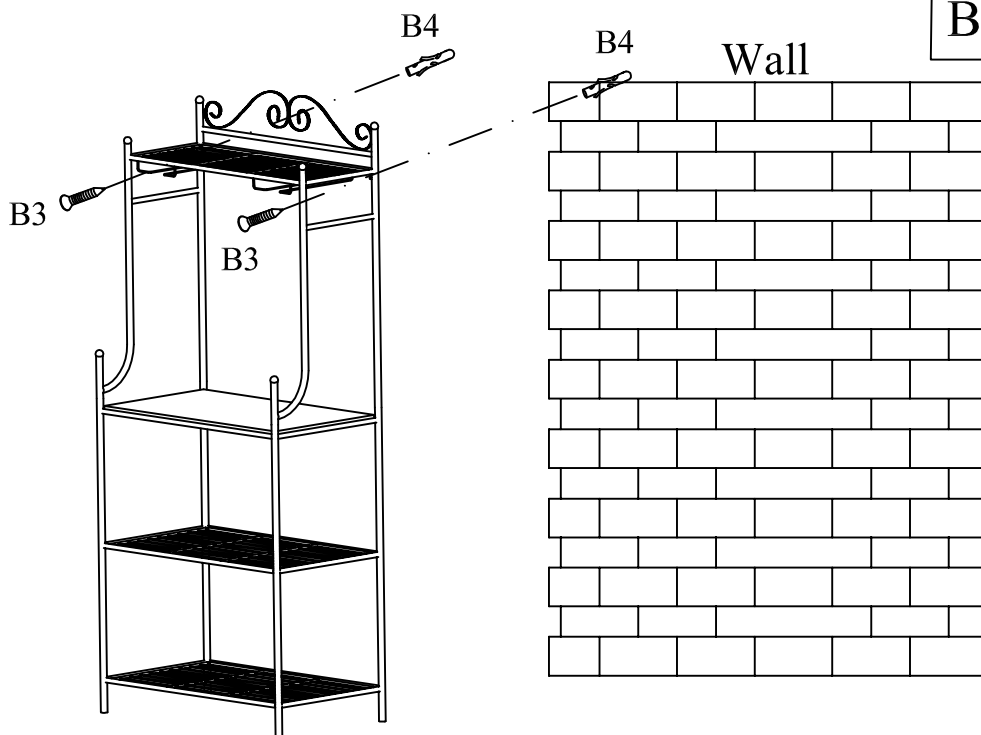

For your safety, please attach this unit to the wall by Screws B3 and Anchors B4.