



IF YOU ARE MISSING A PACKAGE, PLEASE CONTACT US.
1-201-313-0100

COMPONENTS

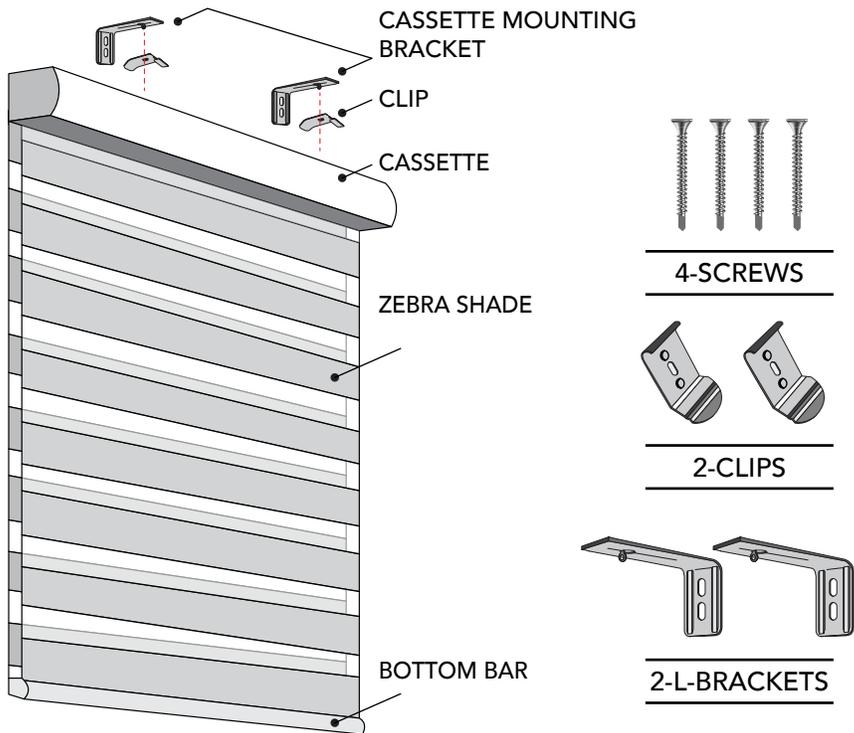


INMOUNT

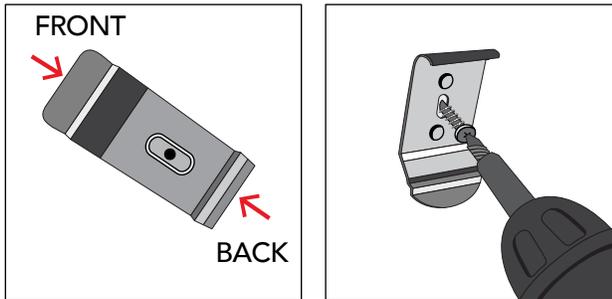

MARK BRACKET LOCATION AND DRILL HOLES

OUTMOUNT

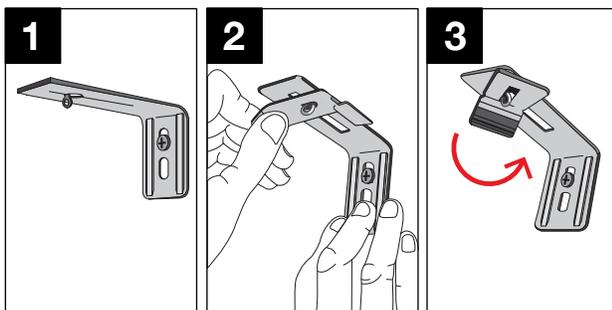

- ① PLACE L-BRACKET
- ② ATTACH BRACKET TO L-BRACKET
- ③ ALIGN THE CLIPS TO THE L-BRACKET


TOOLS REQUIRED




PENCIL




SCREW DRIVER



TAPE MEASURE




DRILL / BIT




STEP STOOL

INSTALL CASSETTE

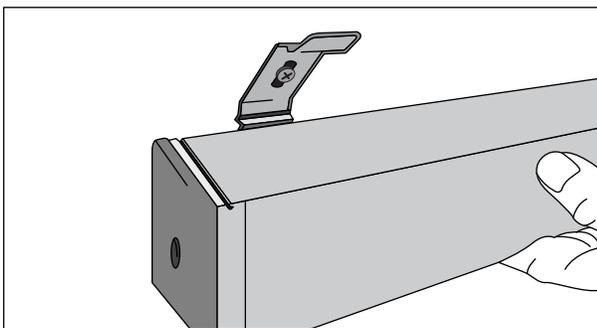


- 1 PLACE TOP GROOVE OF CASSETTE INTO BRACKET CLIP

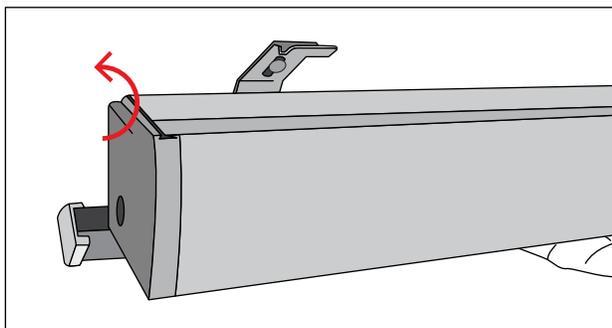

- 2 PUSH AND SNAP INTO PLACE UNTIL YOU HEAR "CLICK" SOUND


FOR CONCRETE WALL

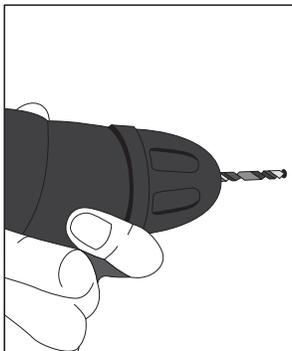

- 1 DRILL HOLES



- 2 PLACE AN ANCHOR

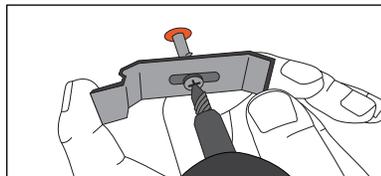

INMOUNT



OUTMOUNT

- 3 INMOUNT ONLY NEEDS 2-CLIPS
OUTMOUNT NEEDS 2-L-BRACKETS+2-CLIPS