


Assembly Instruction

Item No.:500210-48

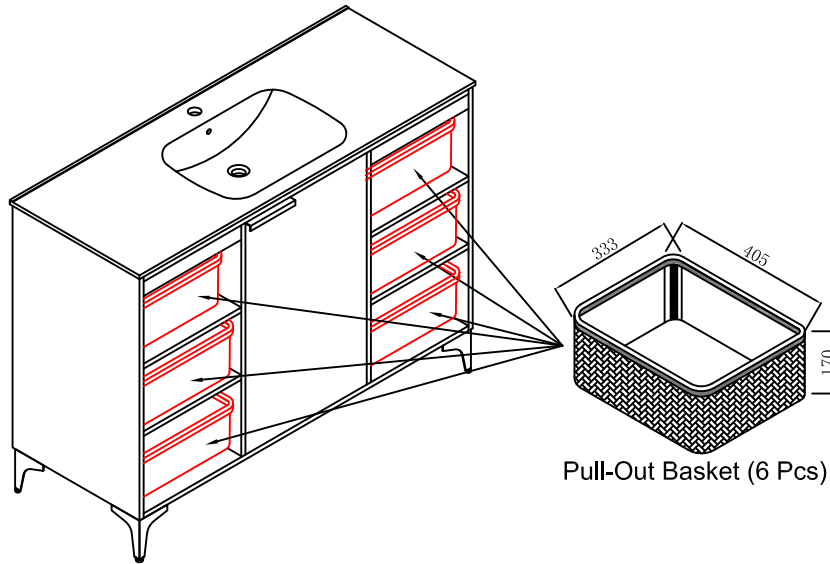


Hardware


NO.	Draw	QTY
A	Screws Ø4x14mm	32
B	Two-in-one connector	58
C	Two-in-one connector	58
D	Wood plug	16
E	Bracket (53x70x44mm)	2
F	Plastic anchor(Ø10mm)	2
G	Screws for fix on the wall	2
H	Door stopper	1
I	Bracket (19x19x35mm)	2

NO.	Draw	QTY
J	Hinges (Internal hiding)	2
K	Handle (Screws Ø4x14mm)	1
L	Screws Ø4x25mm	4
M	Movable laminate support	4
N	Metal Feet	4
O	Screws M4x14mm	16
P	Anti-collision gasket	2
Q	Screwdriver	1


Components

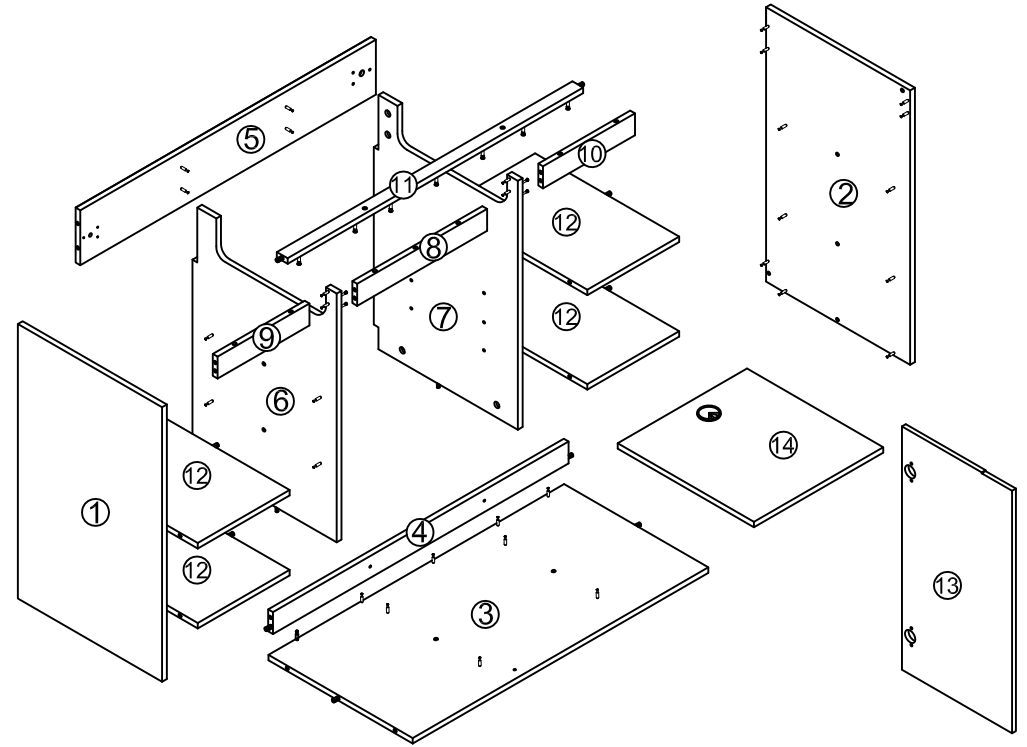

Recommended tools You Will Need-Outils Requis

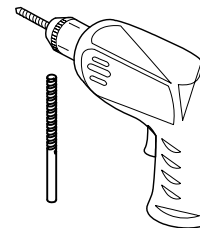

Power drill

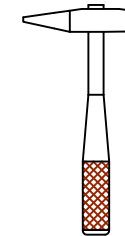

Hammer



Silicone










Pencil





Screwdriver


Step 1

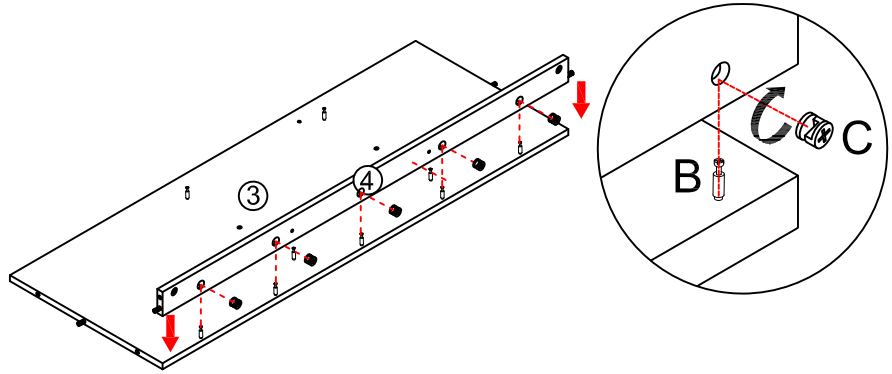

-  x5
-  B
-  x5
-  C
-  x1
-  Q

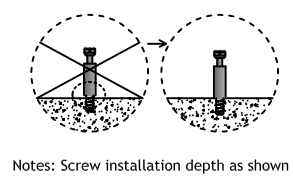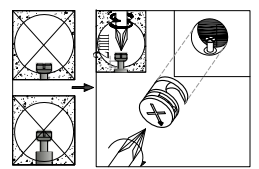


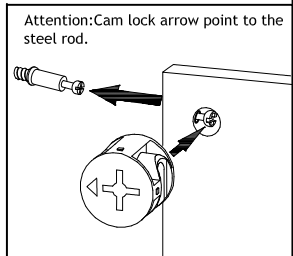





Notes: Screw installation depth as shown




Attention: Cam lock arrow point to the steel rod.

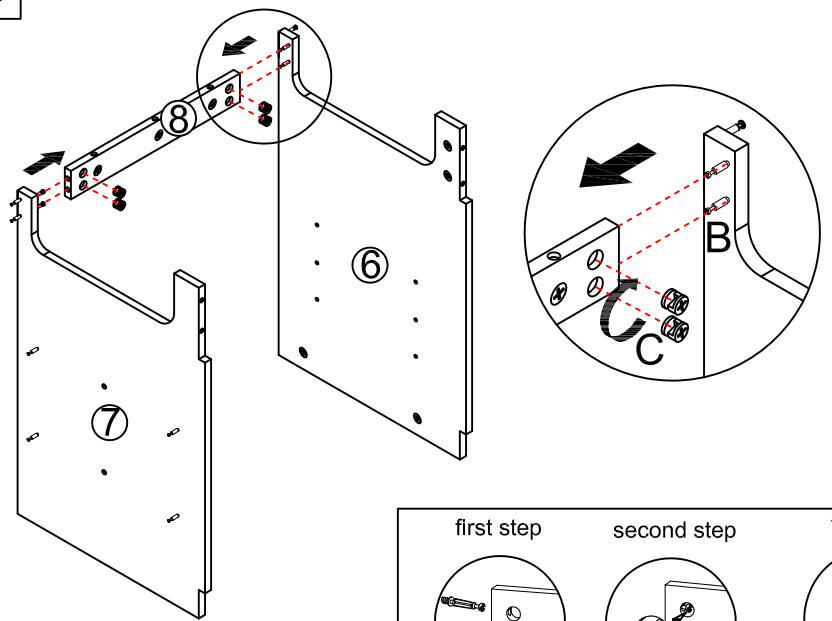Step 2



-  x4
-  B
-  x4
-  C
-  x1
-  Q

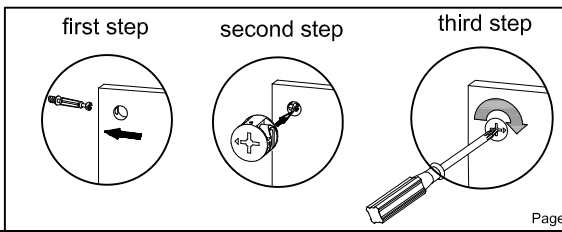












first step

second step

third step

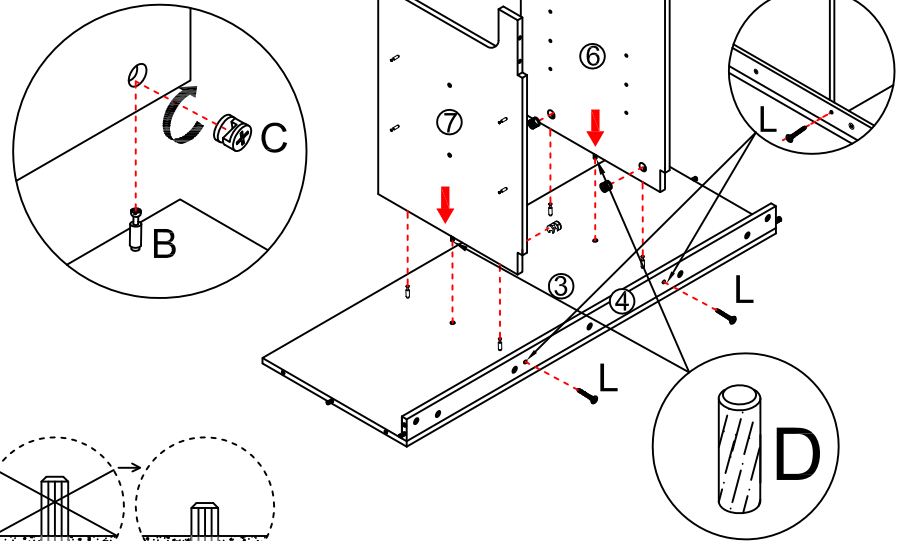
Step 3









-  x4
-  B
-  x4
-  C
-  x2
-  D
-  x2
-  L
-  x1
-  Q


Note: The D parts are used for these two holes.

Step 4

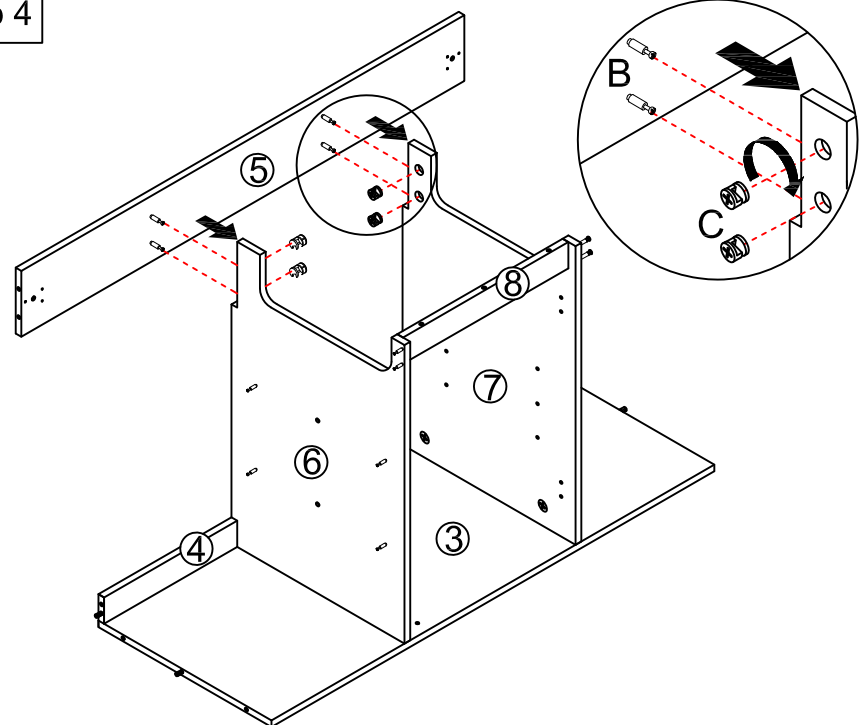


-  x4
-  B
-  x4
-  C
-  x1
-  Q

Step 5

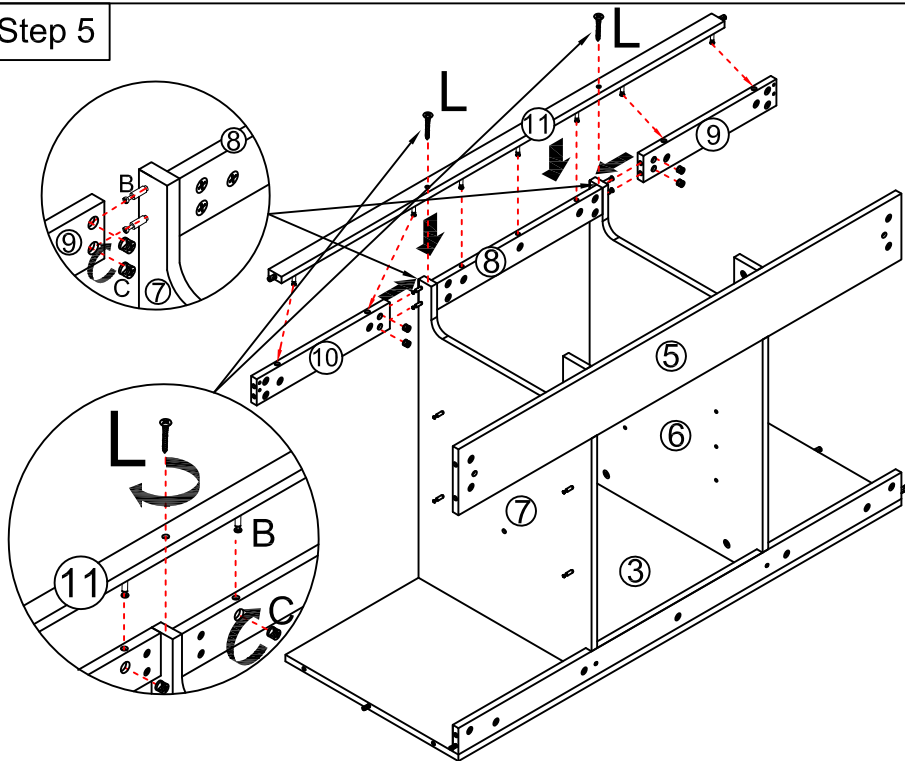

	x11
	x11
	x2
	x1

Step 7

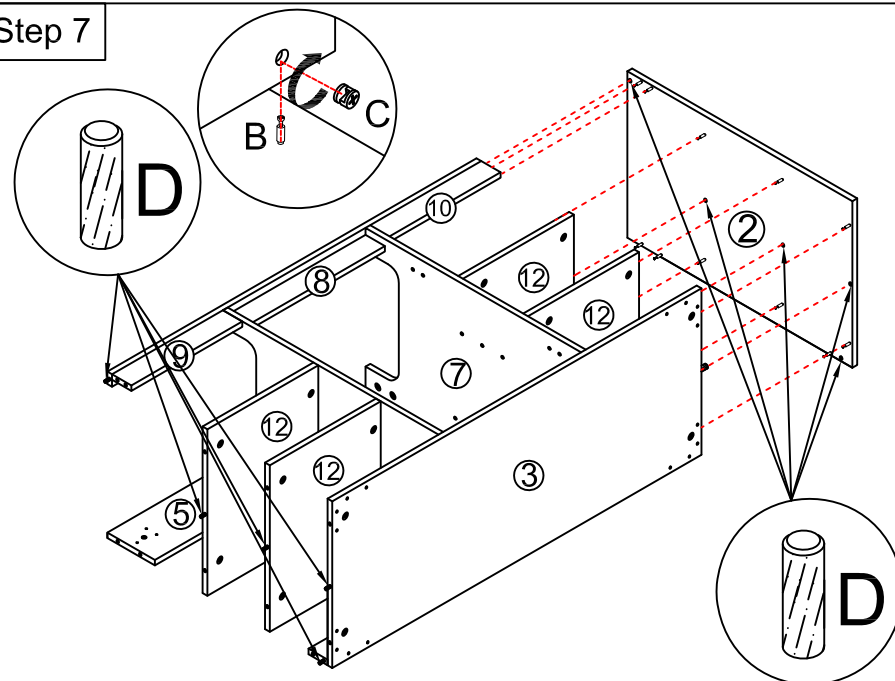


	x11
	x11
	x5
	x1

Note: The D parts are used for these five holes.


Step 6

Note: The D parts are used for these four holes.

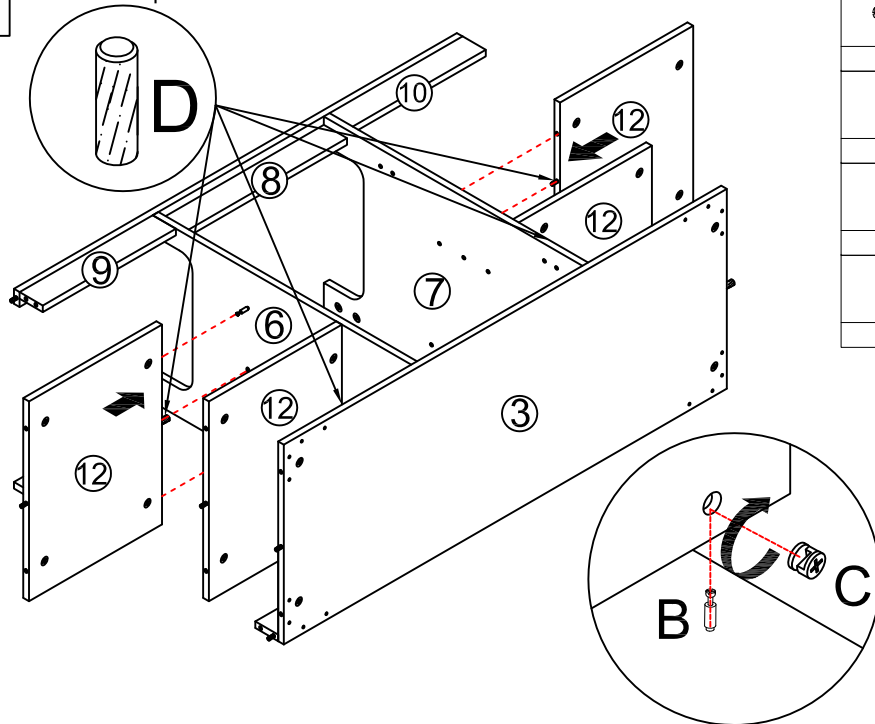

	x8
	x8
	x4
	x1


Step 8

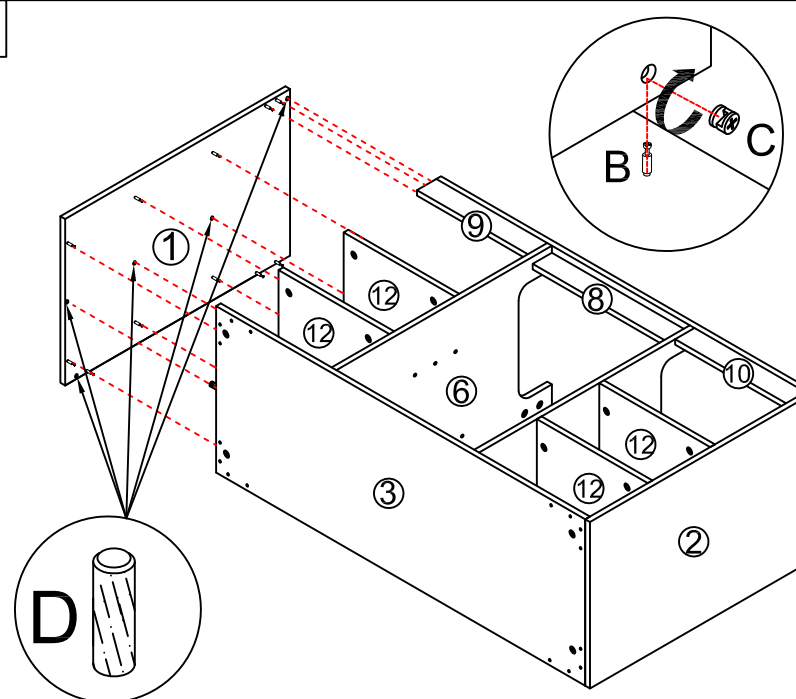

	x11
	x11
	x5
	x1

Note: The D parts are used for these five holes.

Step 9

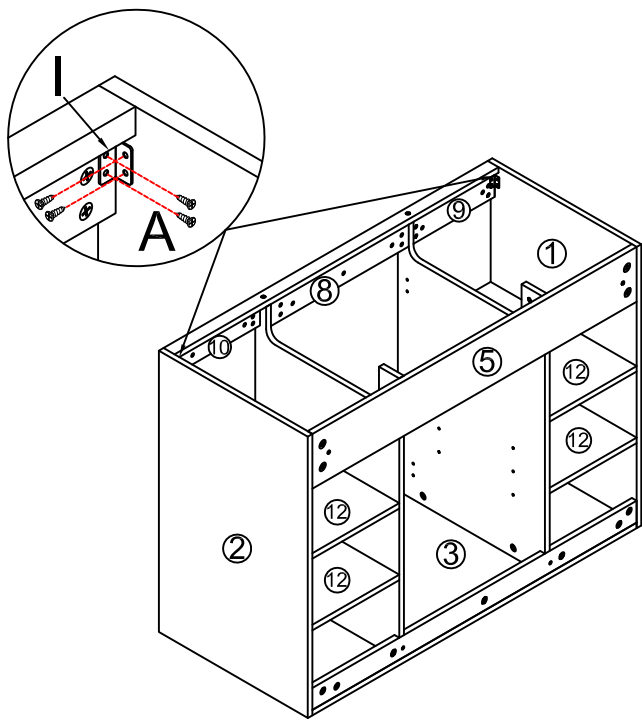

x2

I

(Ø4 x 14mm)




x8

A



Tool

Step 11

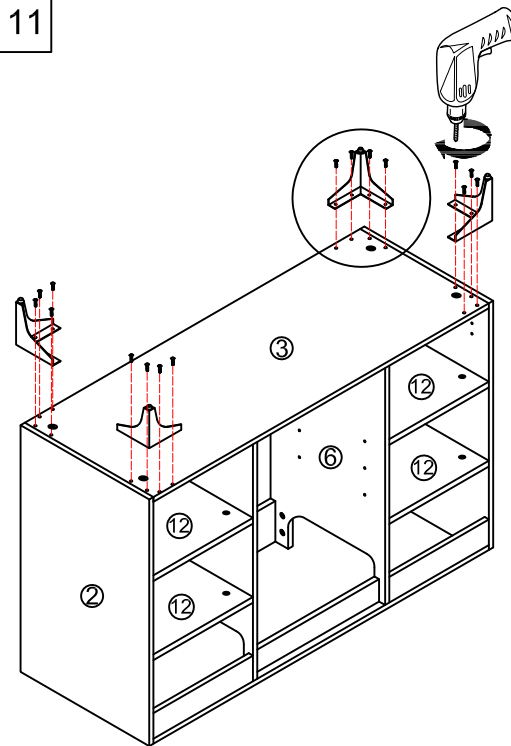

x4

N

(M4 x 14mm)




x16


O



Tool

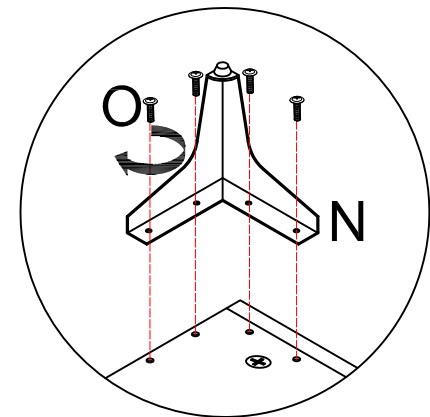

Step 10

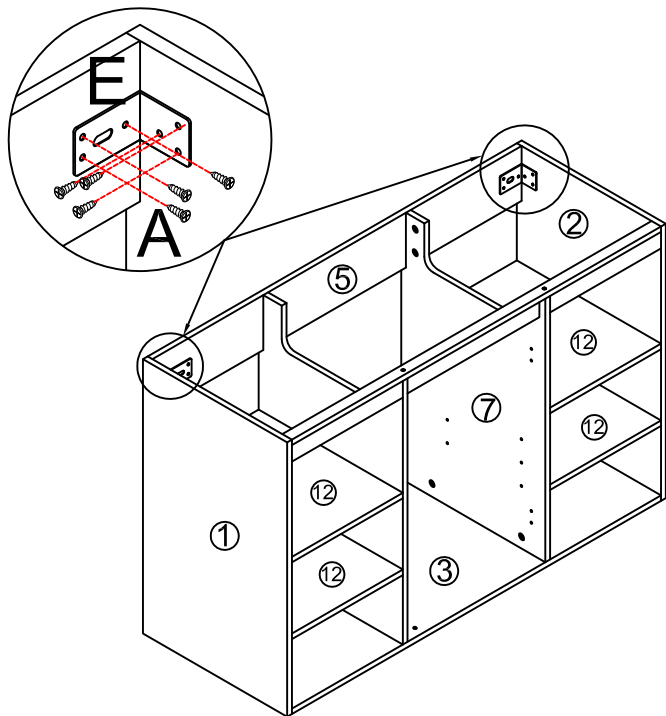

x2

E

(Ø4 x 14mm)




x12

A




Tool

Step 12

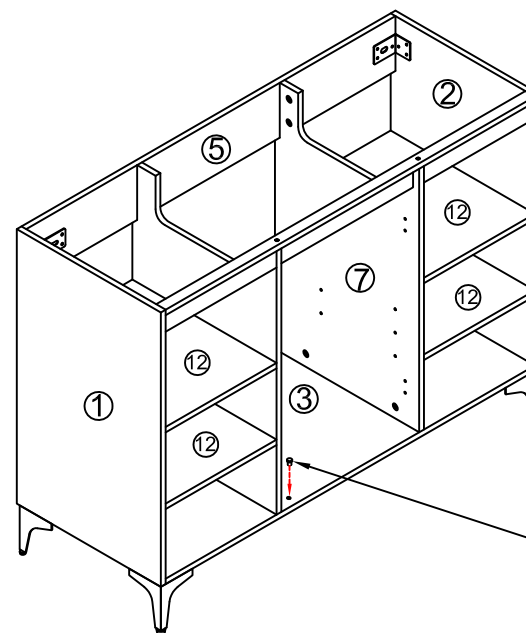


x1



H

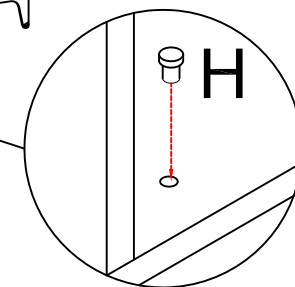


Step 13

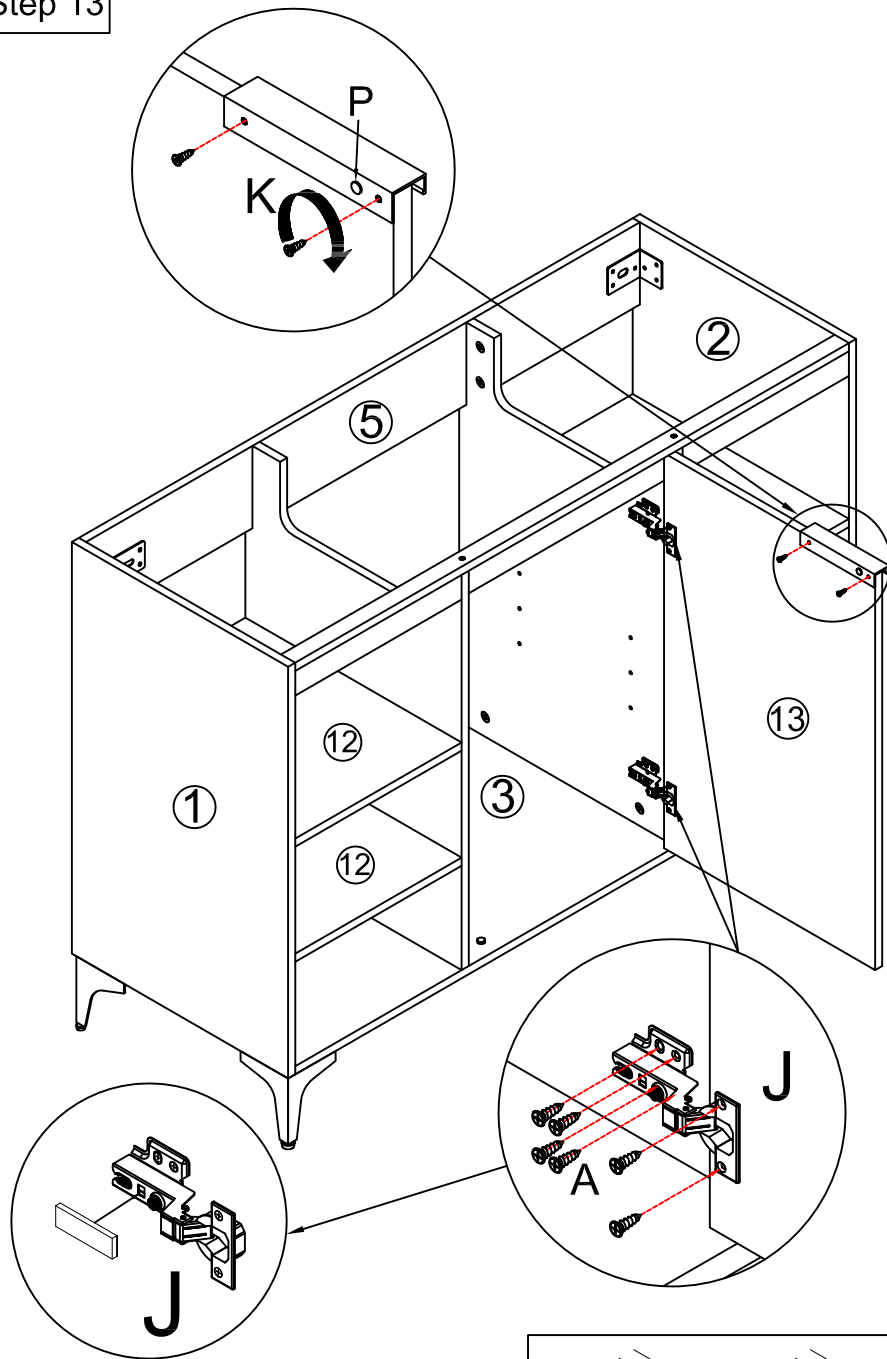



You can adjust the doors by tightening or loosening the screws on the hinge. →

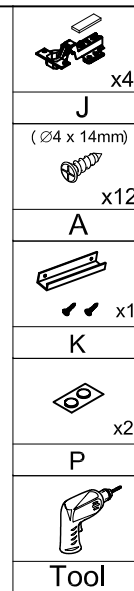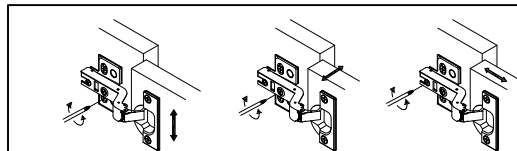



Step 14

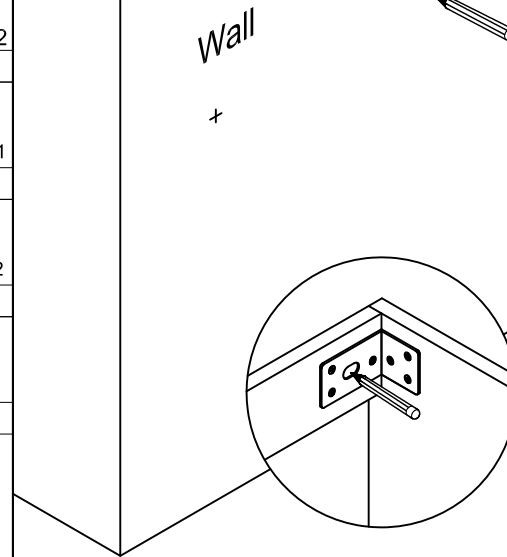



Step 15

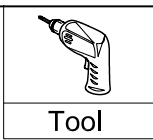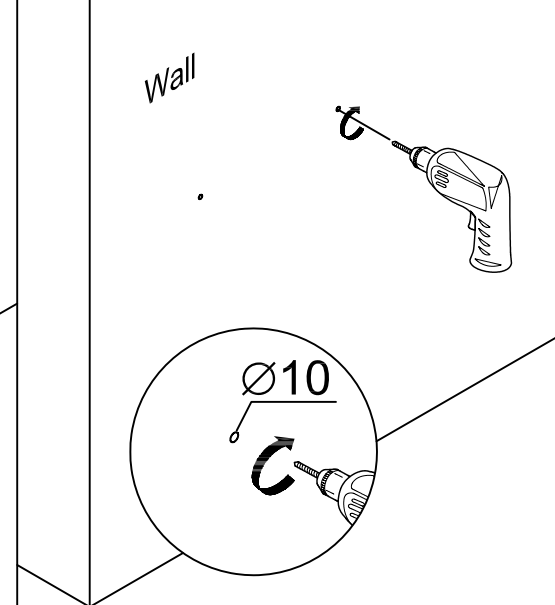


Step 16

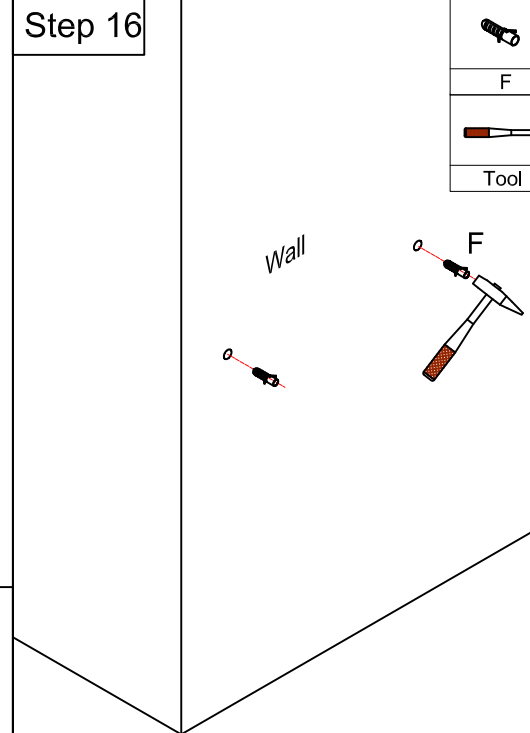

Step 17

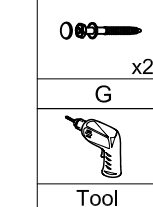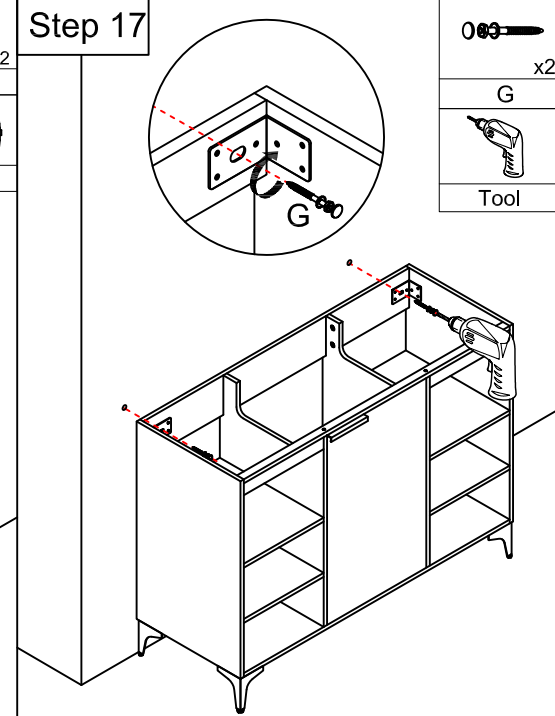


Step 18

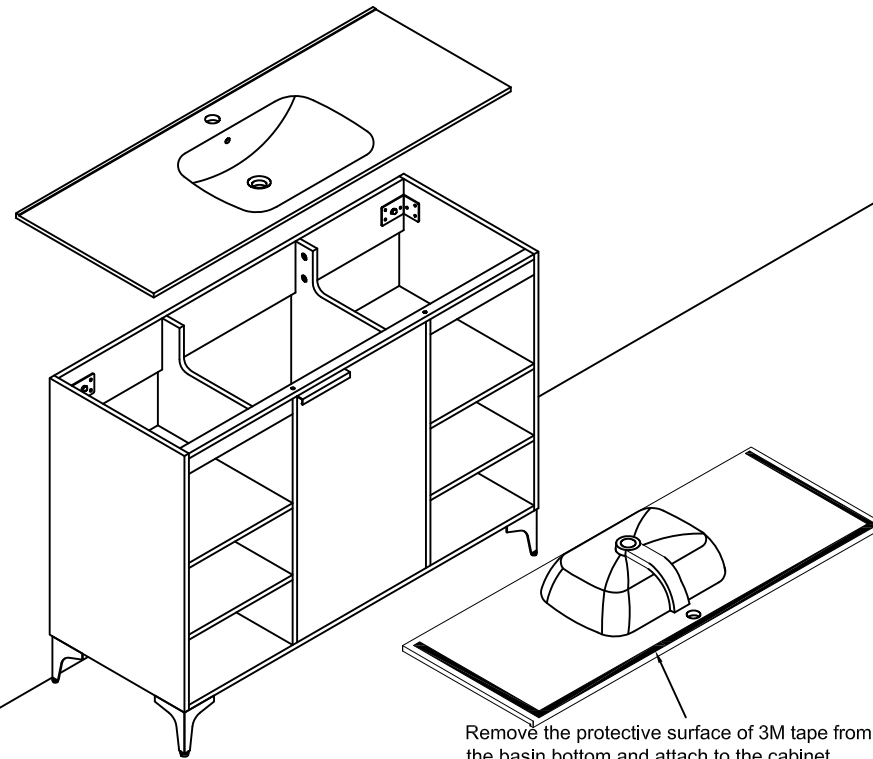


Step 20

Lift the basket and straighten the support strip.

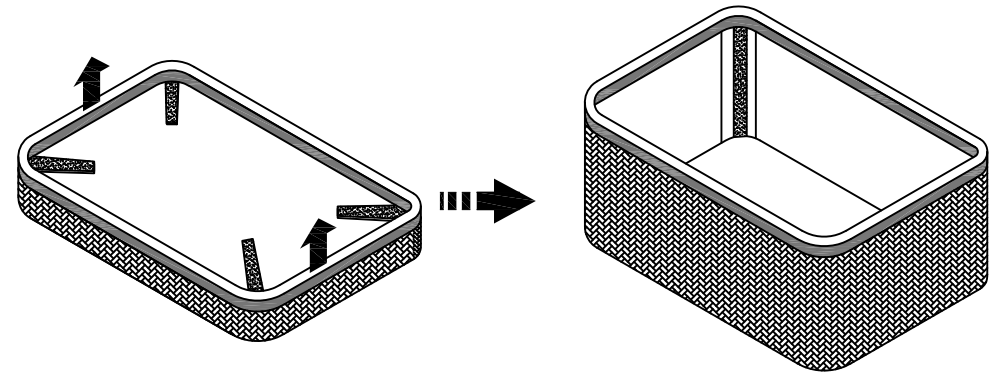

Pull-Out Basket (6 Pcs)

Step 19

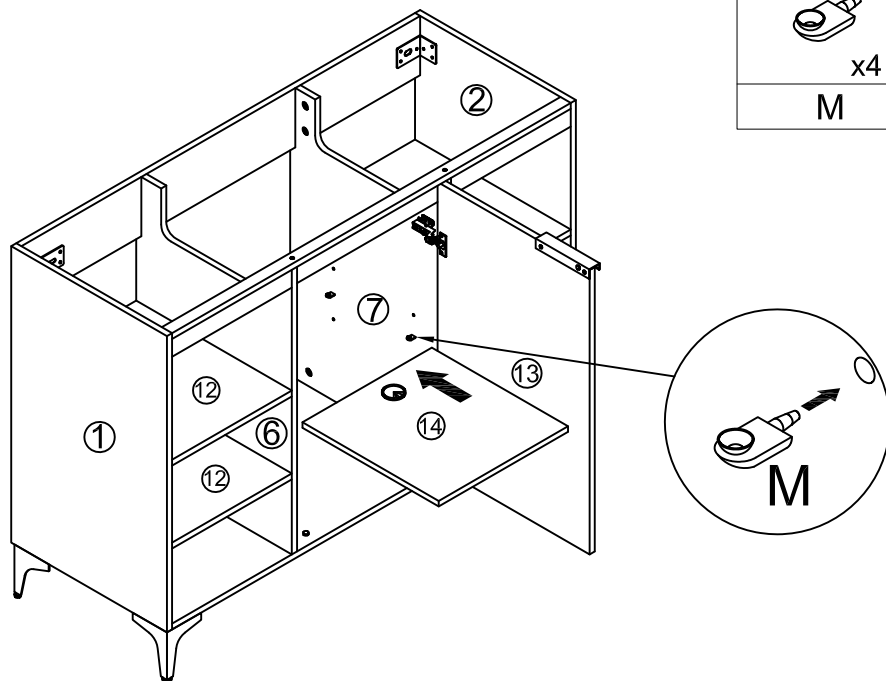

Finished

