
## PROGRESSIVE®

## ASSEMBLY INSTRUCTION

## D855-62 UPH DINING ARM CHAIR

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Indentify and count all parts and compare with the Hardware List as below:

	1				1
Part List	No	Description			Qty
	A	Back Frame Assembly			1
	В	Apron & Cushion Assembly			1
	С	Right Leg With Arm			1
	D	Left Leg With Arm			1
Hardware List	No	Picture	Description	Dimension	Qty
	1		Knock Down Bolt	M8 x 80 mm	4
	2		Knock Down Bolt	M8 x 45 mm	1
	3		Knock Down Bolt	M8 x 60 mm	4
	4		Knock Down Bolt	M6 x 55 mm	2
	5	<b>©</b>	Lock Washer	8 x 13 x 2 mm	9
	6	<u></u>	Washer	8 x 19 x 2 mm	9
	7	0	Wood Plug	Ø14 x 8 mm	2
	8		Allen Key #5 mm	#5 x 70 mm	1
	9		Allen Key #4 mm	#4 x 70 mm	1

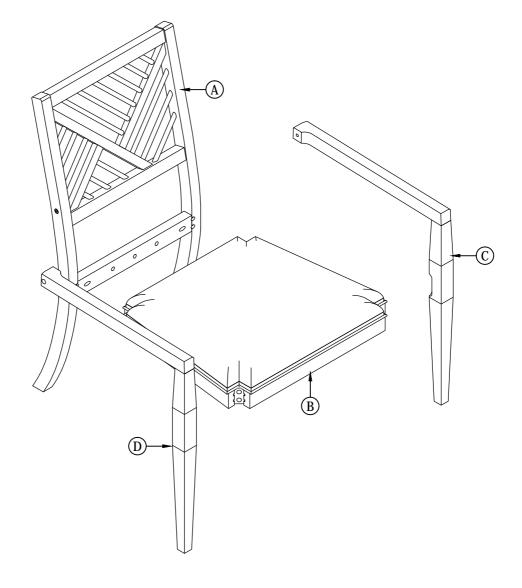

Note: Do not tighten bolt before all component assembly

Page 1 Of 4

## ASSEMBLY STEP STEP 1 $\bigcirc$ B

