


CONVENIENCE CONCEPTS

Swivel TV Stand

151283

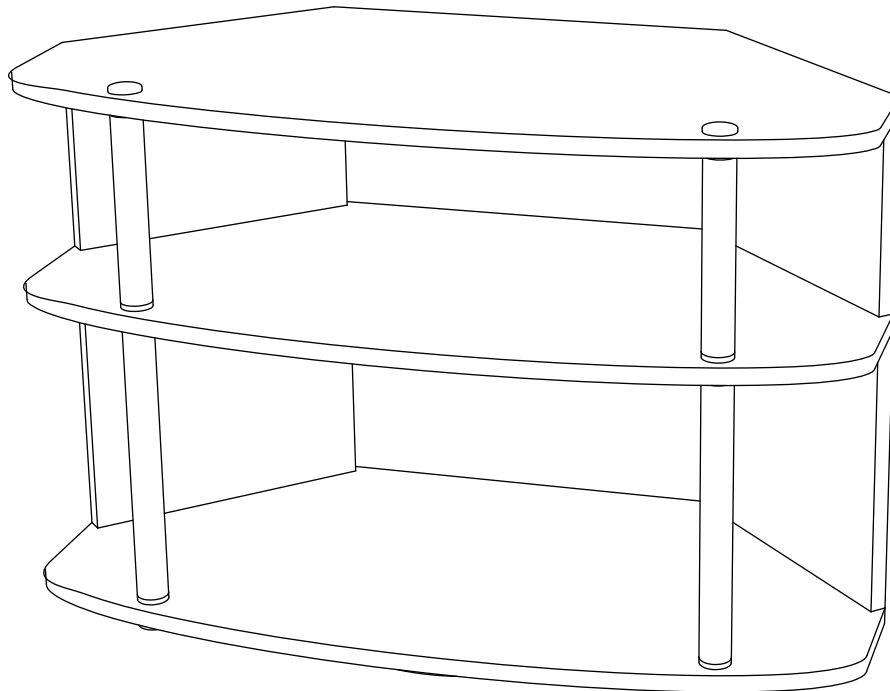

ASSEMBLY INSTRUCTIONS

We have designed our furniture with you , the customer in mind . Our clear , easy to follow , step by step instructions will guide you through the project from start to finish .
Feel confident that this will be a fun and rewarding project . The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment .



Please do not return to the store

Broken or missing hardware ?

Need help with assembly?

If you have any questions just call 1-800-468-6447 or email us at
parts@convenience-concepts.com


Warning! *Intended for a hard level surface.

*This TV Stand is designed to accommodate most **32"** Flat/Plasma TV sets.


Maximum weight capacity is **80 lbs**

Hardware List

Part List



Cambolt (16pcs)

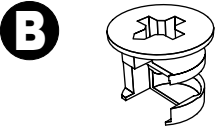

Camlock (16pcs)




Wood dowel (16pcs)




Glue (1pc)




Cable Tie (1pc)




Eyelet Screw (1pc)

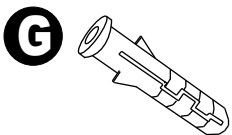


Anchor (1pc)

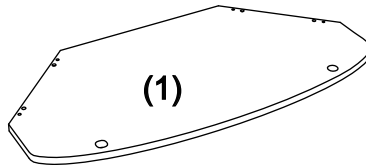


Top Panel (1pc)

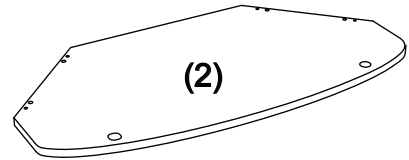


Middle Panel (1pc)

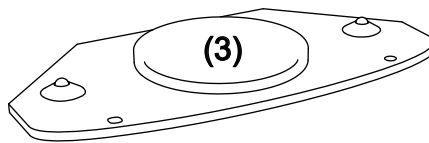


Bottom Panel (1pc)

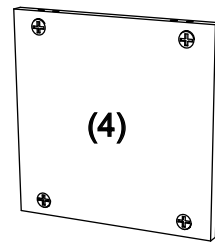


Large Divider Panel (2pcs)

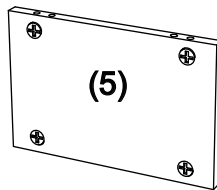


Small Divider Panel (2pcs)

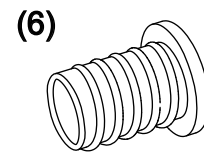

End Cap (4pcs)

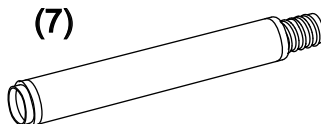


Small Metal Pole (2pcs)

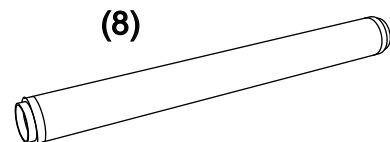


Long Metal Pole (2pcs)


Assembling the unit with camlocks and wood dowels.

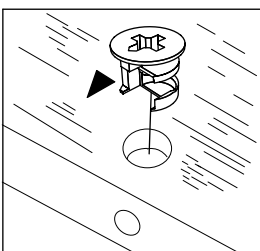


Insert camlock,
camlock must face
bolt hole

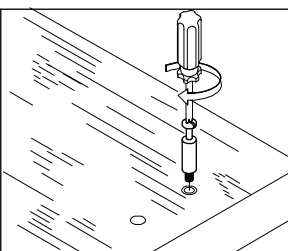


**Gently screw cam
dowel into the
threaded anchor**

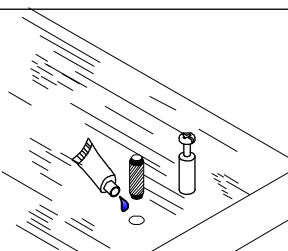

Lightly glue one end of wood dowel and tap into hole.

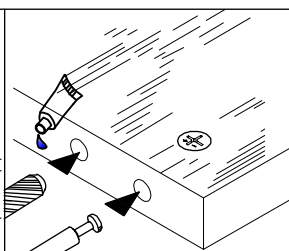


Lightly glue dowel and connect to second panel by inserting dowels into holes

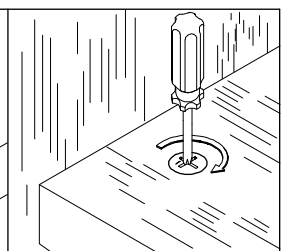

Gently screw the cam clockwise into locked position.
Do not overtighten.


Step1

1. Attach Cambolts (A) and Wood dowels (C) to Bottom Panel (3) as shown.
2. Thread End Caps (6) through the holes on Bottom Panel (3) and gently screw Long Metal Poles (8) into End Caps (6) using care not to over tighten.

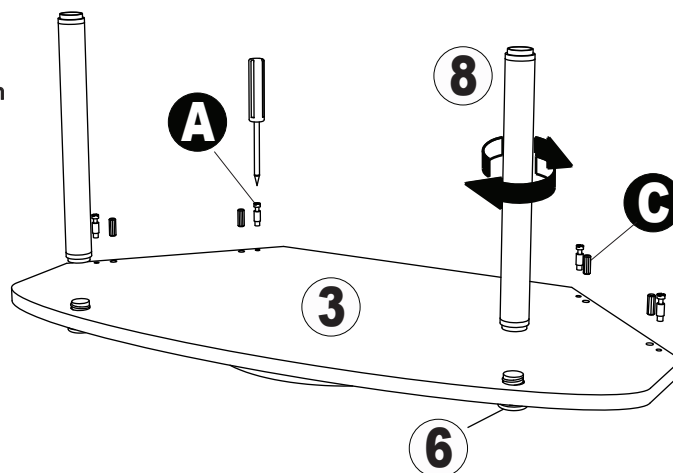


Step2

1. Connect Large Divider Panel (4) to Bottom Panel (3) . Gently tighten camlocks on bottom of Panel (4) until snug.

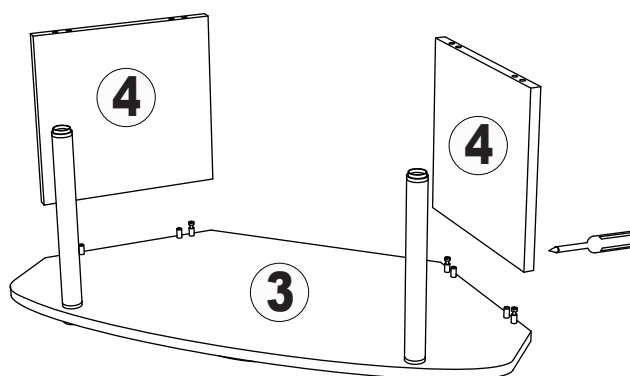


Step3

- Attach Cambolts (A) and Wood dowels (C) to the bottom of Middle Panel (2) as shown.

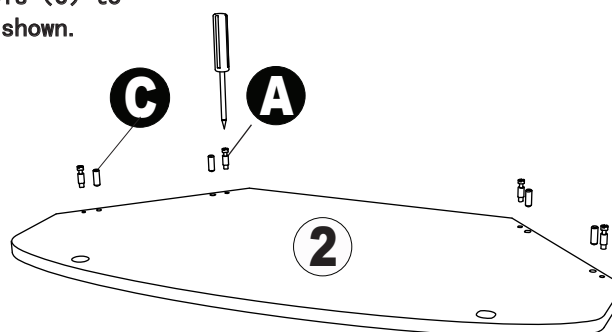


Step4

1. Turn over and connect Middle Panel (2) to unit.
Gently tighten camlocks on top of Panel (4).
2. Attach Cambolts (A) and Wooden dowels (C) to the top of Middle Panel (2).

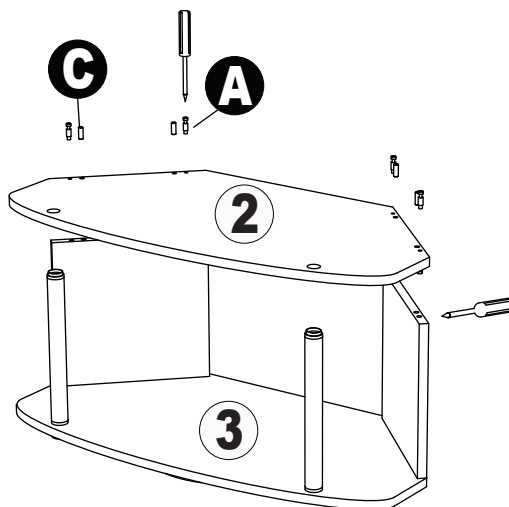


Step5

1. Connect Small Divider Panels (5) to Middle Panel (2) .
Gently tighten camlocks on bottom of Panel (5).
2. Gently screw Small Metal Poles (7) into unit.

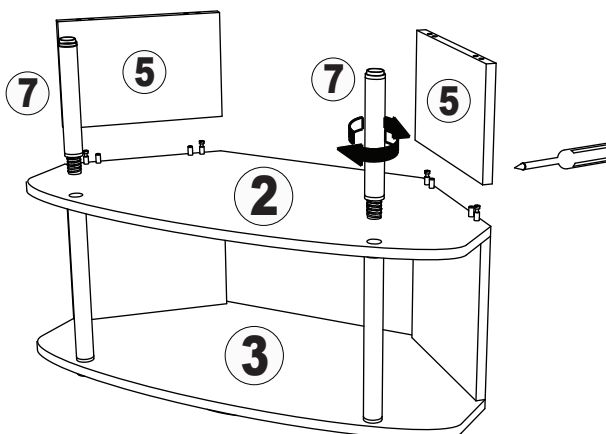

Step6


- Attach Cambolt (A) and Wood dowels (C) to the bottom of Top Panel (1) as shown.

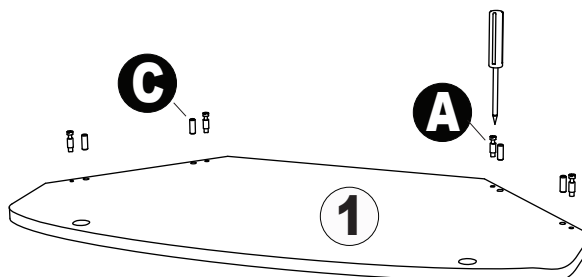

*Lay flat on carpet or other soft surface to prevent scratches.


Step7

Connect Top Panel (1) with flat surface facing up to unit.
Gently tighten camlocks on top of panel (5).

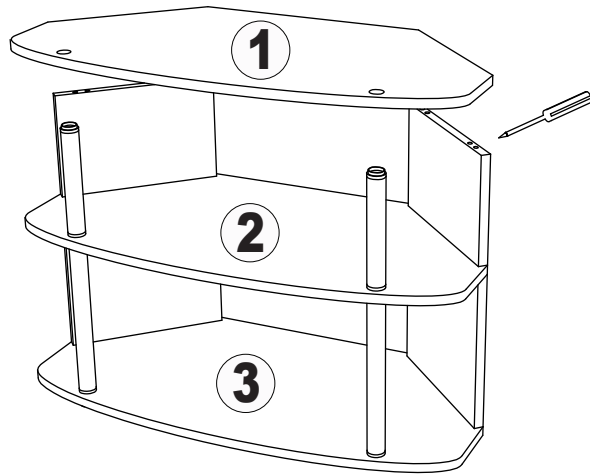


Step8

Gently screw End Caps (6) into unit.

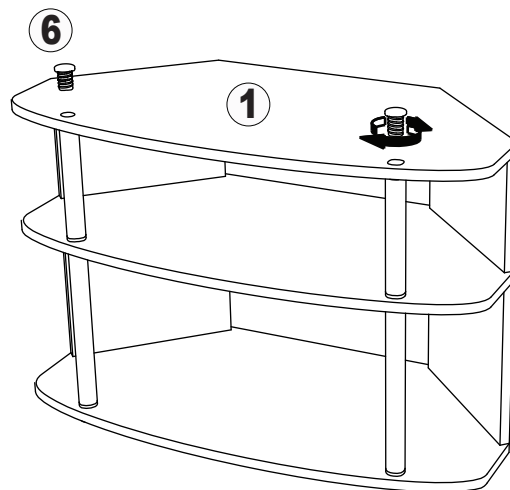

Step9

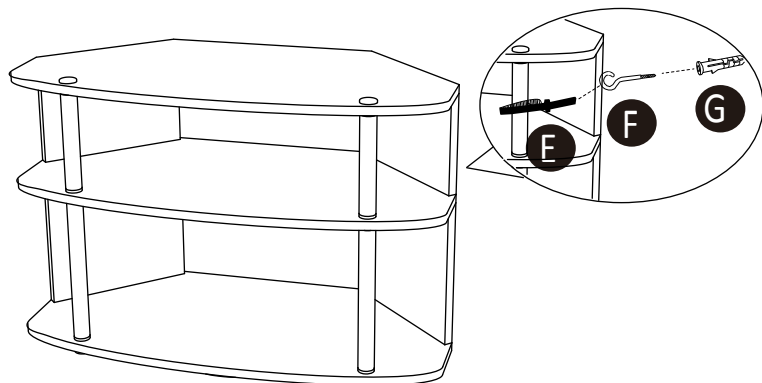

1. Drill holes slightly smaller than anchors **G** into drywall and gently tap anchors into holes.
2. Insert eyelet screws **F** into anchors and fasten unit to wall using cable ties **E**.
3. Enjoy your new TV Stand.