


ASSEMBLY INSTRUCTION

ITEM NO.N715P196906

Console Table

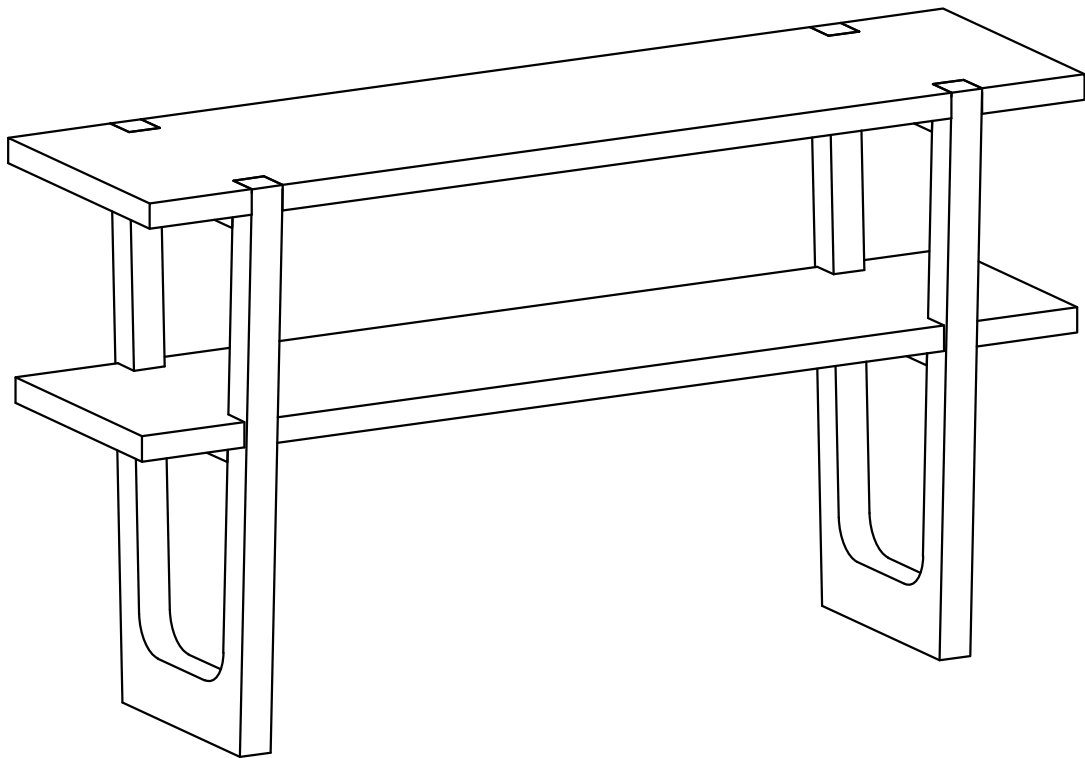

ASSEMBLY INSTRUCTION

ITEM NO.N715P196906

Please read these instructions fully before starting assembly:


1. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts.
2. Kindly follow the assembly instructions step by step.
3. Do not tighten all screws and bolts until the table is fully assembled.
4. Unscrew the protective plastique supports from the metal insert of the table legs before assembly.
5. Parts of the assembly will be easier with 2 people.

Care and maintenance:

Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

ASSEMBLY INSTRUCTION

ITEM NO.N715P196906

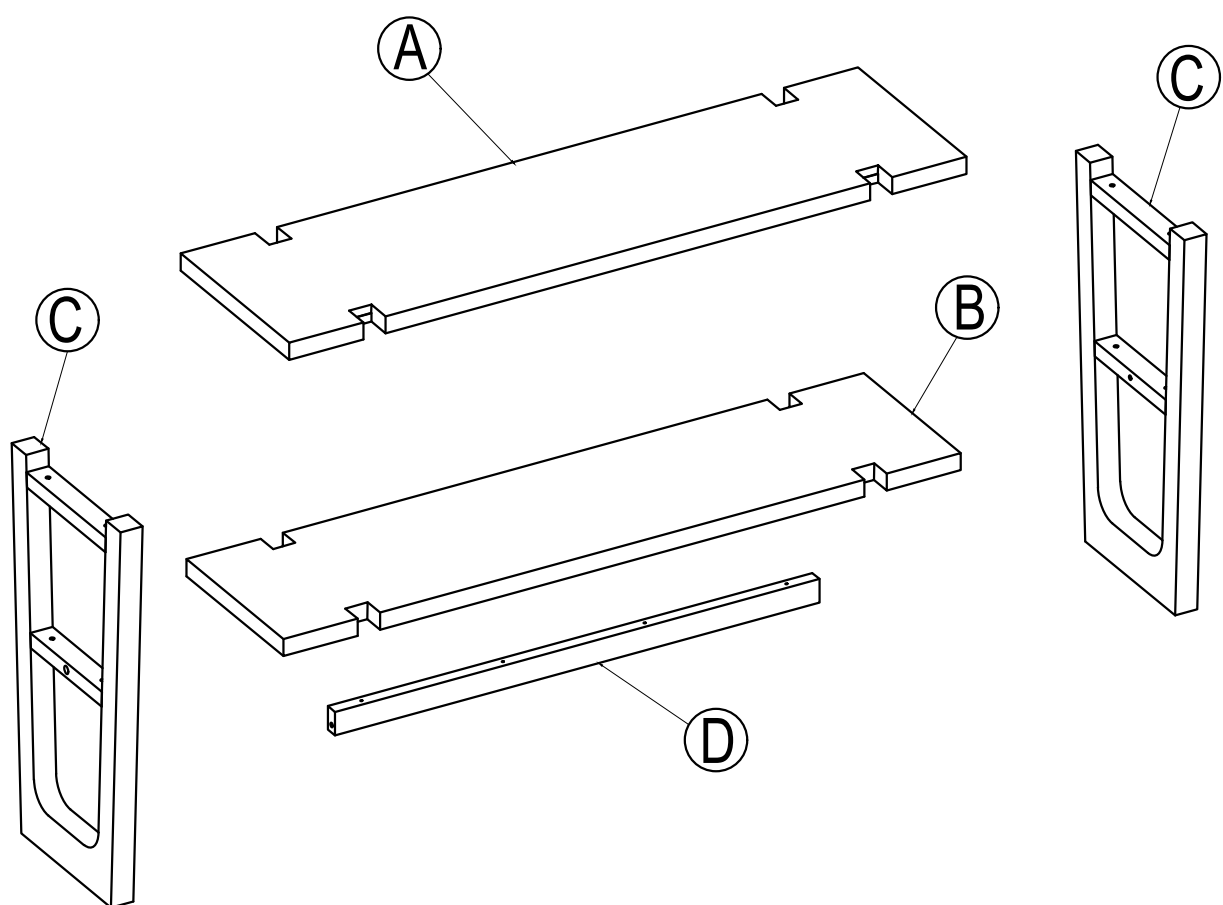

ASSEMBLY INSTRUCTION

ITEM NO.N715P196906

Part List

Ⓐ


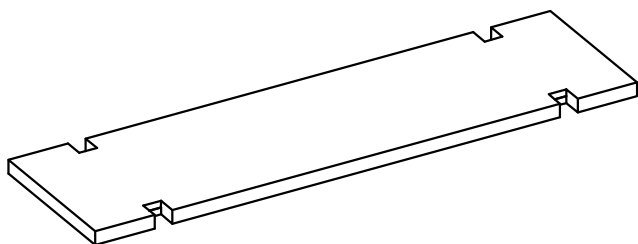


TABLE TOP (1 pc)

Ⓑ

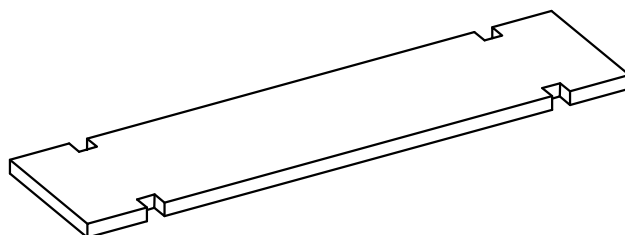

BETWEEN SHELVES (1 pc)

Ⓒ


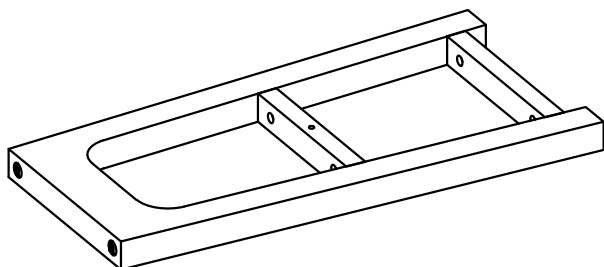


TABLE LEG (2 pcs)

Ⓓ

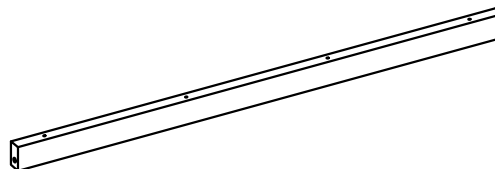


TOP STRETCHER TOP (1 pc)

ASSEMBLY INSTRUCTION

ITEM NO.N715P196906

Hardware List


①

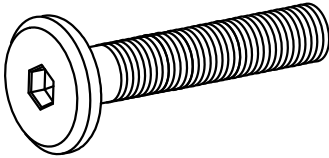

Ø 5/16" x 35 mm

BOLT (8 pcs)


②

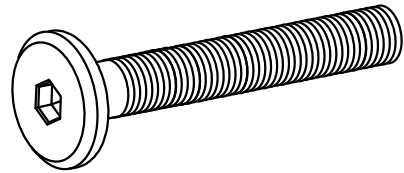

Ø 5/16" x 55 mm

BOLT (2 pcs)

③



Ø5/16" x 13 mm

FLAT WASHER (10 pcs)


④



4 mm

ALLEN KEY (1 pc)

⑤




Ø4 x 38mm

WOOD SCREWS (4 pcs)


⑥



Ex2

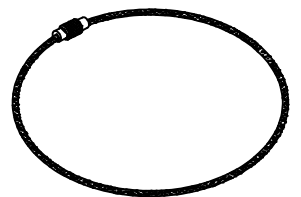

Bx4




ANTI-PARKING KIT (2 Sets)


ASSEMBLY INSTRUCTION




ITEM NO.N715P196906

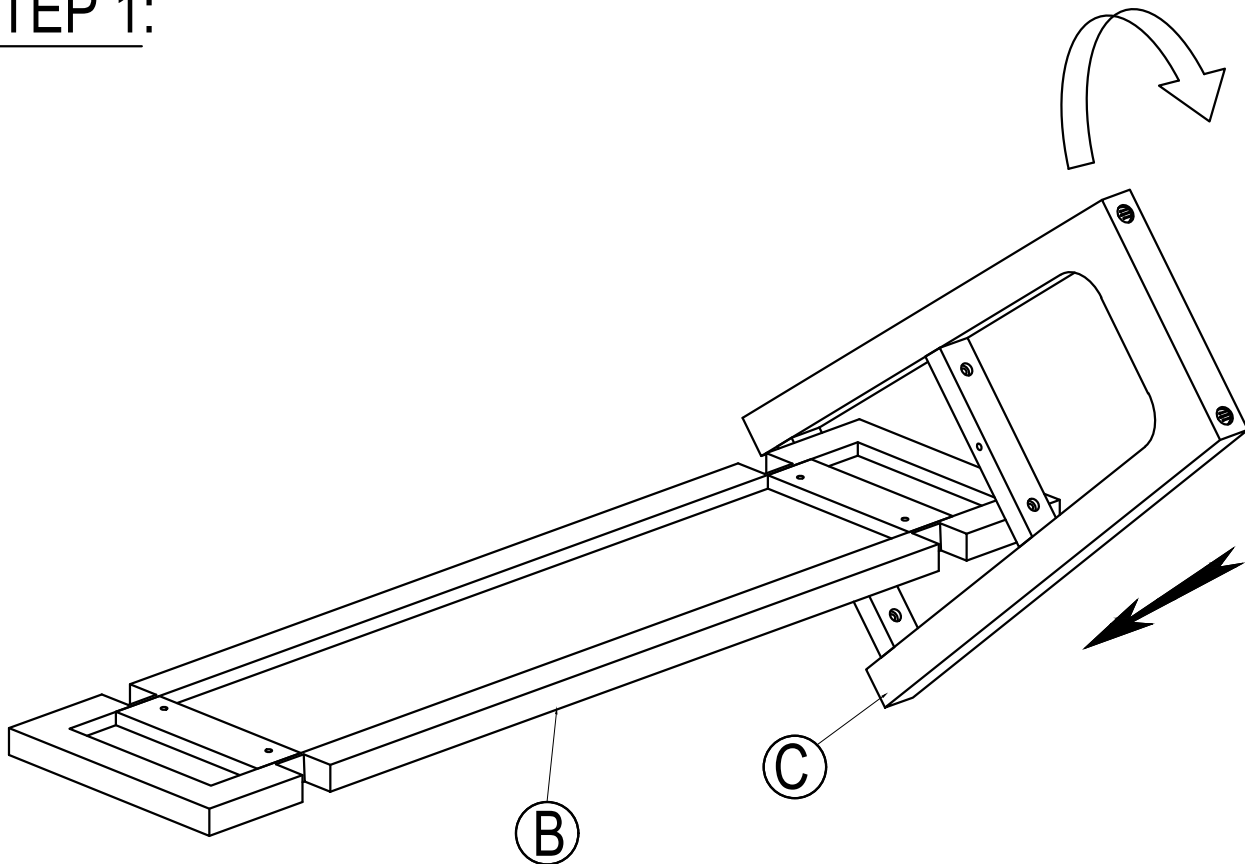STEP 1:

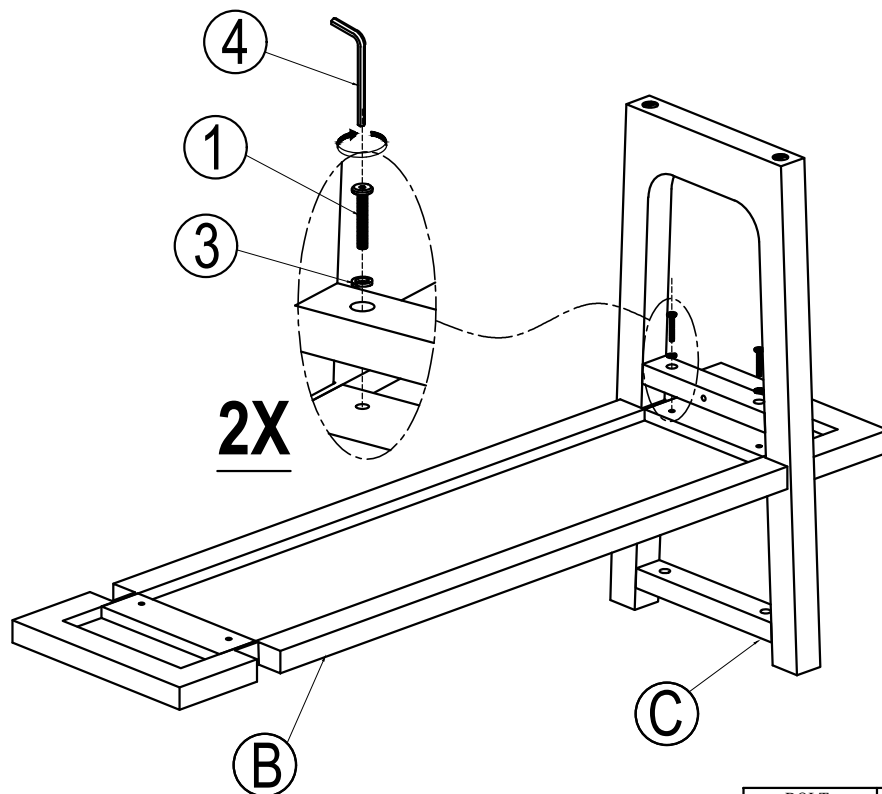

STEP 2:







BOLT Ø 5/16" x 35 mm	FLAT WASHER Ø5/16" x 13 mm	ALLEN KEY 4 mm
		
①x 2	③x 2	④x 1

ASSEMBLY INSTRUCTION


ITEM NO.N715P196906

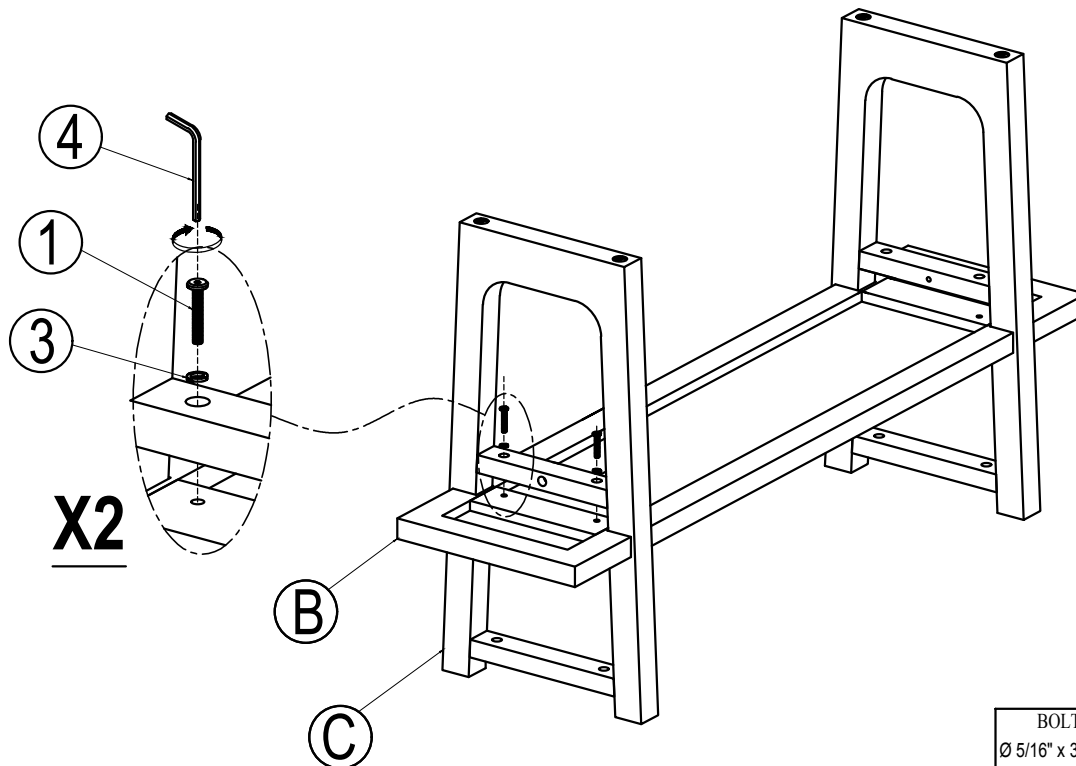



STEP 3:



BOLT Ø 5/16" x 35 mm	FLAT WASHER Ø5/16" x 13 mm	ALLEN KEY 4 mm
		
①x 2	③x 2	④x 1

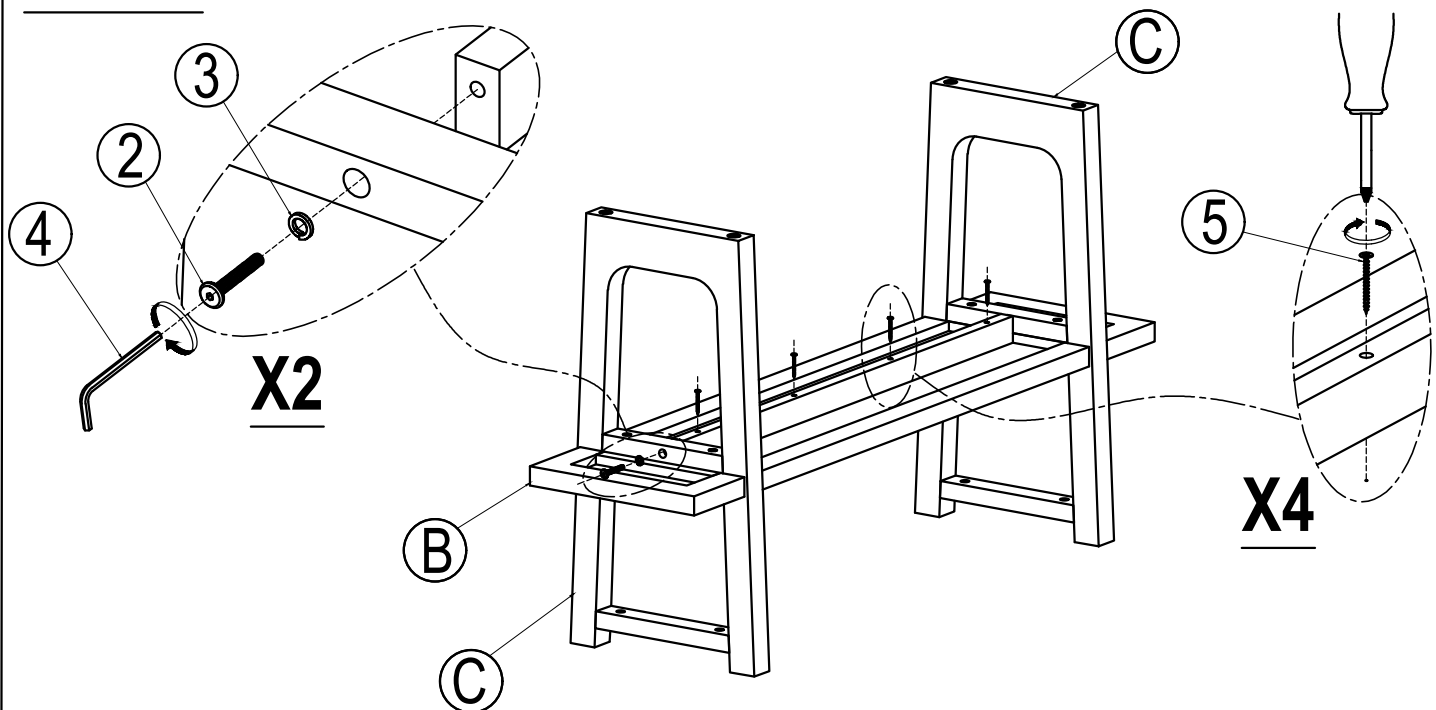STEP 4:







BOLT Ø 5/16" x 55 mm	FLAT WASHER Ø5/16" x 13 mm	ALLEN KEY 4 mm	WOOD SCREWS Ø4 x 38mm
			
②x 2	③x 2	④x 1	⑤x 4

ASSEMBLY INSTRUCTION


ITEM NO.N715P196906

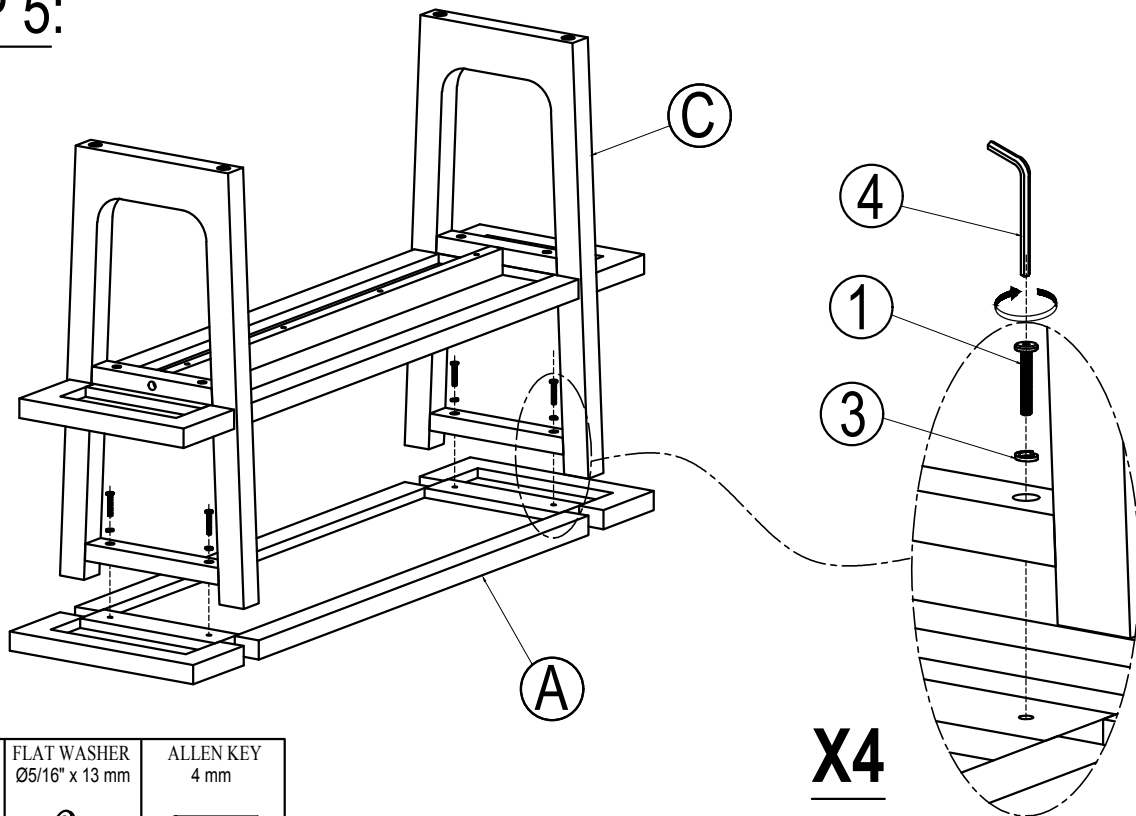




STEP 5:

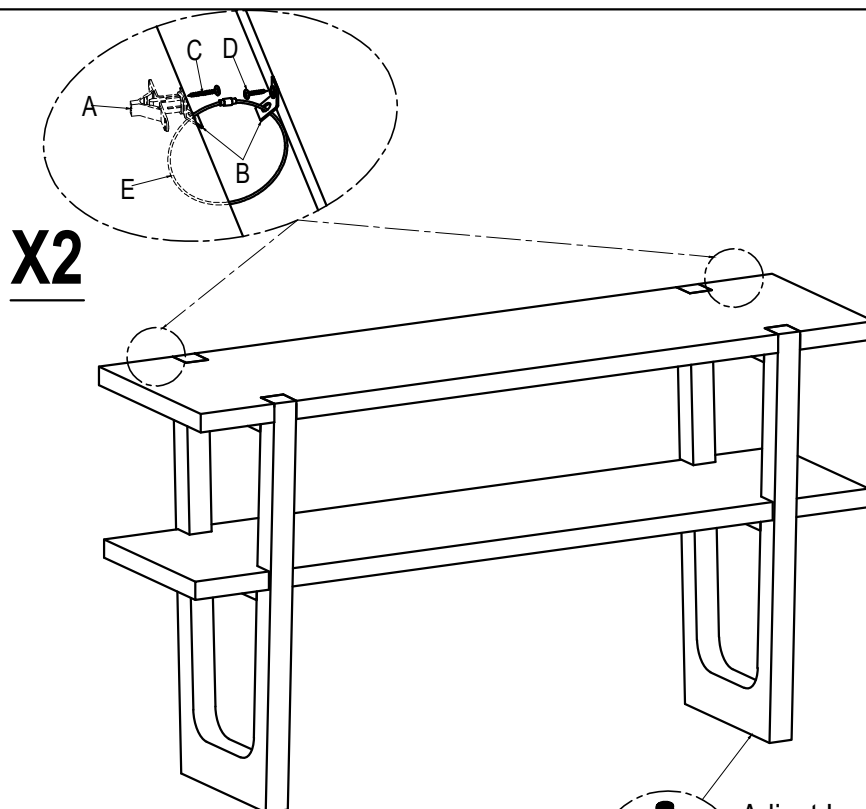


BOLT Ø 5/16" x 35 mm	FLAT WASHER Ø 5/16" x 13 mm	ALLEN KEY 4 mm
		
① x 4	③ x 4	④ x 1

STEP 4:



⑥-A	⑥-B	⑥-C	⑥-D	⑥-E
				
2 pcs	4 pcs	2 pcs	2 pcs	2 pcs

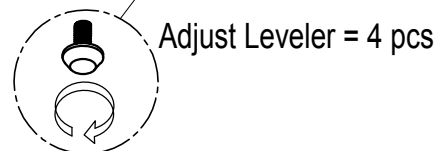

COMPLETE