


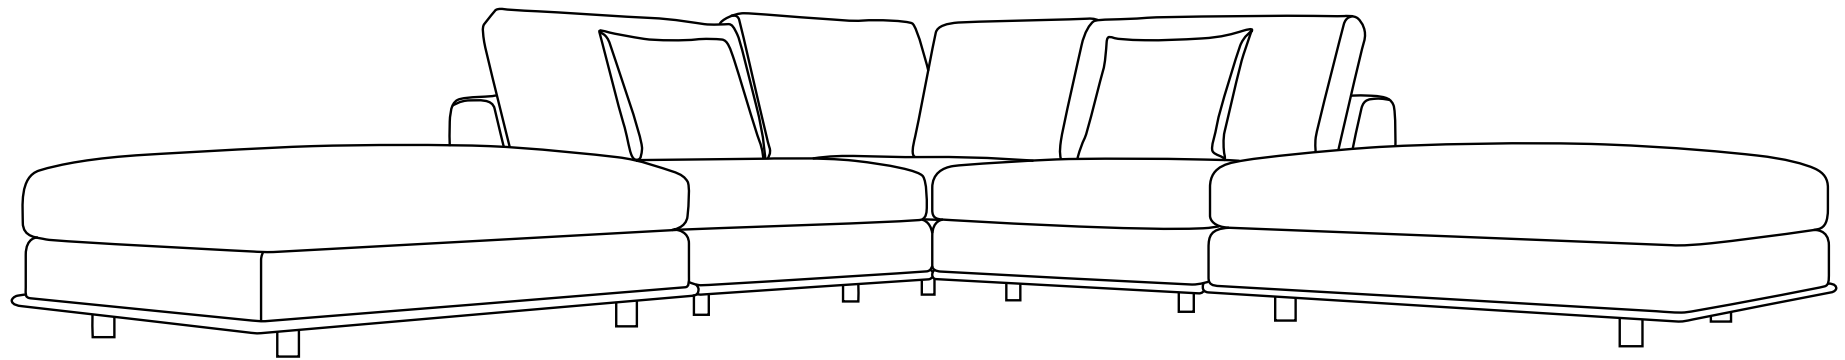
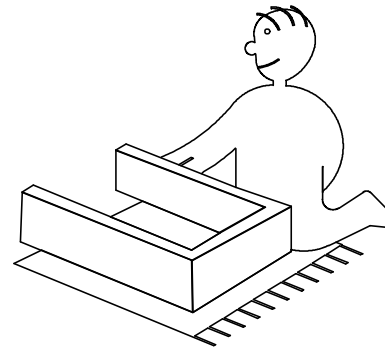
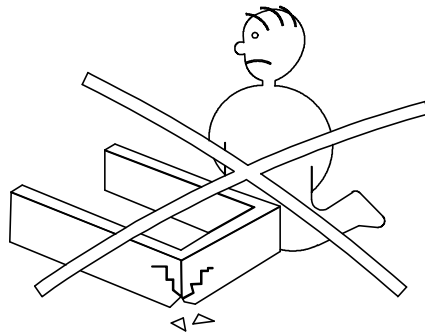


PERRY

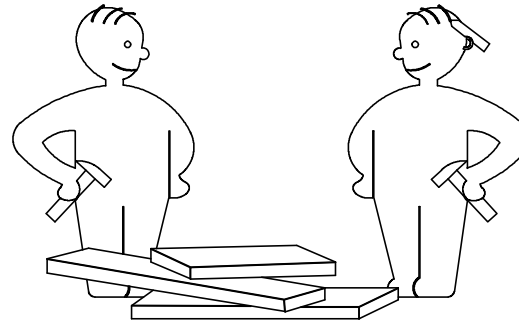


MODLOFT

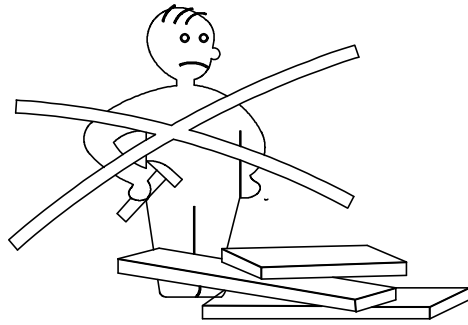

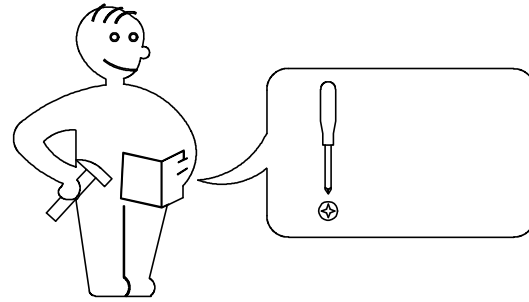


ASSEMBLY INSTRUCTION


PERRY MD821

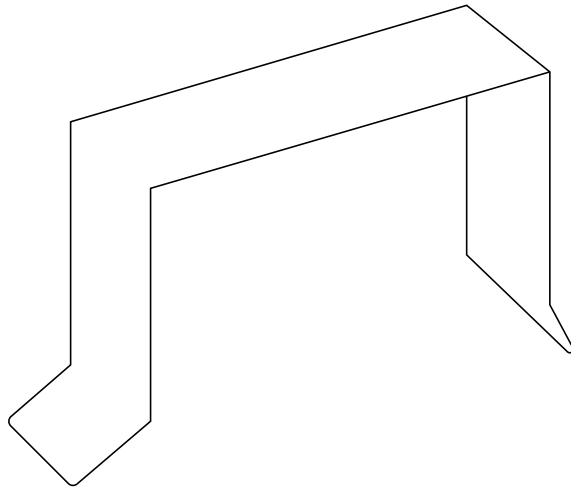

Modular Clamps x 2

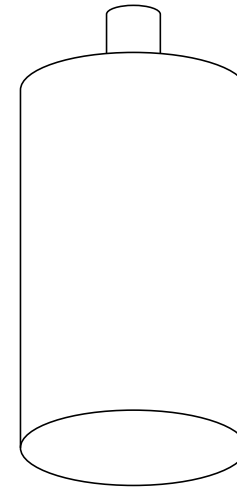


Legs x 4

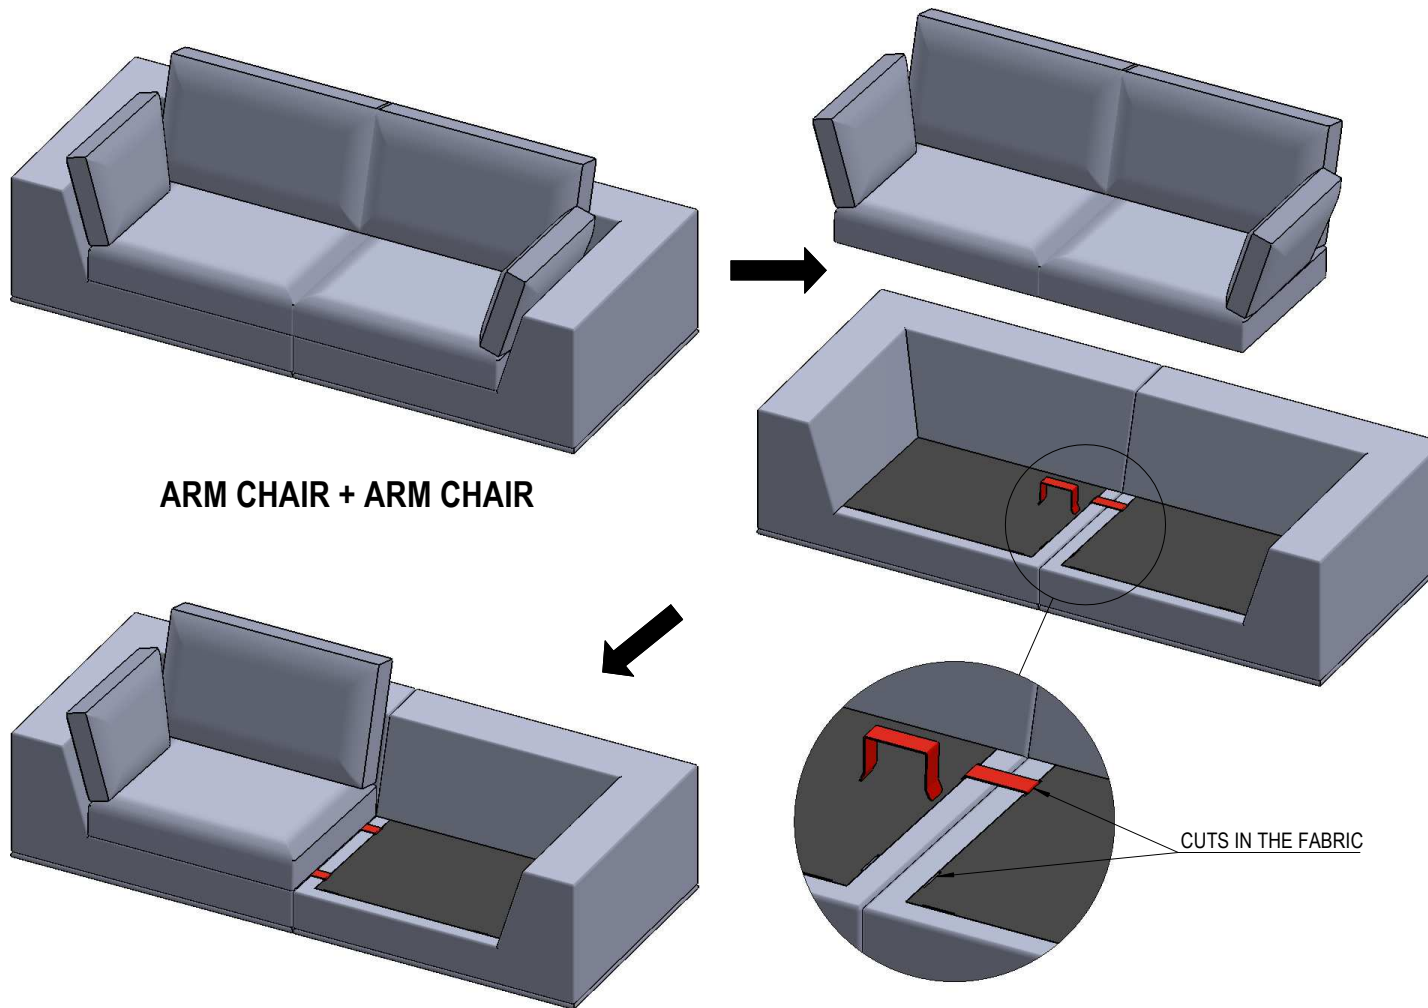




ASSEMBLY INSTRUCTION

PERRY MD821

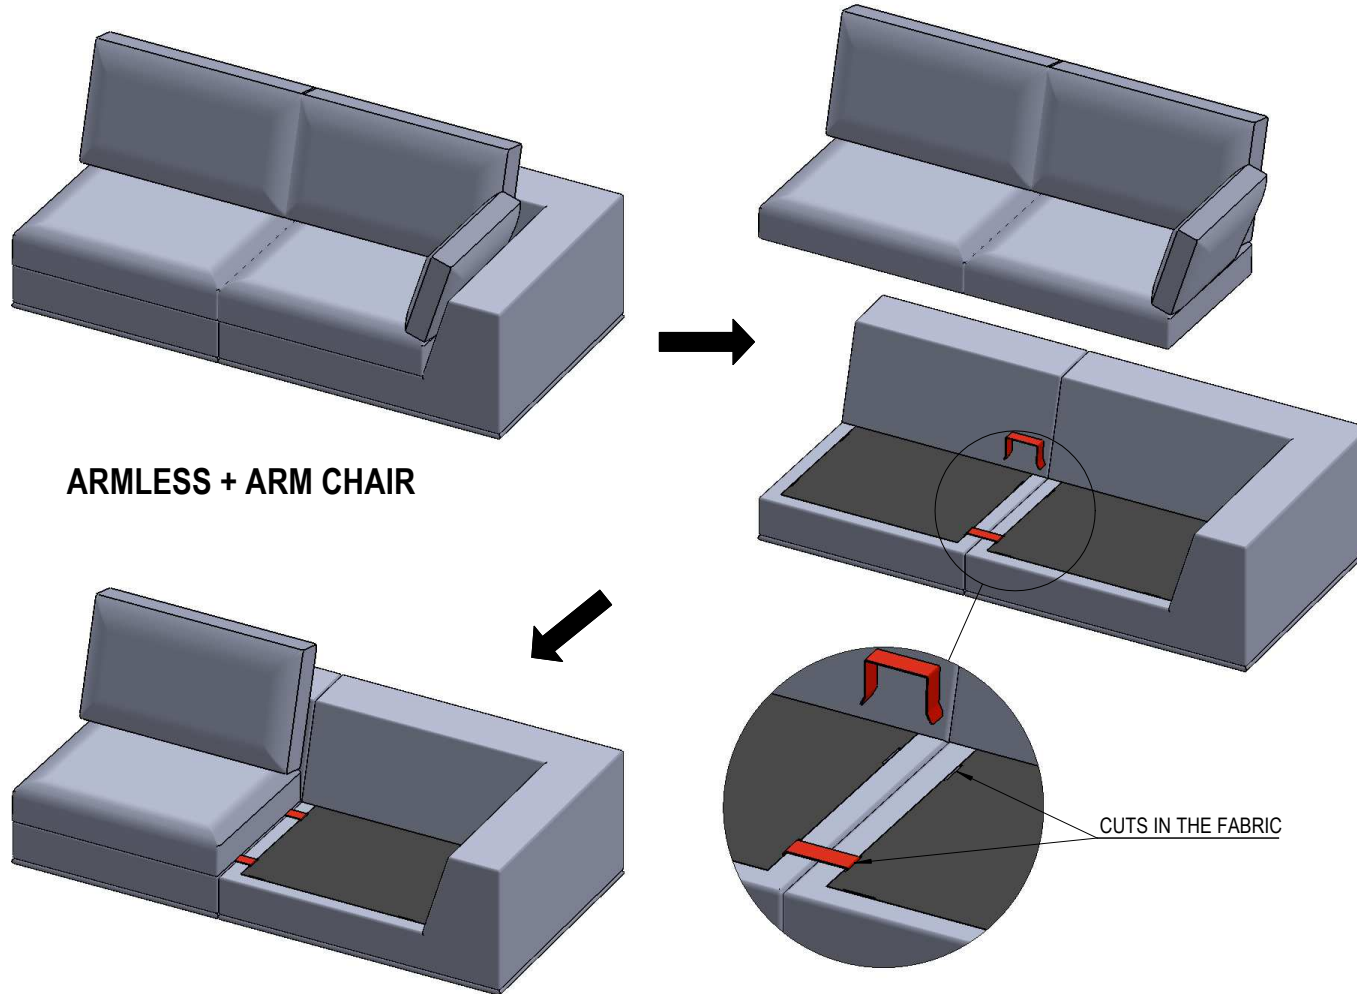

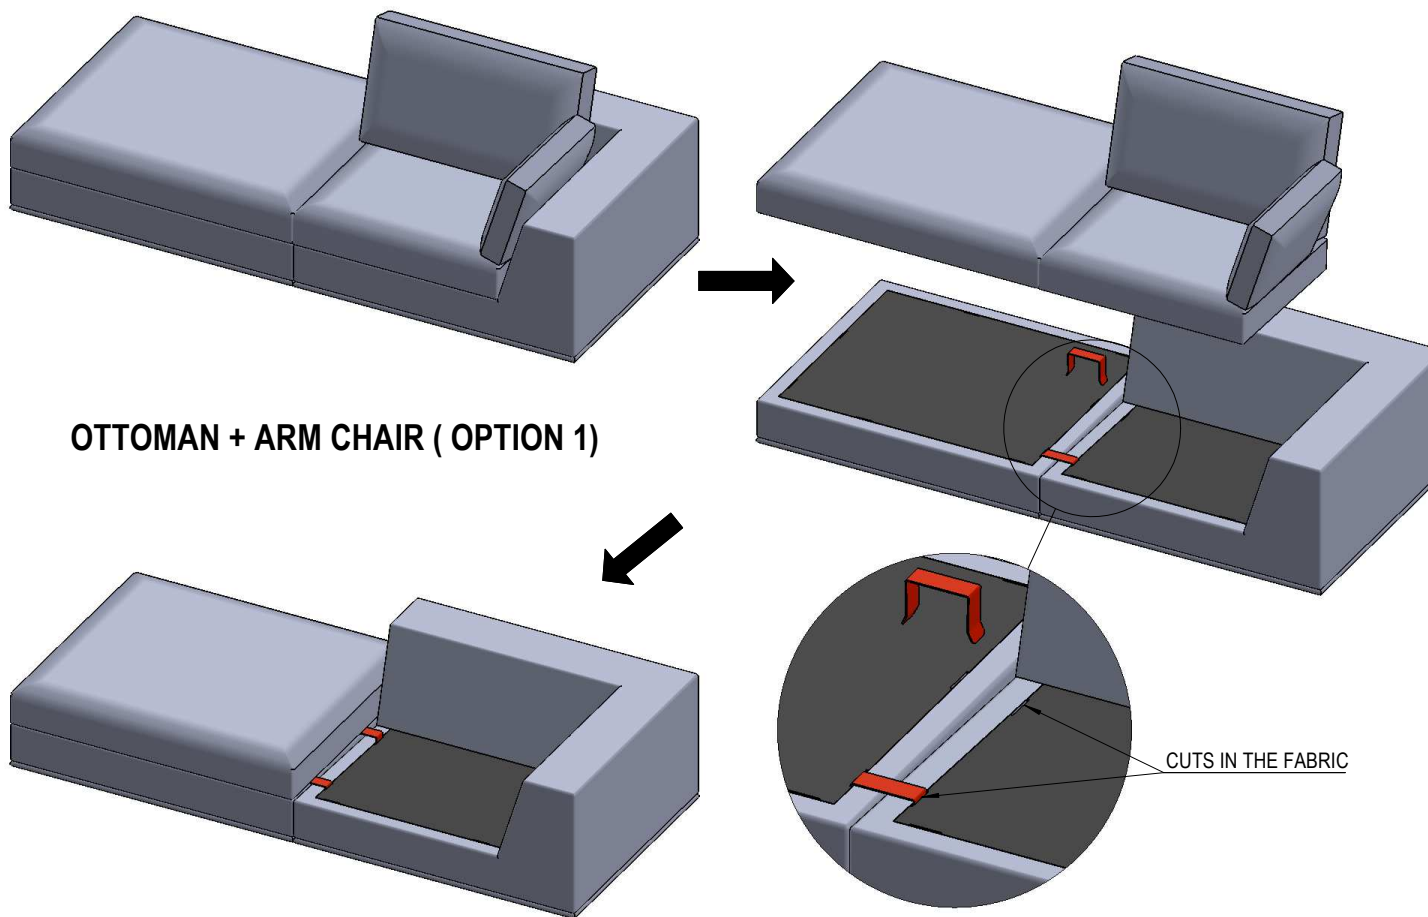





OTTOMAN + ARM CHAIR (OPTION 1)





ASSEMBLY INSTRUCTION

PERRY MD821

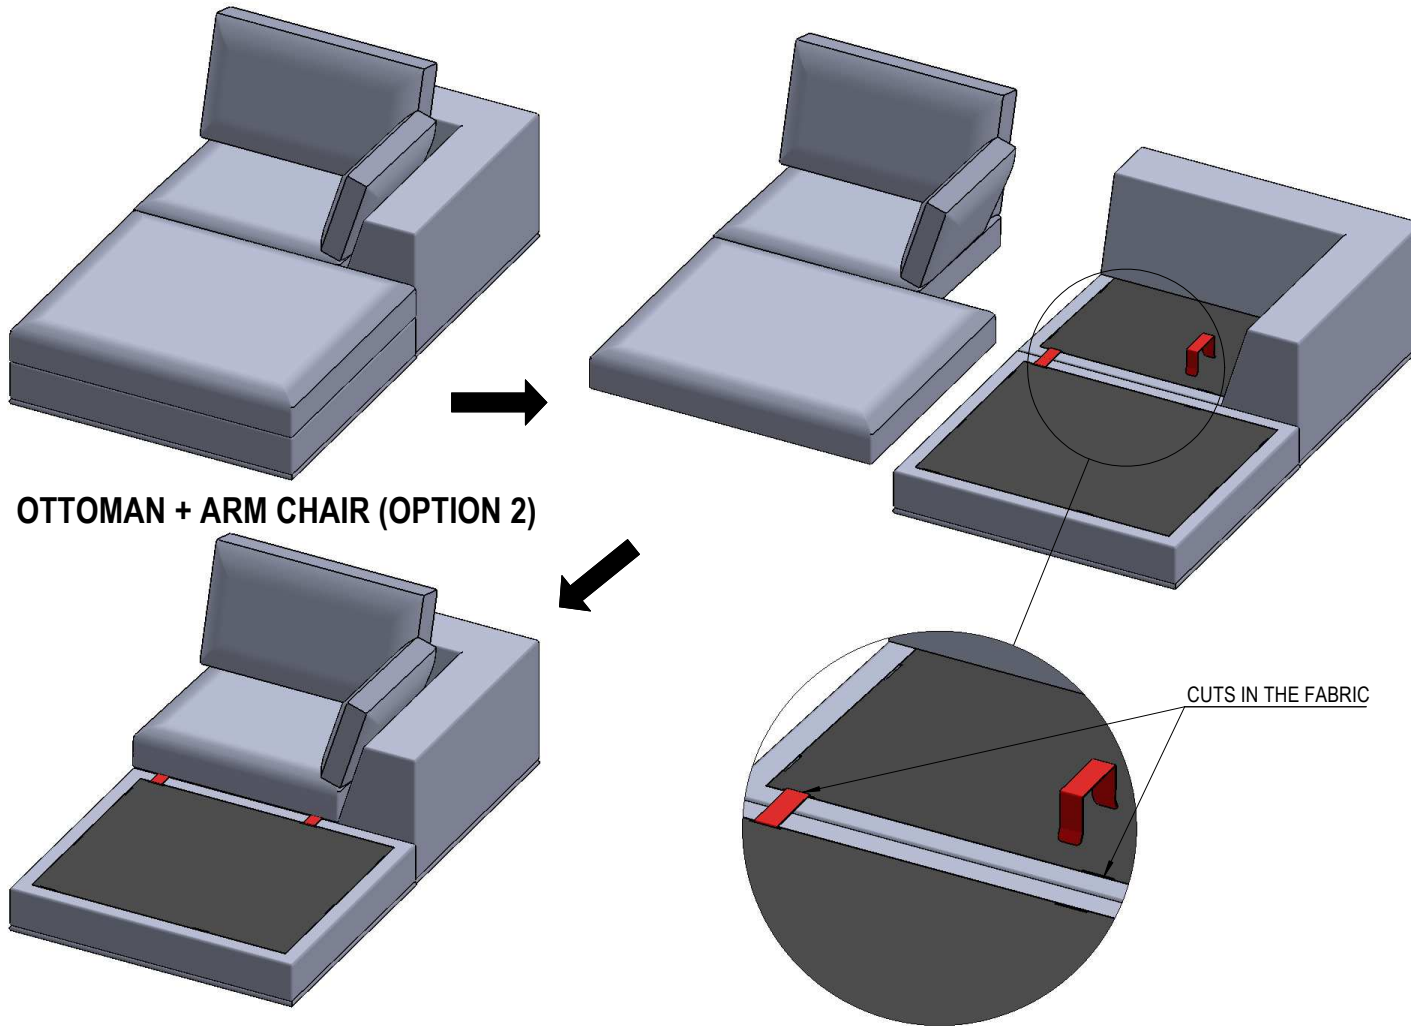

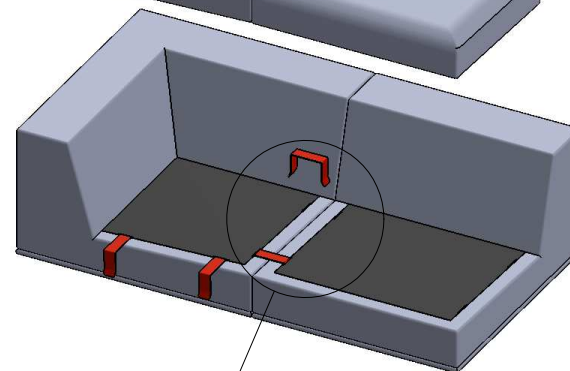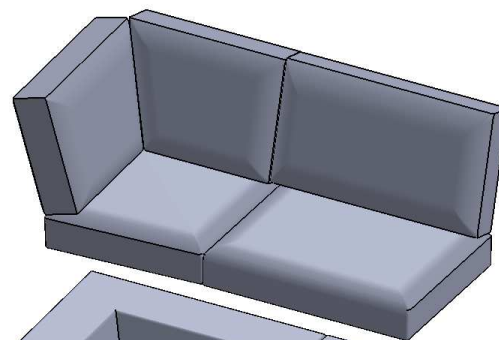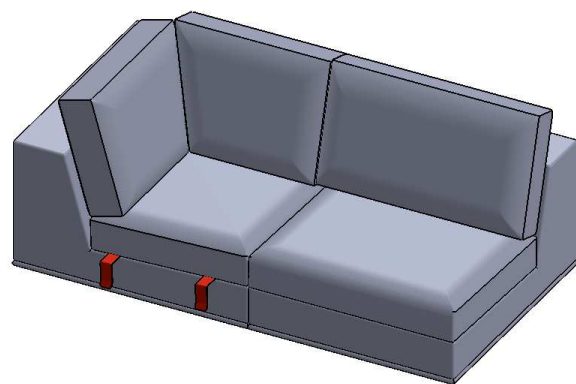

CORNER + ARMLESS

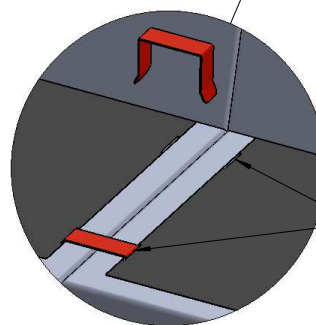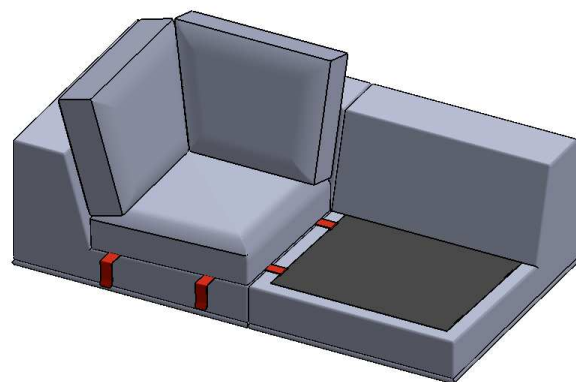

CUTS IN THE FABRIC



ASSEMBLY INSTRUCTION

PERRY MD821

