



# ASSEMBLY INSTRUCTION

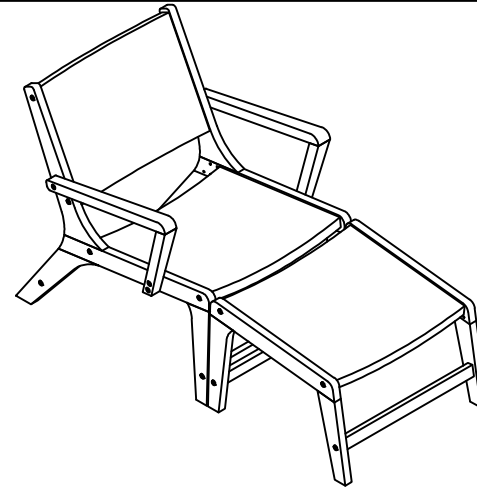


**MH**  
MADE4HOME




① x6  
(Bolt M6x60)




② x20  
(Bolt M6x30)

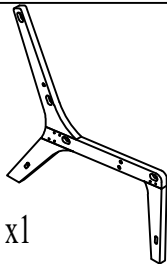


① A x1

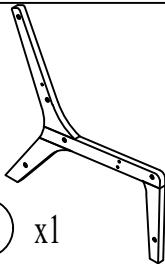


① B x1

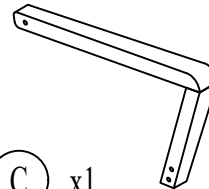


① C x1

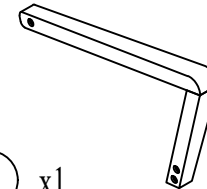


① D x1

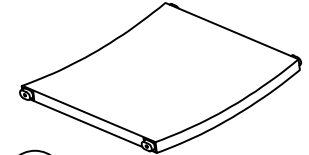


① E x1

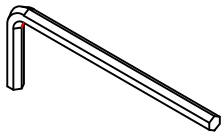


③ x2

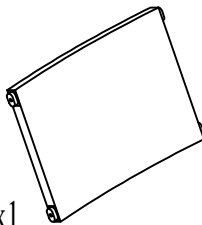


① F x1

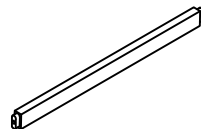


① G x4

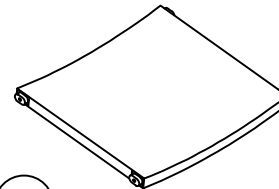

① H x1

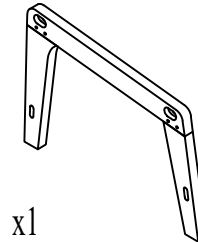

① I x1

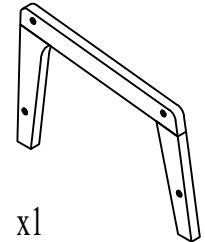

① J x1

(EXTRA)




① x1  
(Bolt M6x60)




② x4  
(Bolt M6x30)

# ASSEMBLY INSTRUCTION


Step 1

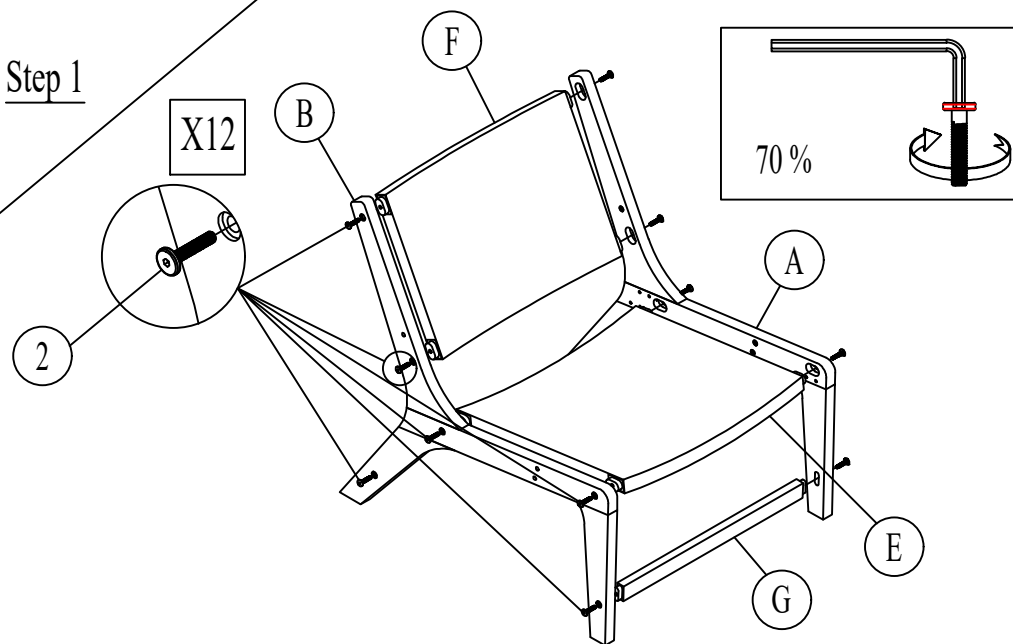


Step 2

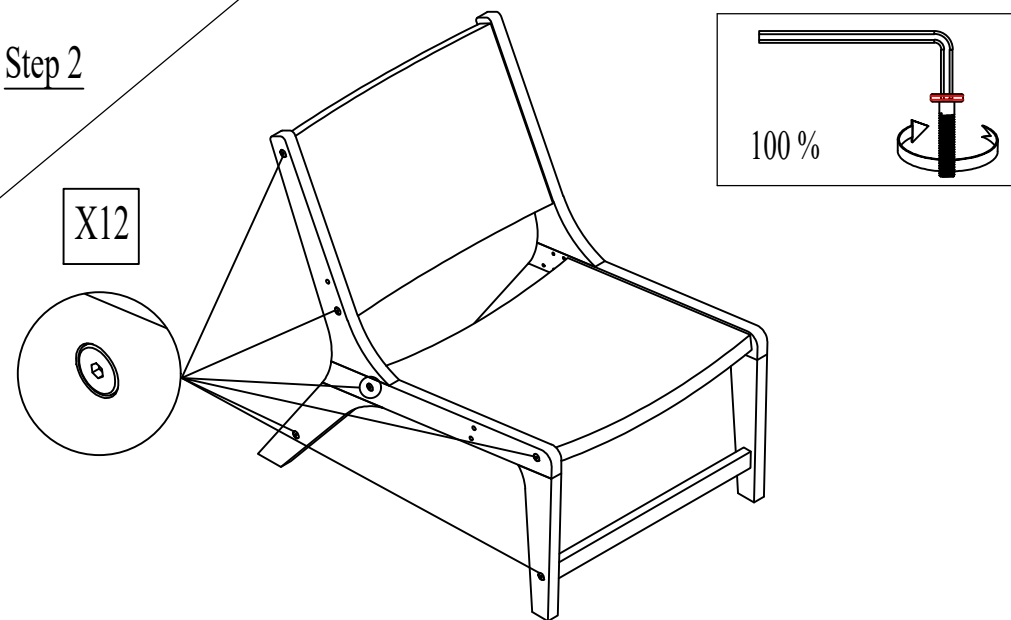

Step 3

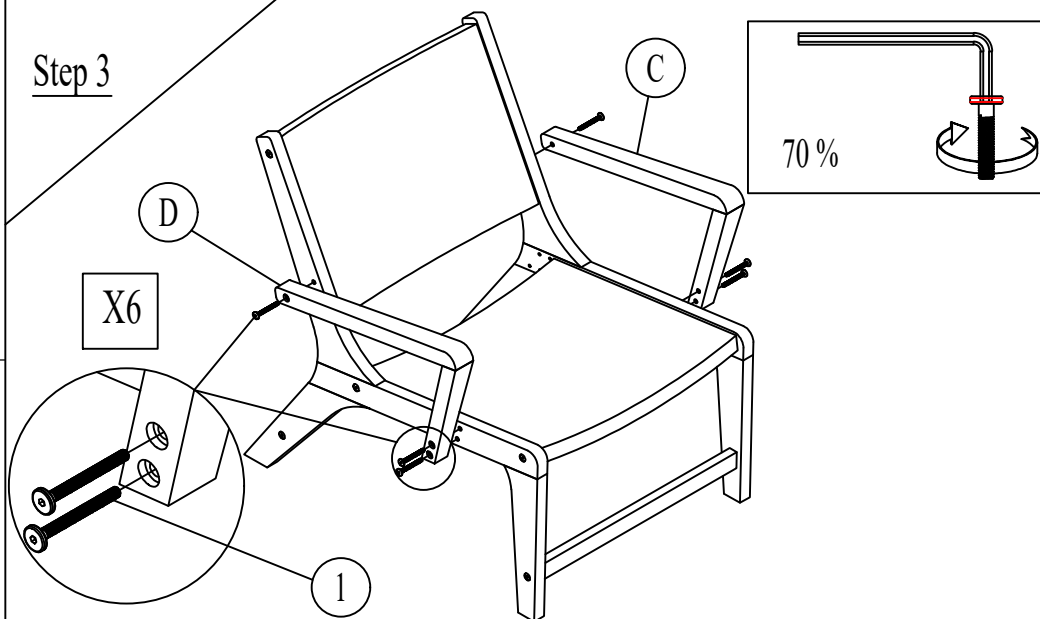



Step 4

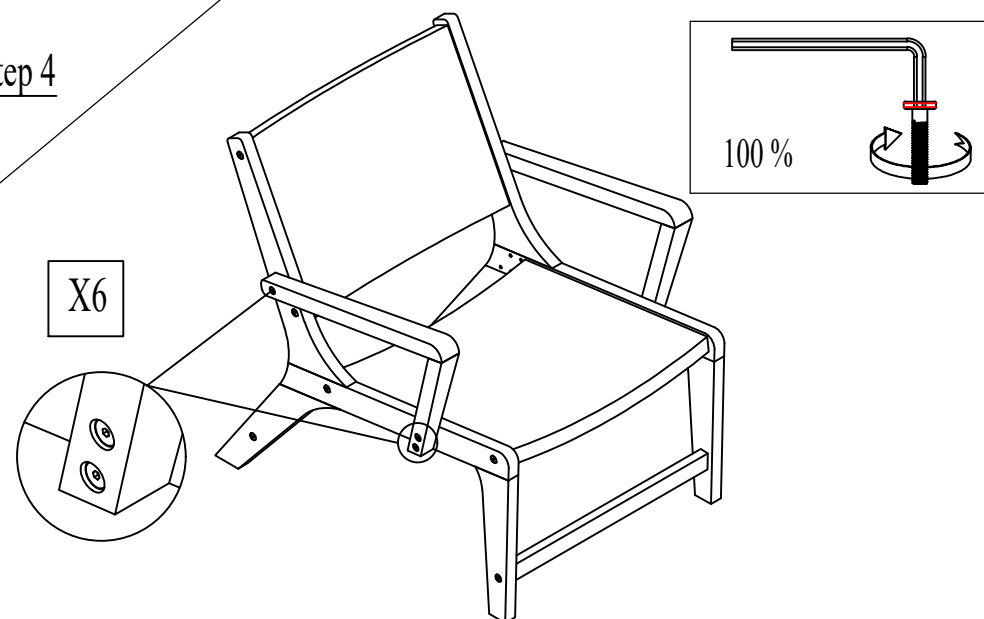

# ASSEMBLY INSTRUCTION

Step 5

70 %

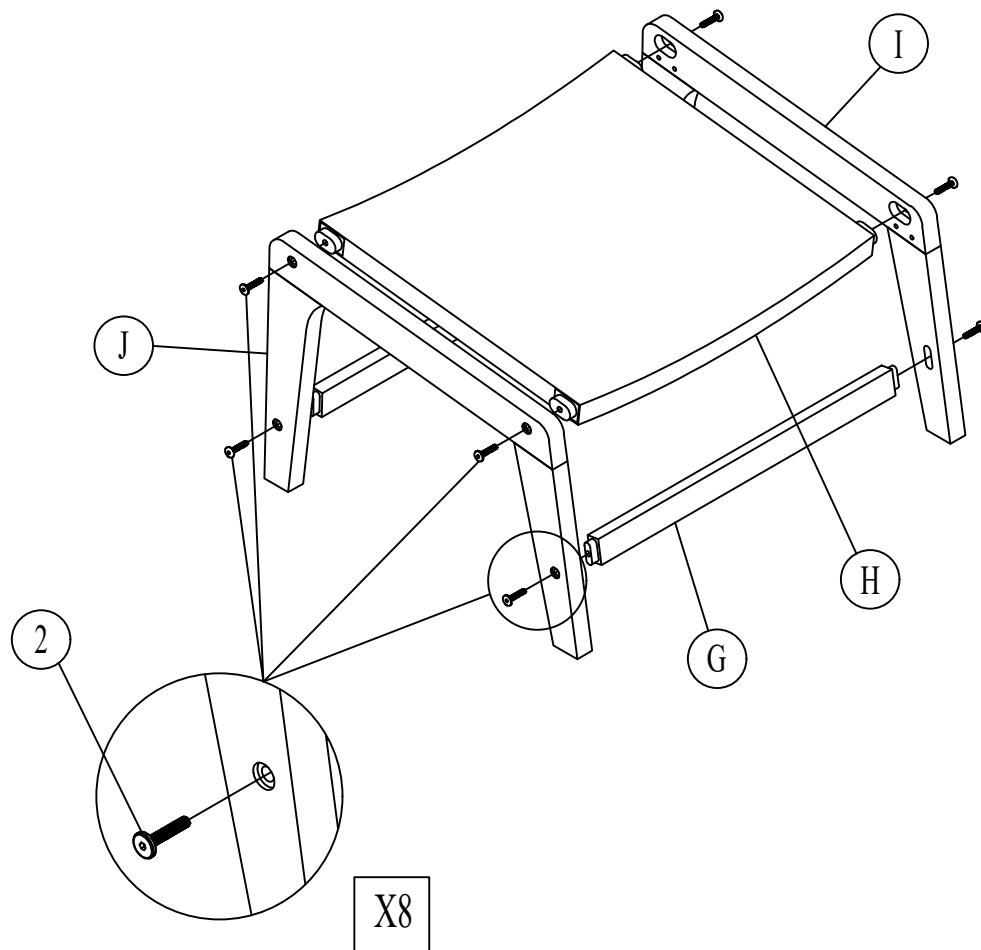

Step 6

X8

100 %

