


# ASSEMBLY INSTRUCTIONS








## TWIN, FULL QUEEN METAL BED

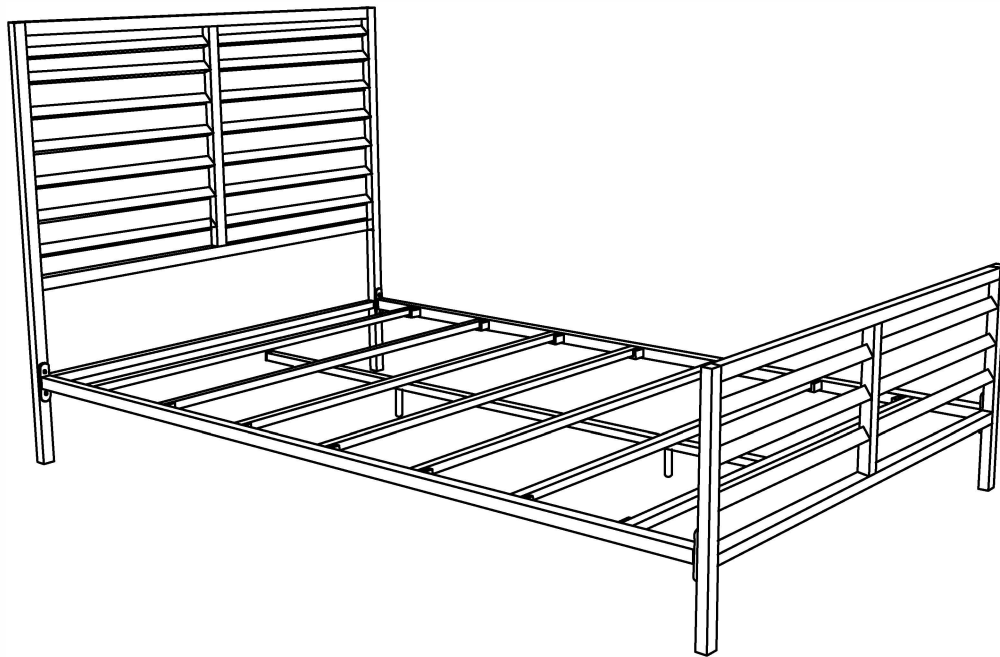


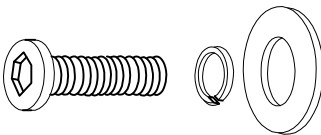


### NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.


# Part List

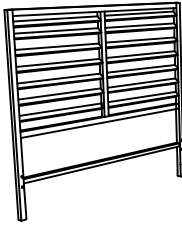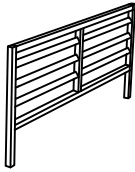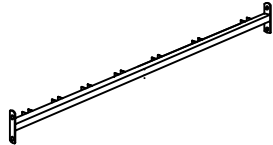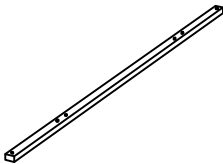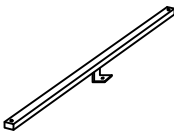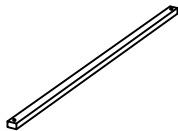
<b>A1.</b>  <b>Headboard</b>	<b>Quantity of 1</b>	<b>A2.</b>  <b>Footboard</b>	<b>Quantity of 1</b>	<b>A3.</b>  <b>Side Rail</b>	<b>Quantity of 2</b>
<b>A4.</b>  <b>Support Rail</b>	<b>Quantity of 1</b>	<b>A5.</b>  <b>End Slat</b>	<b>Quantity of 2</b>	<b>A6.</b>  <b>Middle Slat</b>	<b>Quantity of 5</b>
<b>A7.</b>  <b>Support Leg</b>	<b>Quantity of 2</b>				

# Hardware List

<b>B1.</b>  <b>Bolt with Washer</b>	<b>Quantity of 20</b>	<b>B2.</b>  <b>Bolt with Washer</b>	<b>Quantity of 8</b>	 <b>Allen key 8mm</b>  <b>Allen key 6mm</b>
--	-----------------------	--	----------------------	--

# Step 1


B2  8SETS

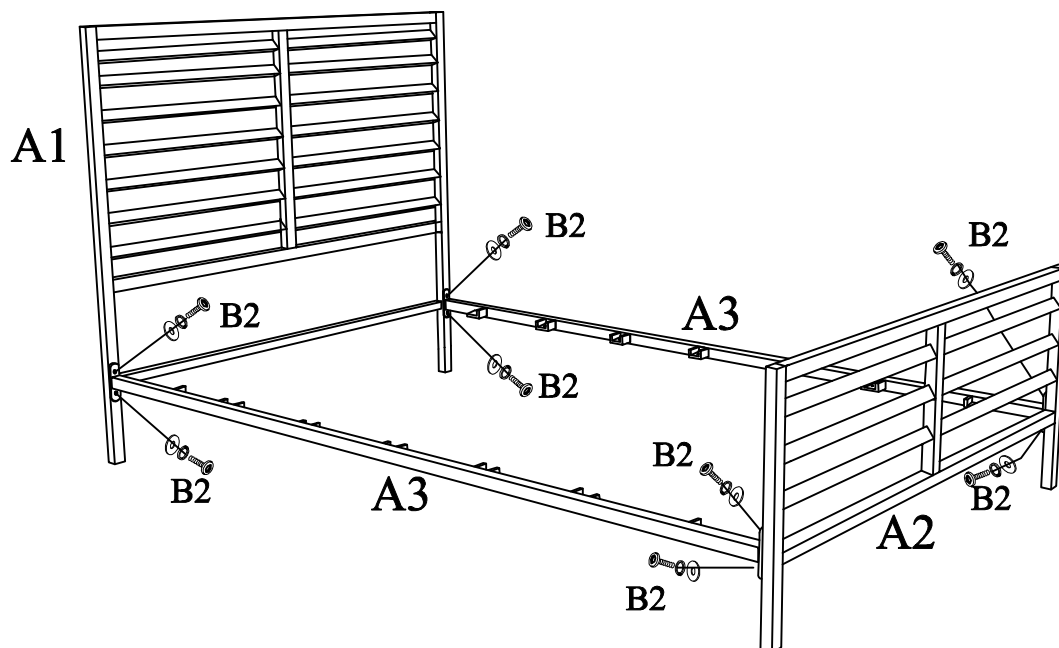

Assemble Side Rails (A3) to Headboard (A1) and Footboard (A2) using Bolts with Washers (B2).  
NOTE: Please do not tighten bolts (B2) until step 5.




# Step 2

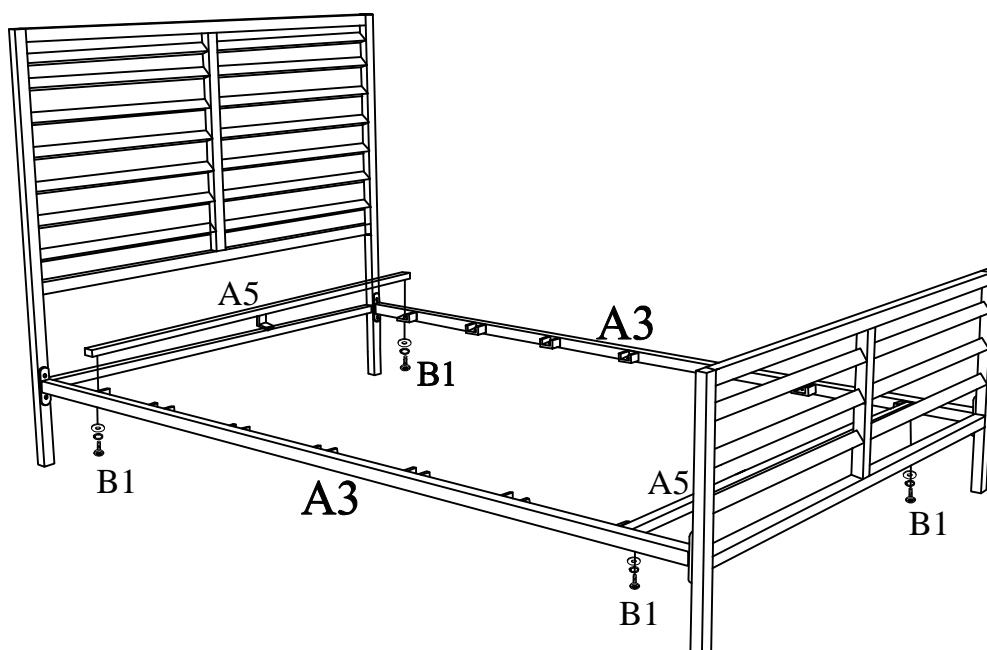
B1  4SETS



Assemble End Slats (A5) to Side Rails (A3) using Bolts with Washers (B1).  
NOTE: Please do not tighten the bolts B1 until step 5.

## Step 3


B1    4SETS

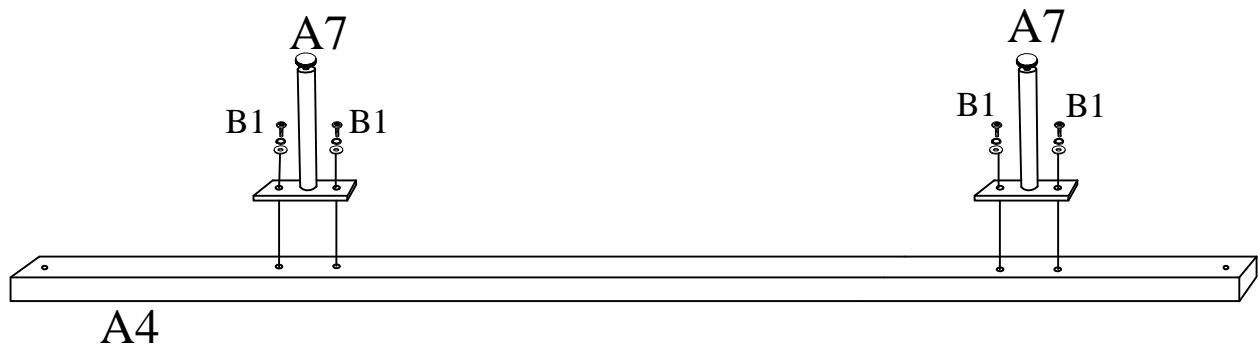

Assemble Legs (A7) to Support Rail (A4) using Bolts with Washers (B1).

## Step 4


B1    2SETS

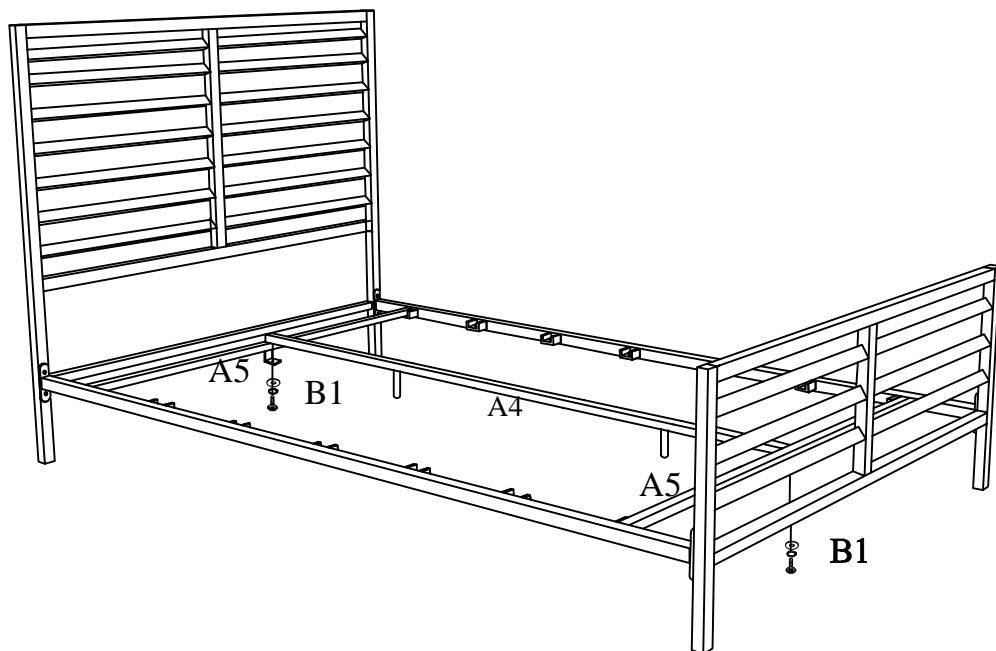

Assemble Support Rail (A4) to End Slats (A5) using Bolts with Washers (B1).

# Step 5

B1  10SETS

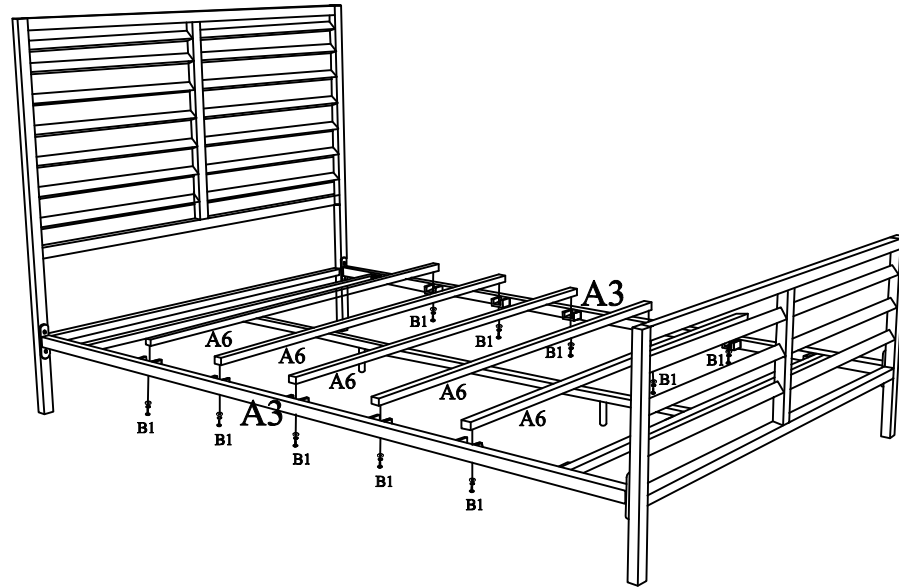


Assemble Middle Slats (A6) to Side Rails (A3) using Bolts with Washers (B1).

NOTE: Please tighten all bolts at this step and periodically check them to avoid loosening.


- \* If you find one or two B1 could not be tighten or even screwed in, Please just leave it as is would not affect the whole bed construction.
- \* The weight load on the bed should never exceed 800lbs. Exceeding this weight limit may cause the bed to collapse, resulting in serious personal injury and or property damage.

## APPENDIX: Dimension of Hardwares in this AI.


B1.

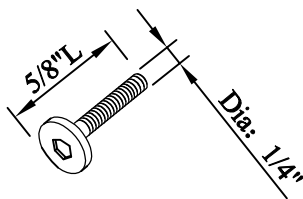

Bolt

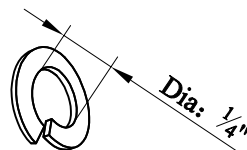


Flat Washer

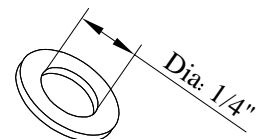


Spring Washer


B2.

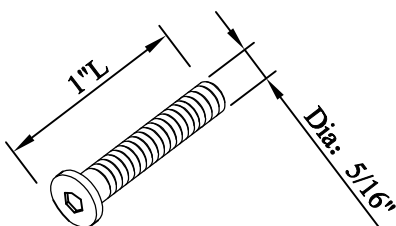

Bolt

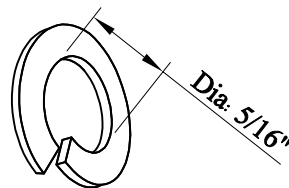

Flat Washer

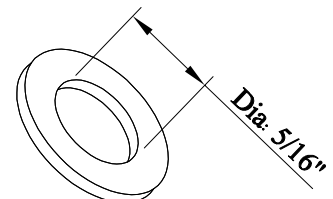

Spring Washer