




Assembly Intruction

INTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING


NEED ASSEMBLY ASSISTANCE? CALL US AT 866-814-8325

1

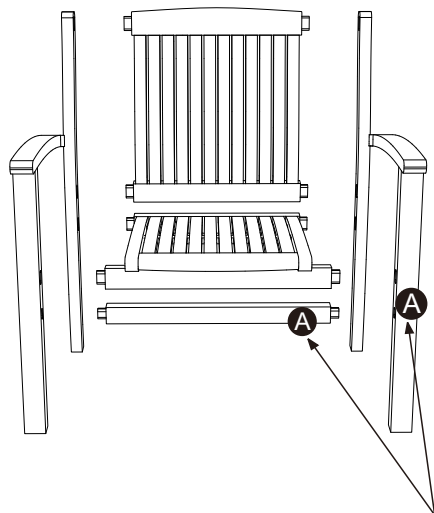


**MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING**

2

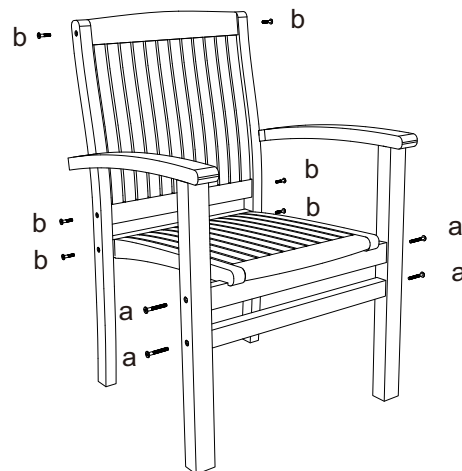

3

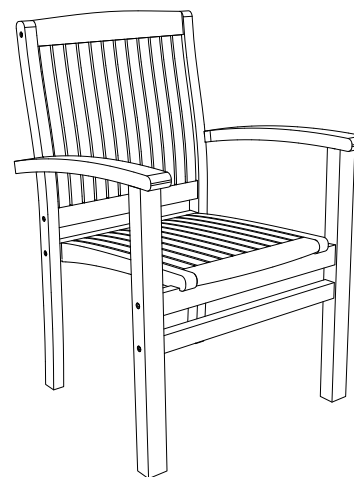


Make sure to use Gorilla Glue (Included)
on all wood joints before assembly

Code

HJ002AC


Hardware

a



BOLT 2' (4 pcs)

b



BOLT 1,2' (6 pcs)

Tool



Socket Wrench 4mm

Total Section

5 Section