

BARNDOOR

HARDWARE




HARDWARE KIT

FOR SLIDING SINGLE WOOD DOORS




MODEL No. 5APD10649

INSTALLATION MANUAL

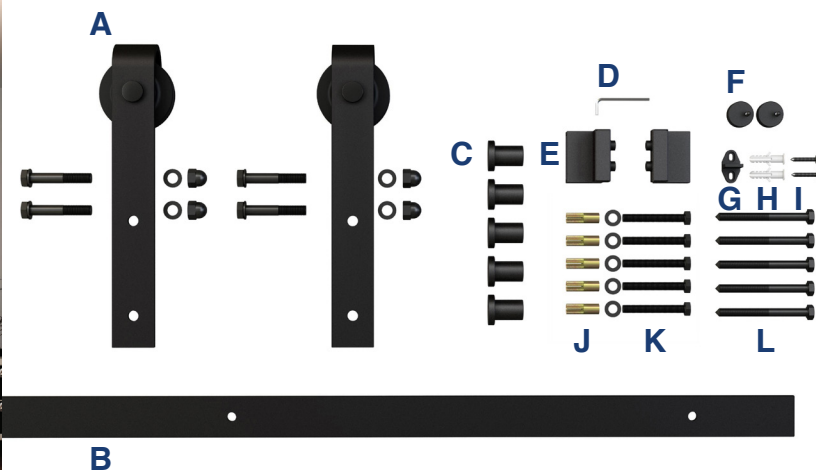



TOOLS REQUIRED

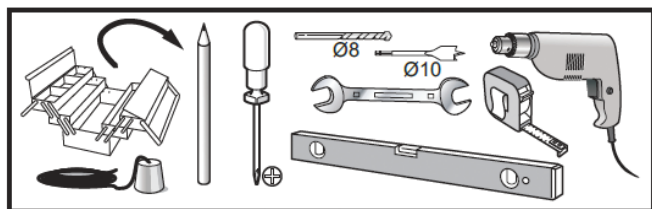

- Plumb Line
- Pencil
- Phillips Head Screwdriver
- 8mm Drill Bit
- 10mm Routing Drill Bit
- Wrench
- Level
- Tape Measure
- Power Drill

INCLUDED IN KIT

A	Door Roller Hardware	x2
B	78" Rail	x1
C	Wall Bracket	x5
D	2.5mm Allen Key	x1
E	Door Stop	x2
F	Anti-Jump Disk	x2
G	Routed Floor Guide	x1
H	Floor Anchor	x2
I	ST4.2x25 Screw	x2
J	M8x30 Wall Anchor	x5
K	M8x60 Bolt + Washer	x5
L	M8x90 Bolt	x5

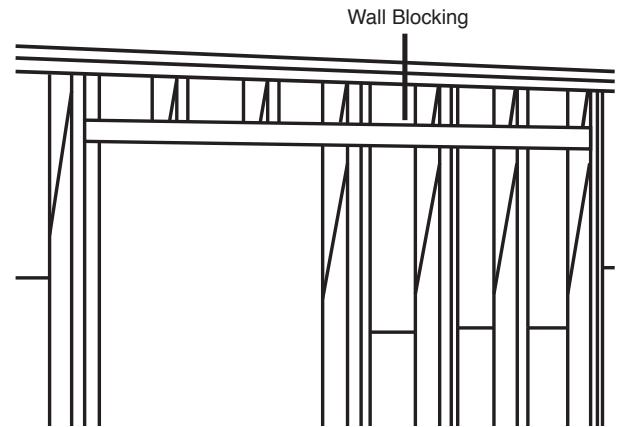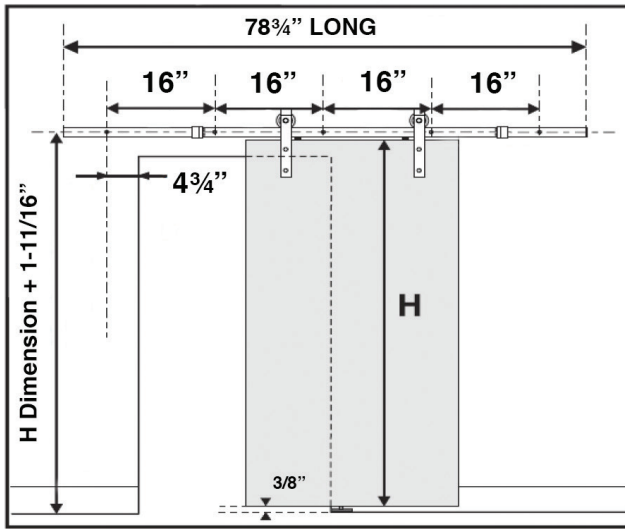


NOTES


Minimum door overlap on guide is 4-3/4"

To obtain maximum weight capacity, all fasteners must be mounted into solid wood studs or wall blocking or mounted to a header board.


Consult a structural engineer if you have questions about what type of wall blocking is required.

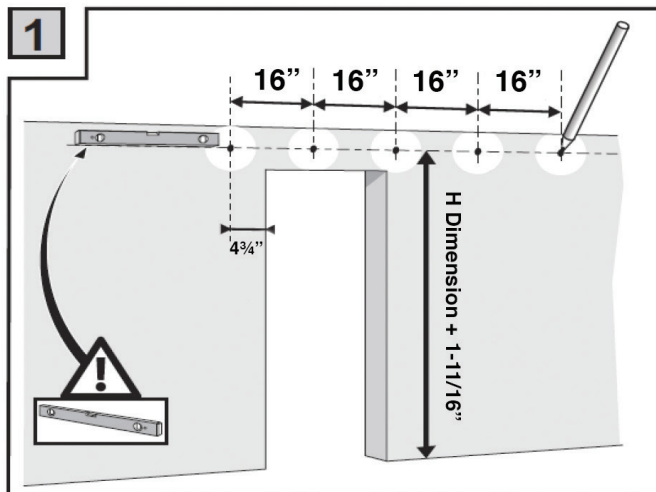

Find the centerline of the track. Using a level, mark a horizontal line twice the door width long. Mark the bracket screw locations into the wall blocking. Attach the wall portion of the brackets as shown.

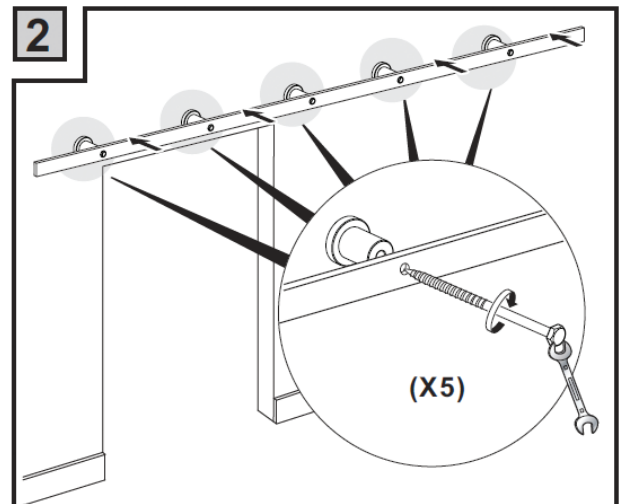

Attach the rail to the wall brackets using a wrench to fasten the bolts as shown.

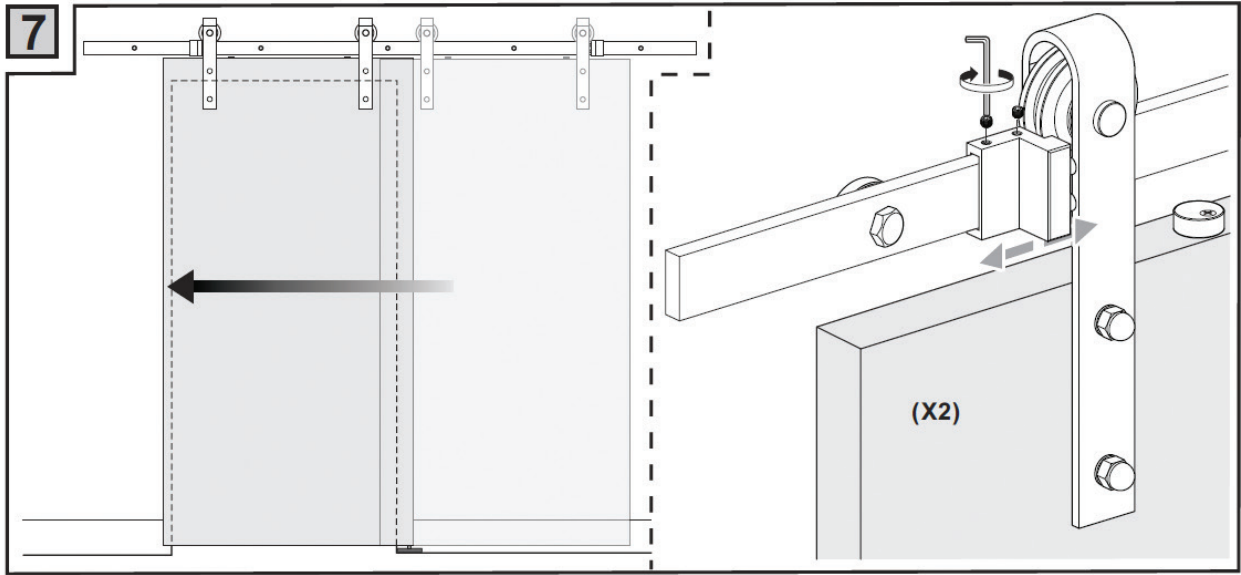

Adjust the door stops accordingly using the provided 2.5mm Allen key.