


## ASSEMBLY INSTRUCTIONS

1. Carefully lay out all parts in a line on a flat surface.
2. Thread the rod onto the base.
3. Thread the socket assembly into the rod.
4. Thread the threaded rod into the top of socket assembly.
5. Place the washer and the shade over the top end of the threaded rod and secure with finial (DO NOT OVERTIGHTEN)
6. Install bulb(s) (not included).

**CAUTION** - Refer to the wattage caution label located near the lamp holder for the maximum wattage-do not exceed the maximum wattage.

**WARNING** - Do not attempt to replace the bulb(s) while the lamp is plugged into a wall receptacle.

7. Insert the polarized plug to wall outlet and use the switch to turn the lamp on or off.

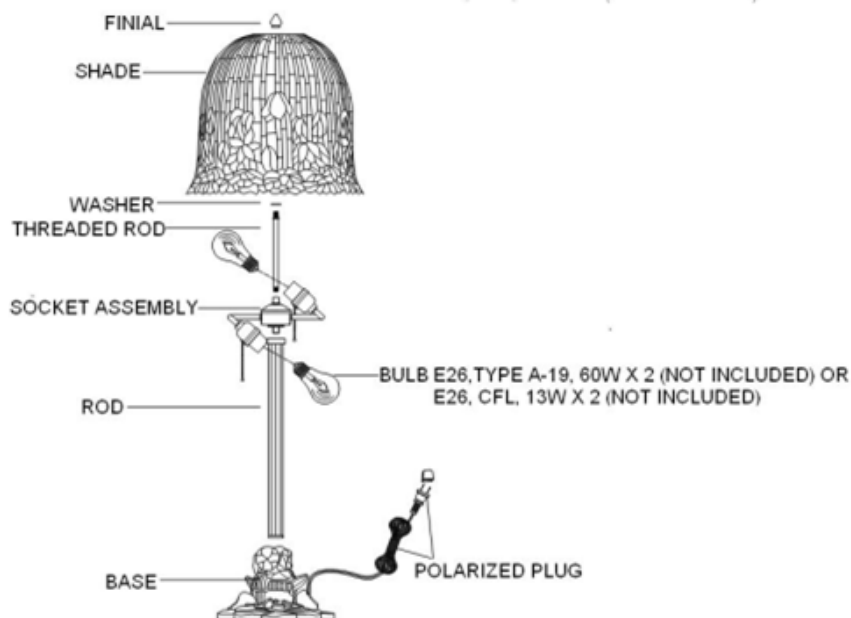

Note: The diagram illustrates the installation of your new luminaire. This is a representative drawing and is not intended to match the style of your luminaire.

Note: This stained glass product has been protected with mineral oil as part of the finishing process. Please use a soft dry cloth to remove any excess oil.

## IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

MADE IN CHINA

