

ASSEMBLY INSTRUCTIONS

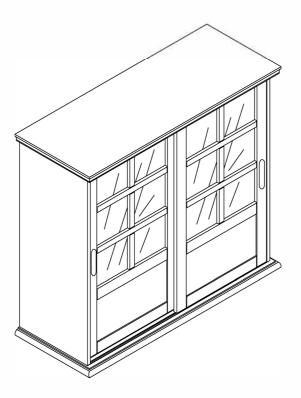


NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

Part List

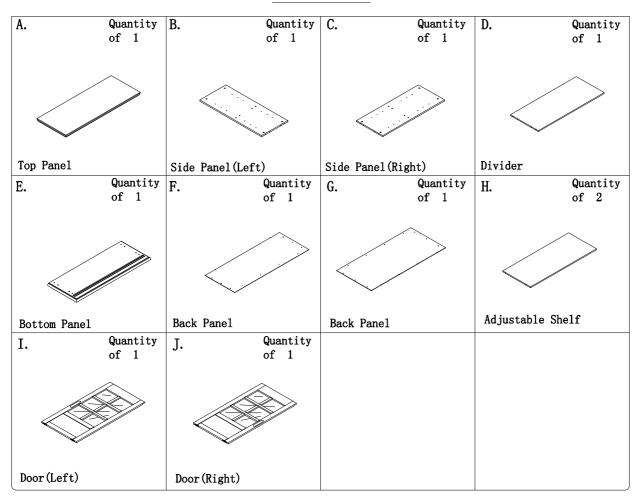

Hardware List

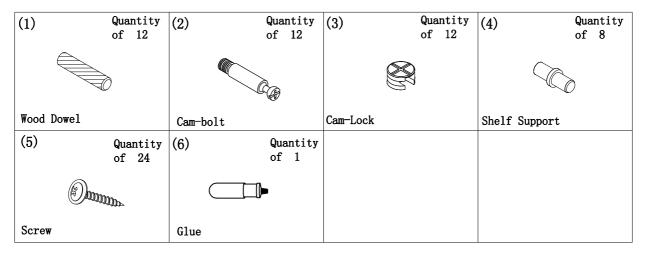


Note:

- Read these instructions carefully before assembling.
- Tools required: Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work, such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.


To use Dowels:


- 1. Add glue (about $\frac{1}{4}$ full) in the hole(s) of each board to be joined.
- 2. Insert the Dowel(s) and join boards.
- 3. Wipe excess glue with a damp paper towel.

To use Cam Locks:



STEP 1



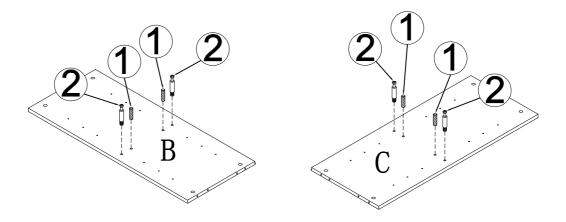


Insert Wood Dowels (1) and Cam-bolts (2) into the holes on Side Panels (B&C), then tighten Cam-bolts (2).

STEP 2





4pcs

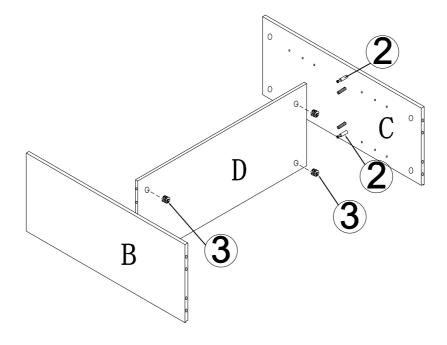


Attach Side Panels (B&C) to Divider (D), then using Cam-locks (3) to catch inserted Cam-bolts (2) on Side Panels (B&C).




8pcs

8pcs

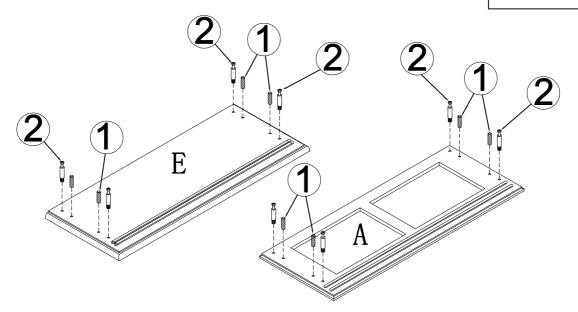

Insert Wood Dowels (1) and Cam-bolts (2) into the holes on Top Panel (A) and Bottom Panel (E), then tighten Cam-bolts (2).


STEP 4

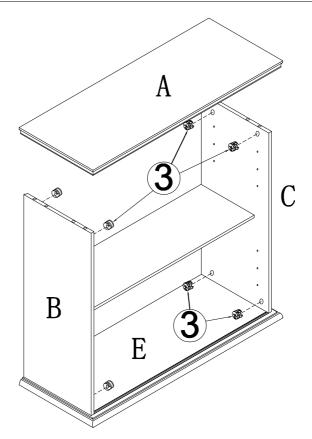

3 **8** 8pcs


Attach Bottom Panel (E) and Top Panel (A) to Side Panels (B&C), then using Cam-locks (3) to catch inserted Cam-bolts (2) on Top Panel (A) and Bottom Panel (E).



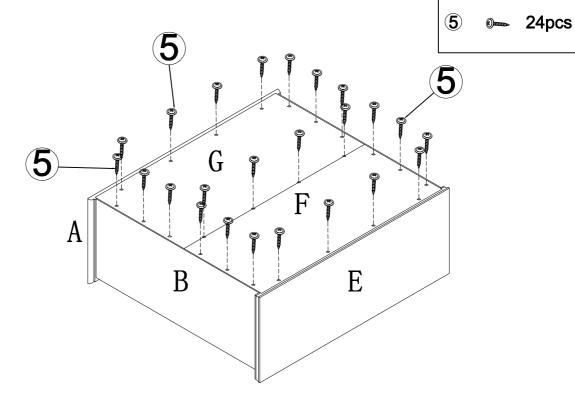


Attach Back Panels (G&F) to the back of this unit using Screws (5).



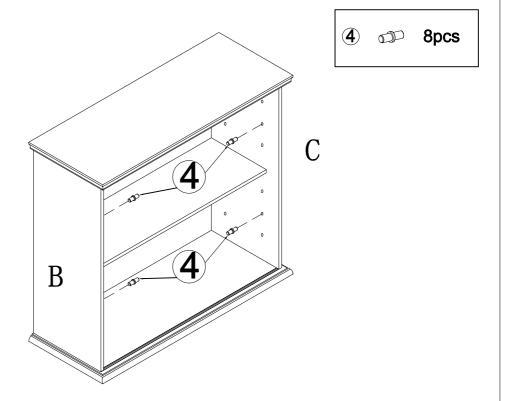


Insert Shelf Supports (4) into the holes on Side Panels (B&C).

STEP 7

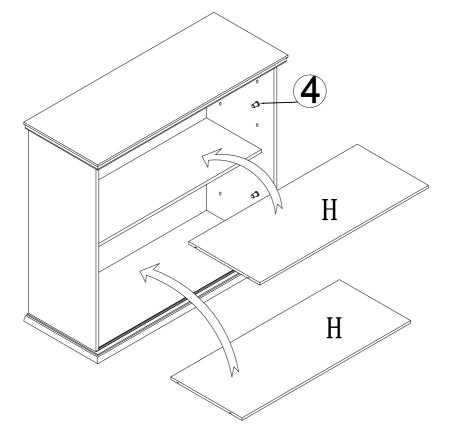

Place Shelves (H) on the top of Shelf Supports (4).


STEP 8

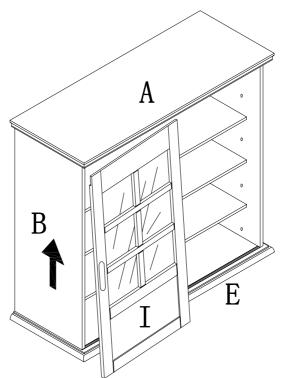

Insert Door (I) to Top Panel (A) and Bottom Panel (E) as above drawing shown.

NOTE: Please make sure to slightly incline the door so that the groove on top of the door can catch the glide on top panel.

STEP 9

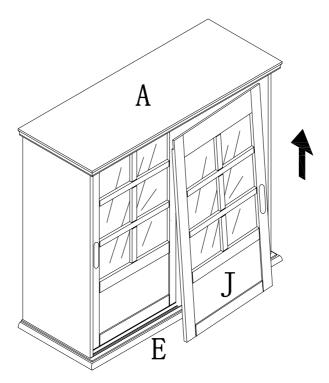

Repeat step 8 to assemble the other Door (J).