


Step 1

- 1.) Place Ottoman on its side to expose bottom.
- 2.) Insert screws into pre-drilled holes in feet.
- 3.) Place the feet onto ottoman aligning screws into holes and tighten with screw driver.

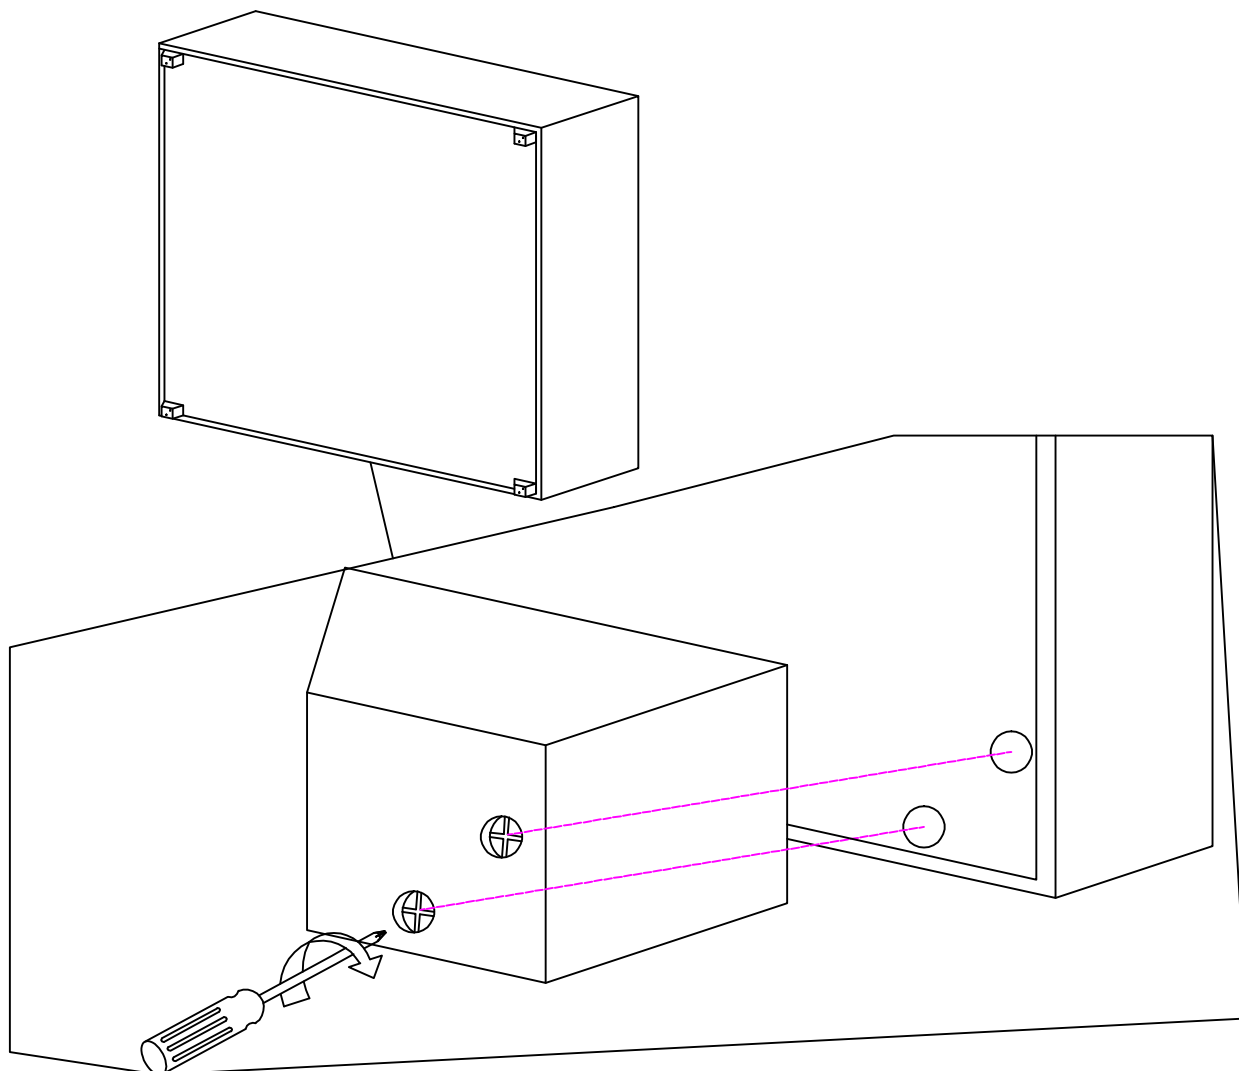

Step 2

- 1.) Snap screw caps into position.

