
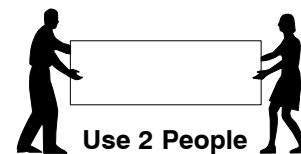


Queen Bed

Assembly Instructions


WII-0419

1 Assembled View

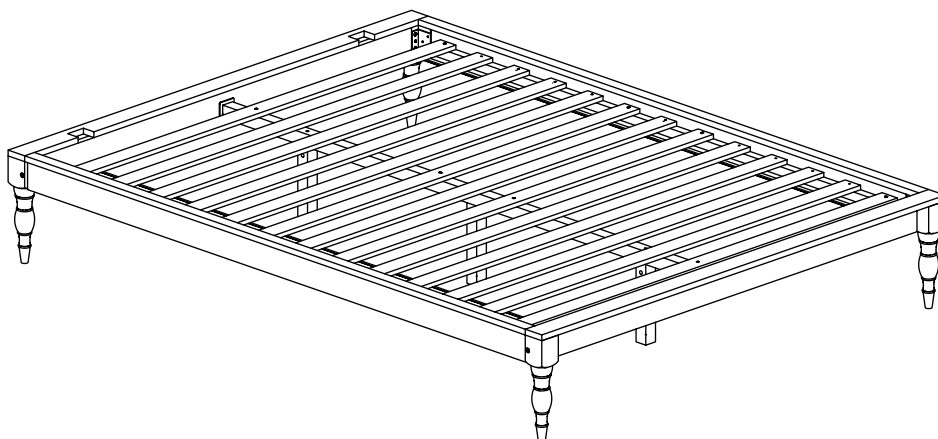


Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts List

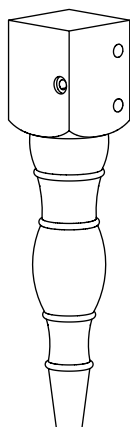


A

Post
(Left hand)
x 2

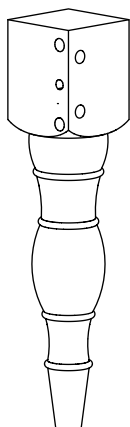


B

Post
(Right hand)
x 2

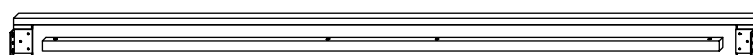

E

Side Rail **x 2**

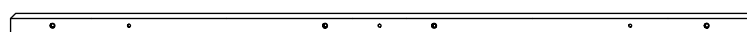

F

Long Support **x 1**



G

Support
Leg **x 3**



C


Headboard
Panel **x 1**

Extra Holes



D

Footboard Panel **x 1**

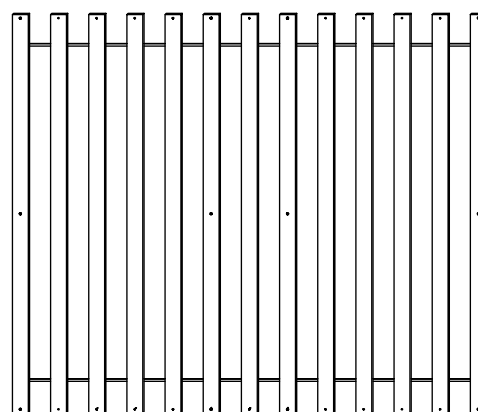

H


Set of Bed Slats **x 1**

Queen Bed


Assembly Instructions

WII-0419


3 Hardware List

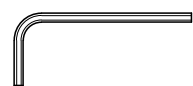


1 M4 Allen Key
x 1

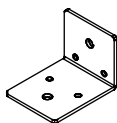

2 Center Rail
Bracket x 2

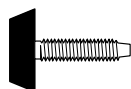

3 Adjustable
Foot x 3

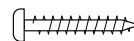

4 Wood Screw
(M4 x 32mm) x 18



5 Wood Dowel
(10 x 40mm) x 8



6 Barrel Nut
x 7



7 Spring Washer
x 12



8 Flat Washer
x 12



9 M6 x 15mm JCB
x 4



10 M6 x 20mm JCB
x 8



11 M6 x 40mm JCB
x 16




12 M6 x 100mm JCB
x 4




13 M6 x 90mm JCB
x 3

4 Assembled the Support Legs (G) to the Long Support (F).

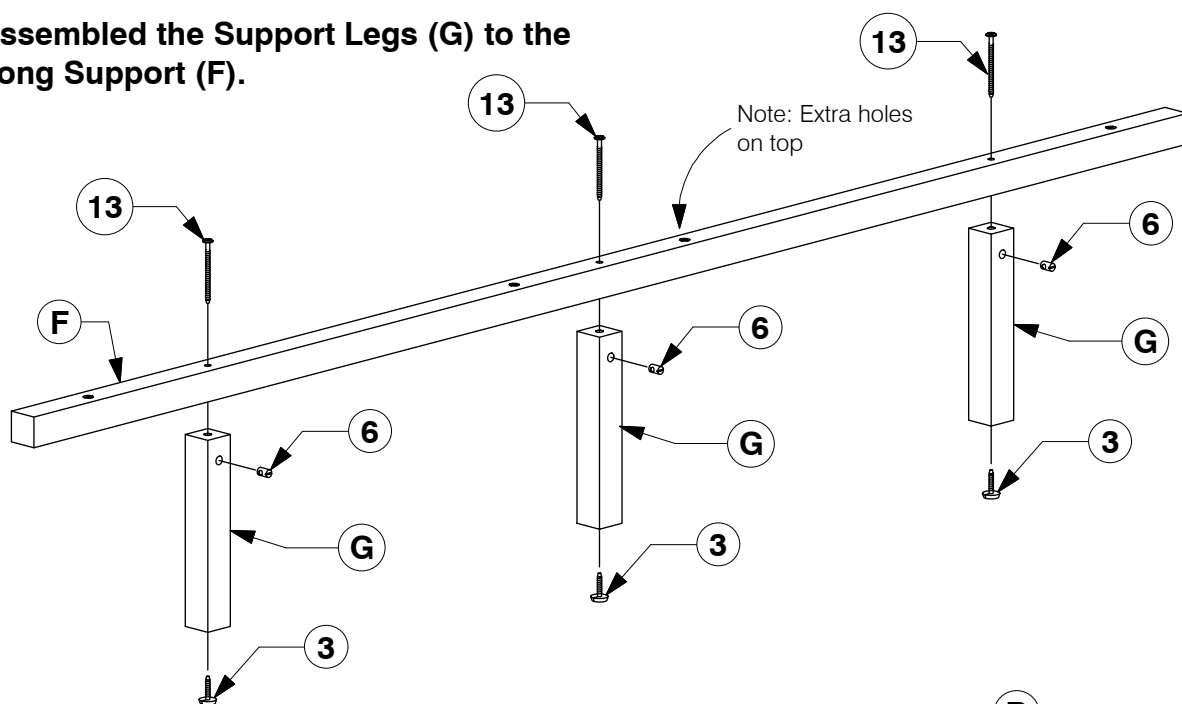

5 Assemble the Post (A & B) to the Headboard Panel (C). Fit the Center Rail Bracket to the Headboard Panel (C).

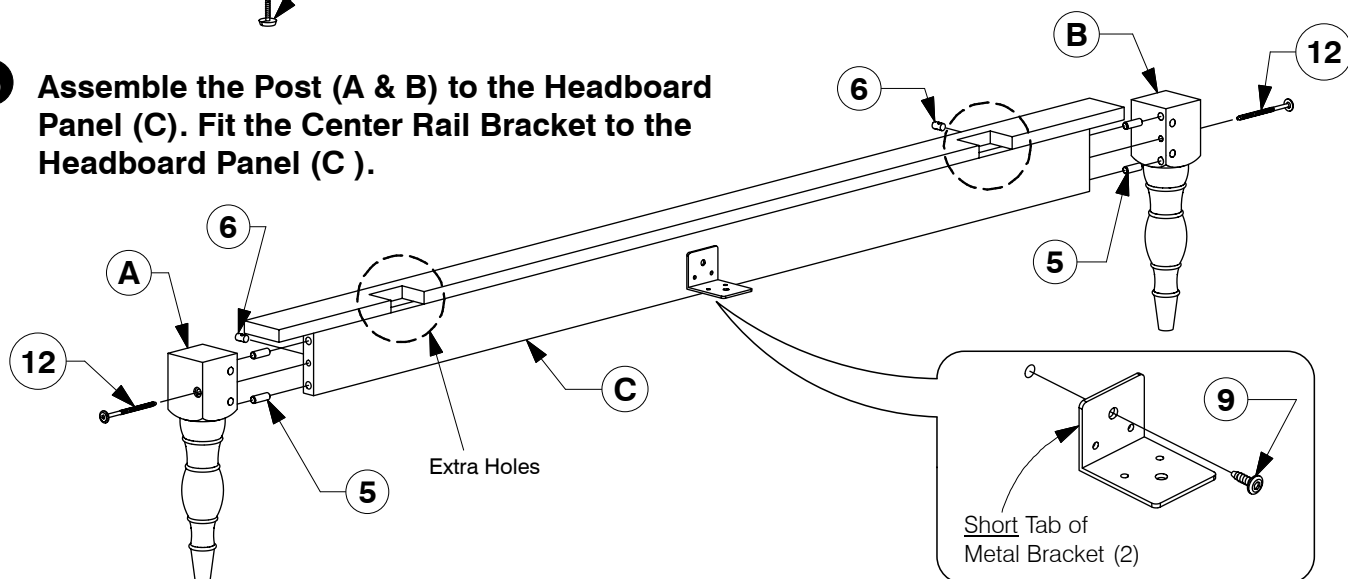


Queen Bed


Assembly Instructions

WII-0419

- 6 Assemble the Post (A & B) to the Footboard Panel (D). Fit the Center Rail Bracket to the Footboard Panel (D).**

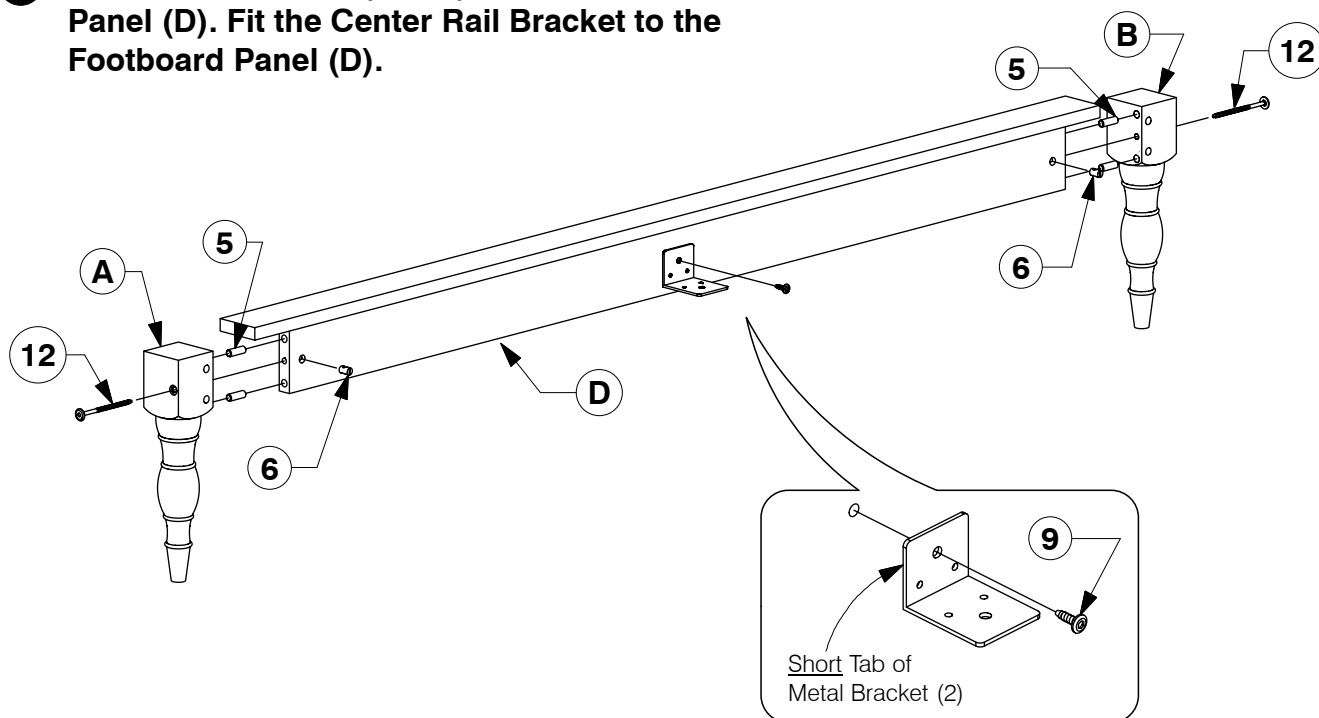

- 7 Assemble the Side Rail (E) to the Headboard & Footboard Panel (C & D).**

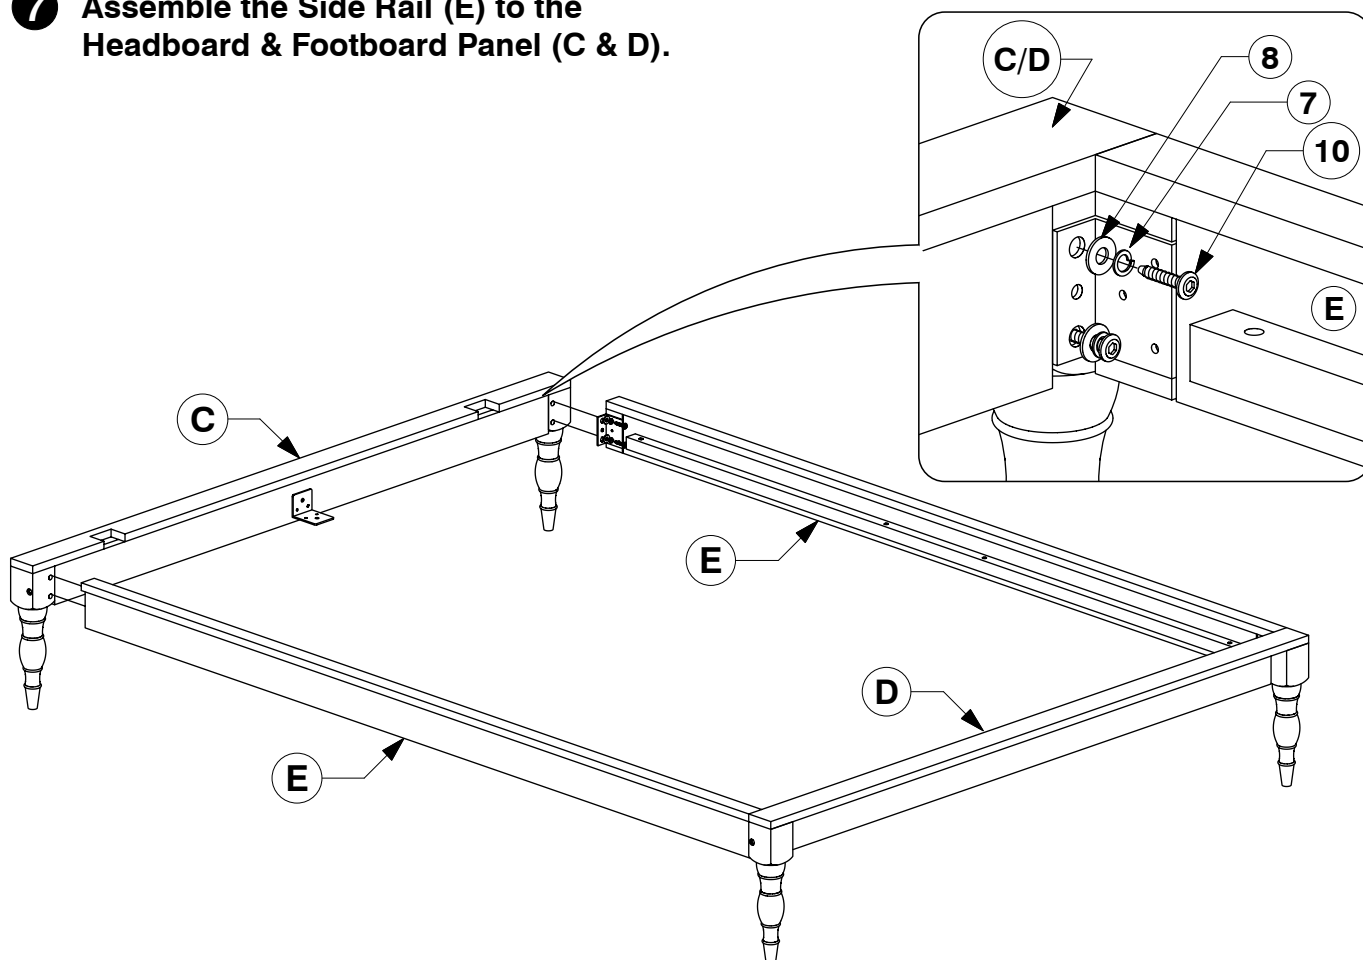


Queen Bed


Assembly Instructions

WII-0419

- 8 Bolt the Long Support (F) to the Center Rail Brackets (2) on the Headboard & Footboard Panel (C & D).**

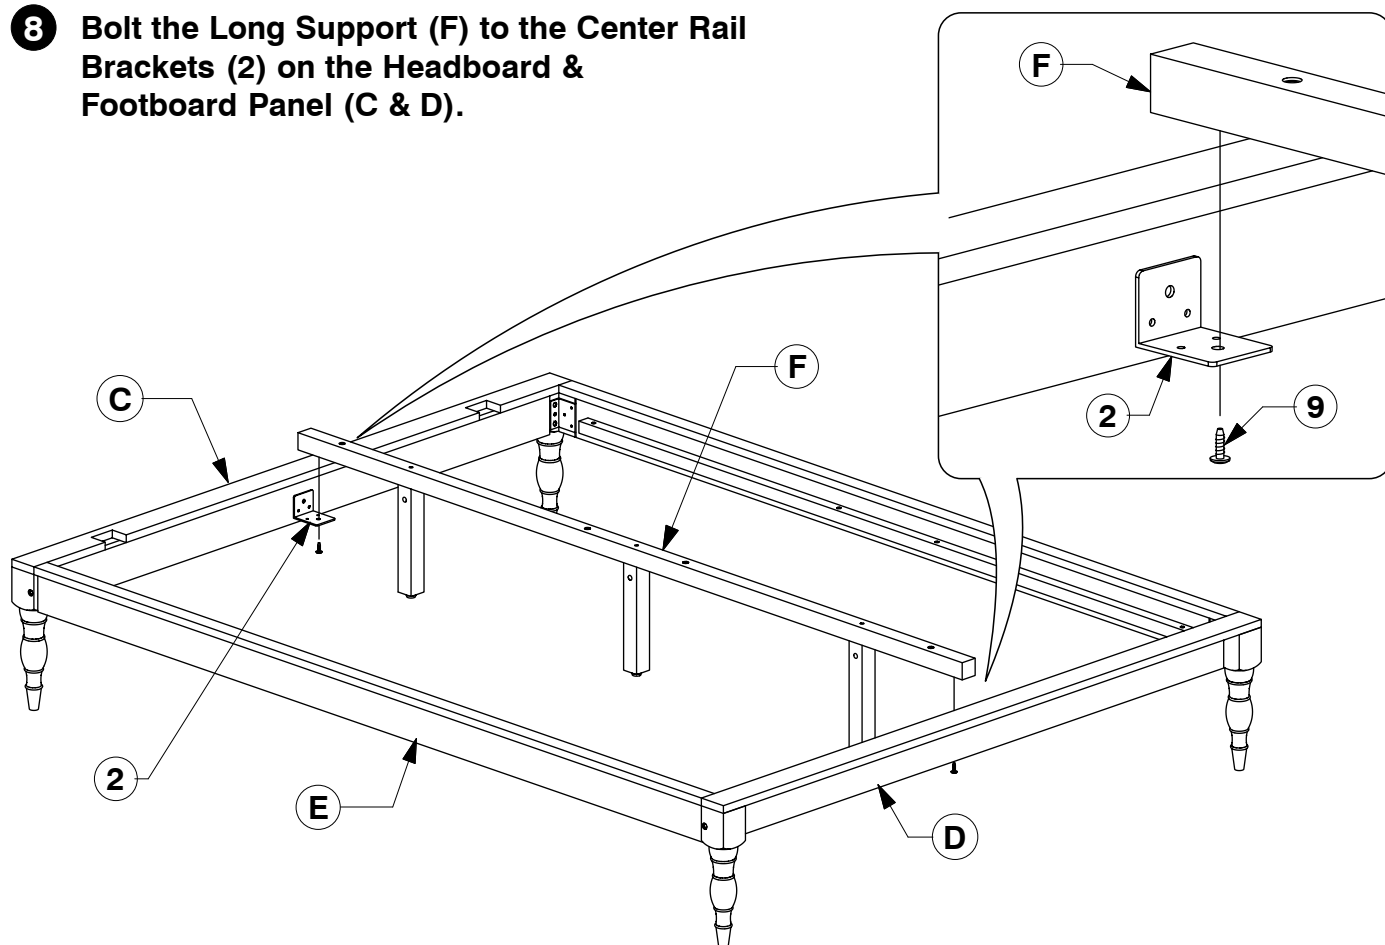

- 9 Bolt & screw the Bed Slats (H) to the Side Rail (E).**

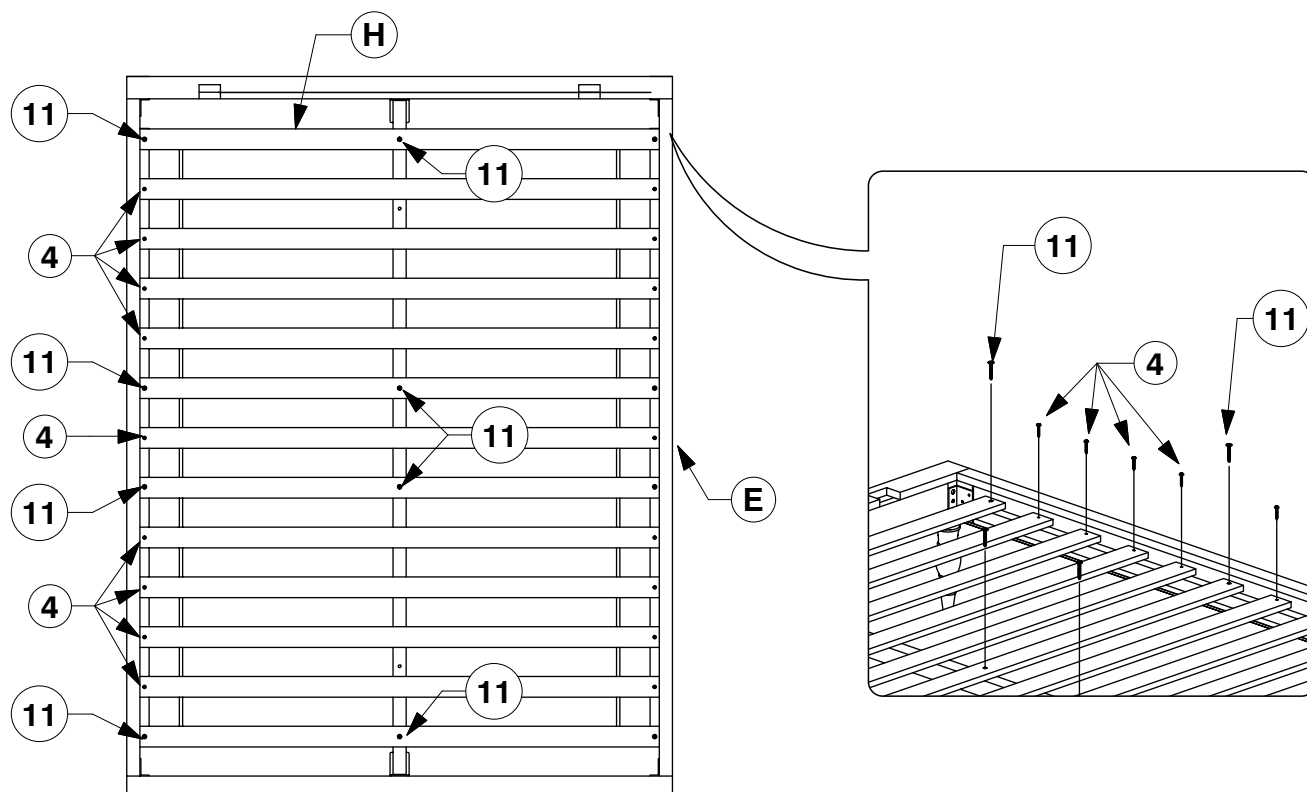


Queen Headboard


Assembly Instructions

W11-0419


1 Parts List

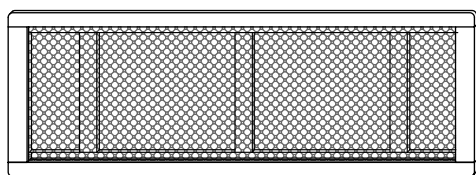

(A) Headboard Panel x 1

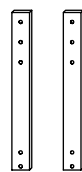

(B) Support Bar x 2

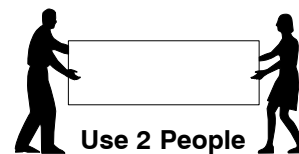

2 Hardware List



1 M6 x 35mm JCB
x 6



2 Spring Washer
x 6




3 Flat Washer
x 6




4 Allen Key
x 1

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

3 Assemble the Support Bars (B) to the Headboard Panel.

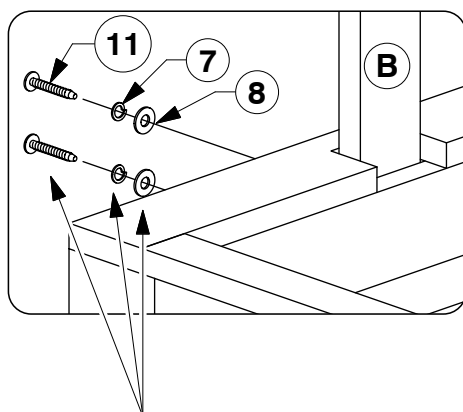

Note: Bolts & Washers from Footboard, Rails & Slats Box.

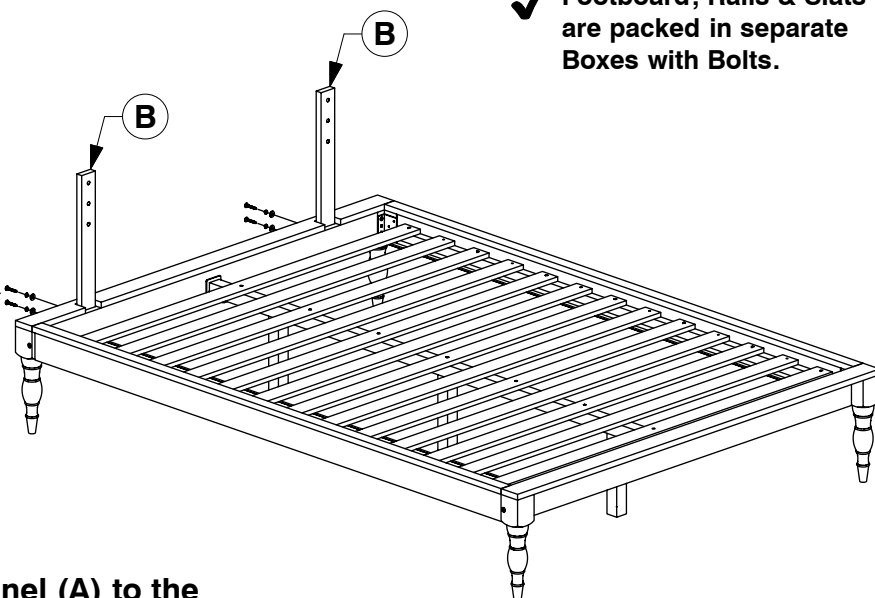

4 Assemble the Headboard Panel (A) to the Support Bars (B).

