




6' Florence Screen Kit

w/ Planter Box
46"W x 72"H

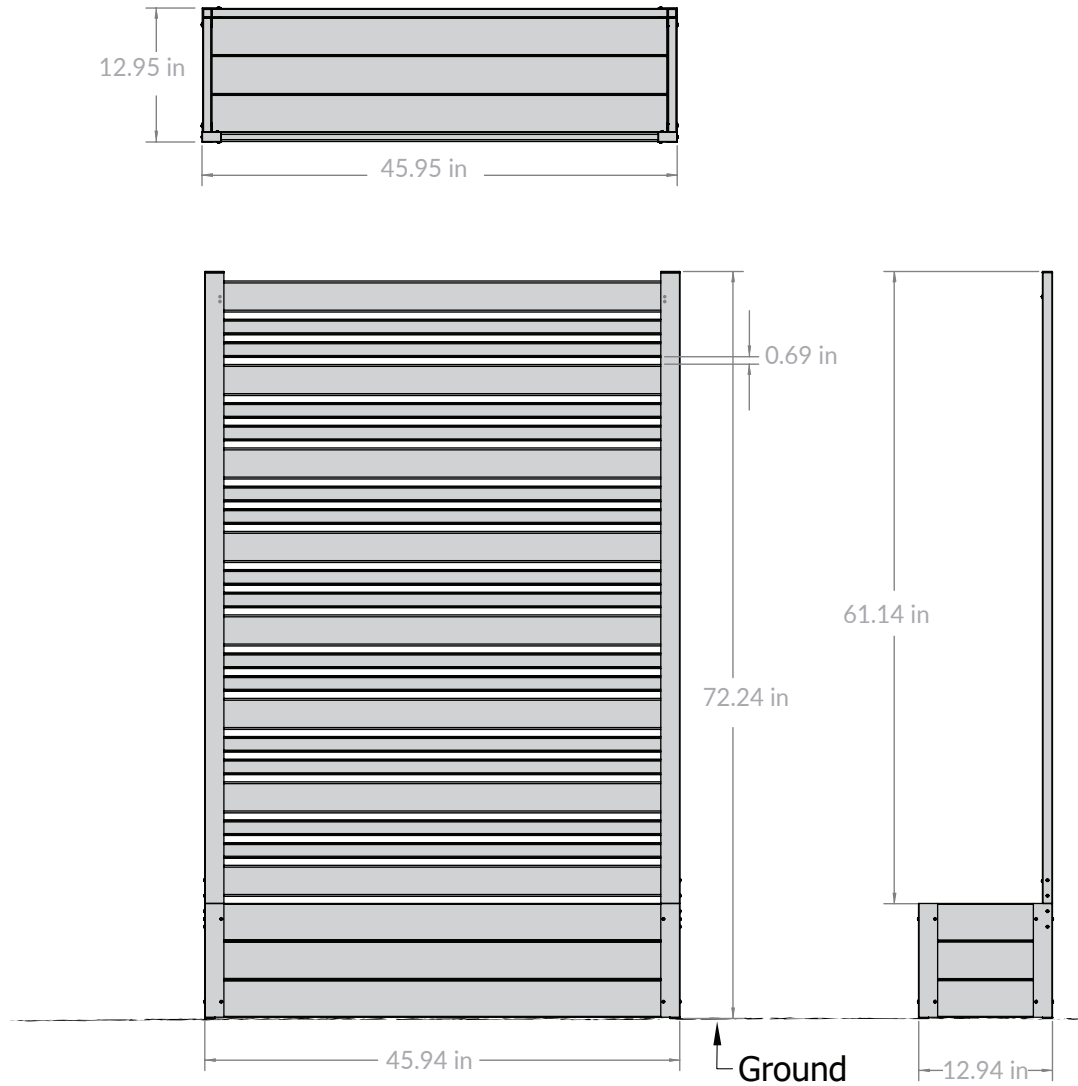

Note: For best plant growth, it is recommended to drill (2) $\frac{3}{4}$ " diameter drainage holes in the floor board roughly 12" apart.



Planter Box Depth: 8.3"

Planter Box Volume: 2.33 cubic ft (70 qts)