


INSTALLATION INSTRUCTIONS

# **Apron Sinks**

877.946.5725 Toledo, Ohio Sales@MRDirectInt.com www.MRDirectInt.com

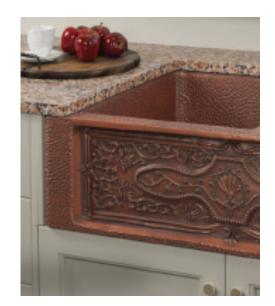

### THE INSTALLATION OF APRON SINKS

---

Apron, or farmhouse, style sinks are available in copper and stainless steel designs. Mounting techniques vary widely depending on the sink design and the homeowner's taste.

INSTALLATION INSTRUCTIONS (cont...)


## **Apron Sinks**


Options include installation at various heights, various undermount reveals, and various amounts of forward overhang of the apron front. The choices made will determine what type of additional sup-port will be necessary in the base cabinet. Presented here are just some of options and more popular mounting techniques.


### THE STEPS

- Evaluate the style of apron sink being installed, and determine the type of mounting to be done.
- ▶ Keep in mind that unlike other sink styles which are dropped into a hole in the countertop, and supported by the countertop; apron sinks are positioned through an opening in the front of the cabinet and supported, only by the cabinet.
- Measure the sink and cabinet in order to properly prepare the base cabinet.
- ▶ Install necessary support braces. Several types of supports can be customized to uphold various types of sinks in various fashions. One typical technique, using 2″ x 4″ supports, with or without a plywood platform, is shown above.
- Place sink in position on the base cabinet supports.
- ▶ Clean the surfaces of the sink and countertop which will meet, with denatured alcohol. If undermounting the sink, apply a bead of silicone along the outer edge of the sink rim in order to form a secure bond with the countertop. Attach the countertop making sure of tight contact with the sink. Re-check that the sink is properly aligned and level. Remove any excess sealant along edges.

### **APRON MOUNTING STYLES**

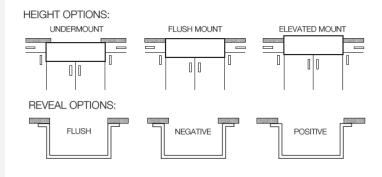

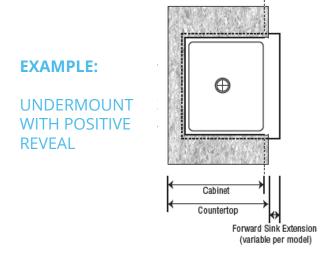

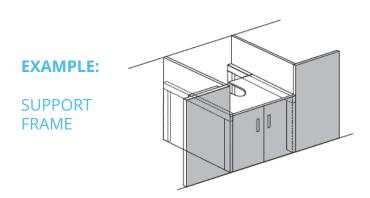





877.946.5725 Toledo, Ohio Sales@MRDirectInt.com www.MRDirectInt.com