




# ASSEMBLY INSTRUCTION FOR ACME FURNITURE






## MODEL#27975 / #27974





Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

\*\*\*Do not fully tighten screw until fully assembled\*\*\*

| DESCRIPTION | COMPONENT PARTS   |            |
|-------------|---|------------|
|             | PART NAME   | Q'TY (PCS) |
| (A)         | DRESSER         | 1          |
| (B)         | MIRROR         | 1          |
| (C)         | MIRROR SUPPORT  | 2          |

### HARDWARE REQUIRED

| NO | NAME             | PART  | QTY  |
|----|------------------|---|------|
| 1  | Allen key        |    | 1pc  |
| 2  | JCBC 35mm        |   | 8pcs |
| 3  | M6 Spring washer |  | 8pcs |
| 4  | 1/4" Flat washer |  | 8pcs |
| 5  | AC/DC Adapter    |  | 1pc  |

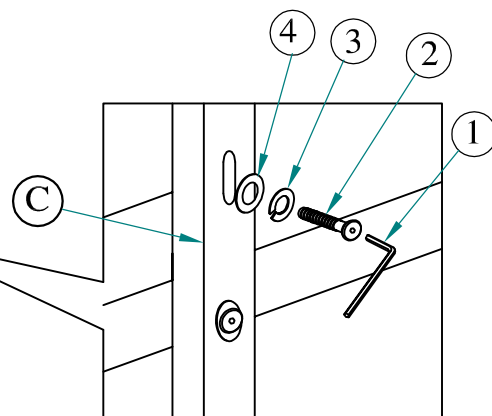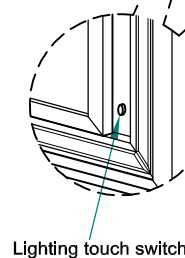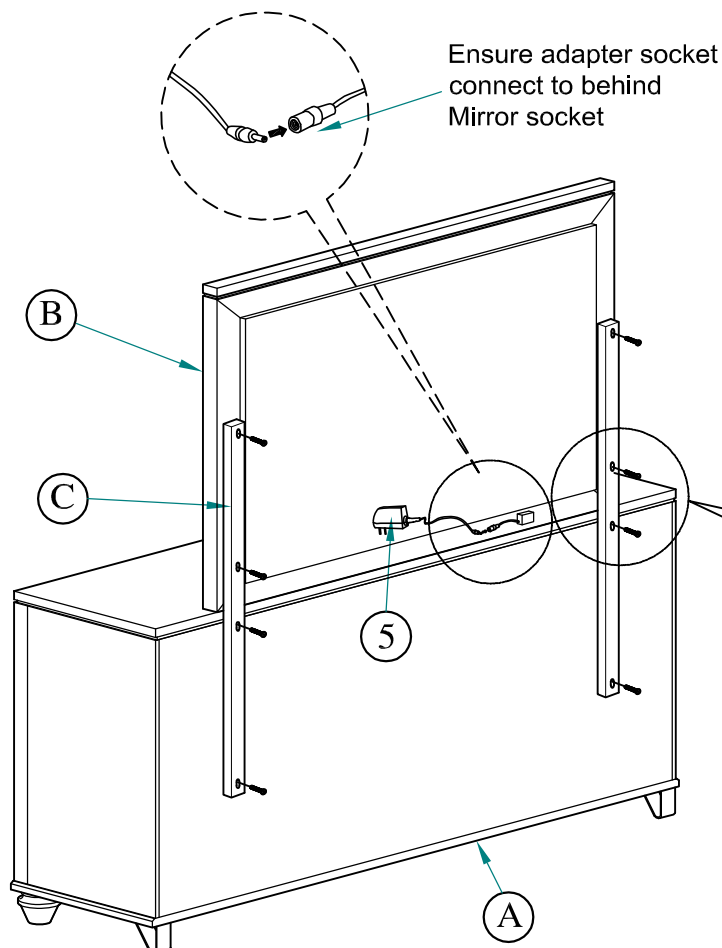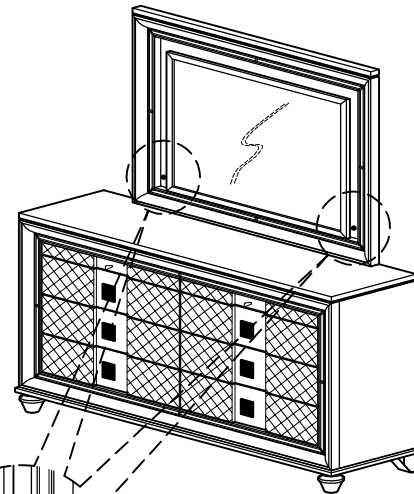

### Step 1:

Place ( B ) Mirror on the top of ( A ) Dresser as diagram shown. Align Mirror to the center of Dresser and tighten with ( 2 ) JCBC 35mm, ( 3 ) M6 Spring Washer & ( 4 ) 1/4" Flat Washer.