


# SP BASE ASSEMBLY

P A R T S
4 - LEGS
2 - BLOCKS
8 - BOLTS
1 - ALLEN WRENCH
4 - LEVELERS
{ 4 - 10 X 5/8 SCREWS
OR
{ 4 - GLASS TIPS

\*INSERT ALL 8 BOLTS  
FIRST - THEN TIGHTEN  
BOLTS WITH ALLEN  
WRENCH

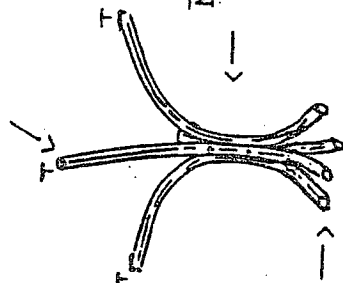

SCREW TO TOP  
W/ 5/8" SCREW ONLY  
(USE CLEAR LEVELER  
FOR GLASS)

\*NOTE: MAKE SURE METAL TABS ARE NOT  
BLOCKING HOLES. IF THEY ARE, YOU CAN  
BEND OVER WITH A SCREWDRIIVER.

THREADED HOLE  
FOR LEVELER