























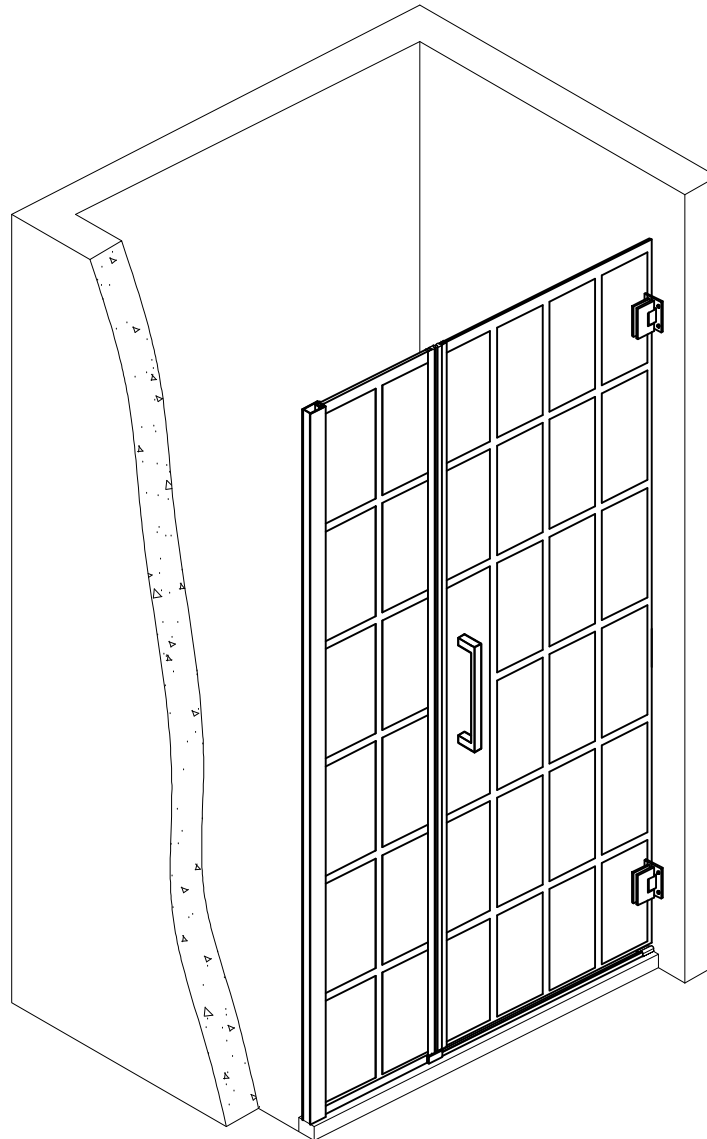


INSTALLATION MANUAL

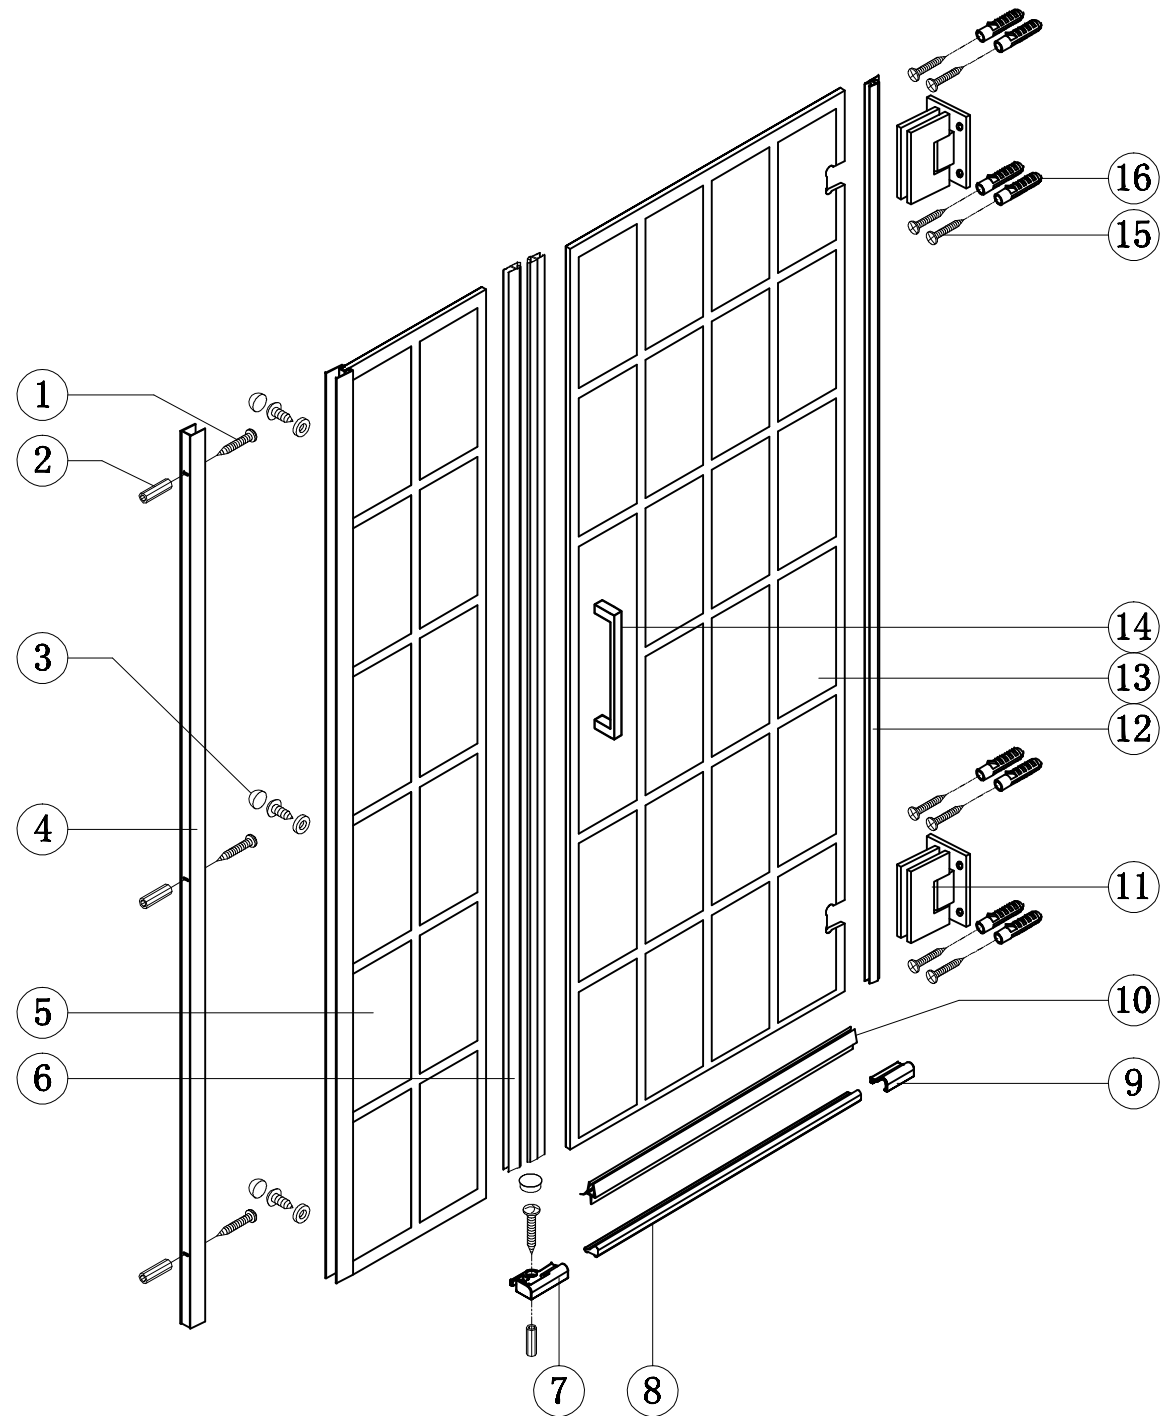




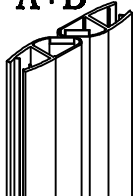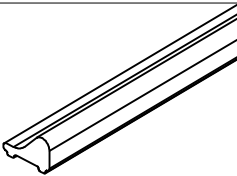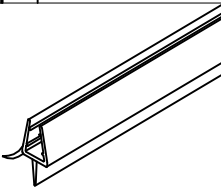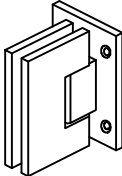

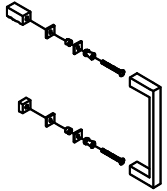
1  ST4x30  4Pcs	2  Ø6x30  4Pcs	3  ST4x12  3Pairs	4  1Pc	5  1Pc	6  1825mm A+B 1Pair
7  L  R 1Pair	8  1Pc	9  1Pc	10  1Pc	11  2Pcs	12  1Pc
13  1Pc	14  1Pc	15  ST5*35  8Pcs	16  Ø8x35  8Pcs	Tools:	

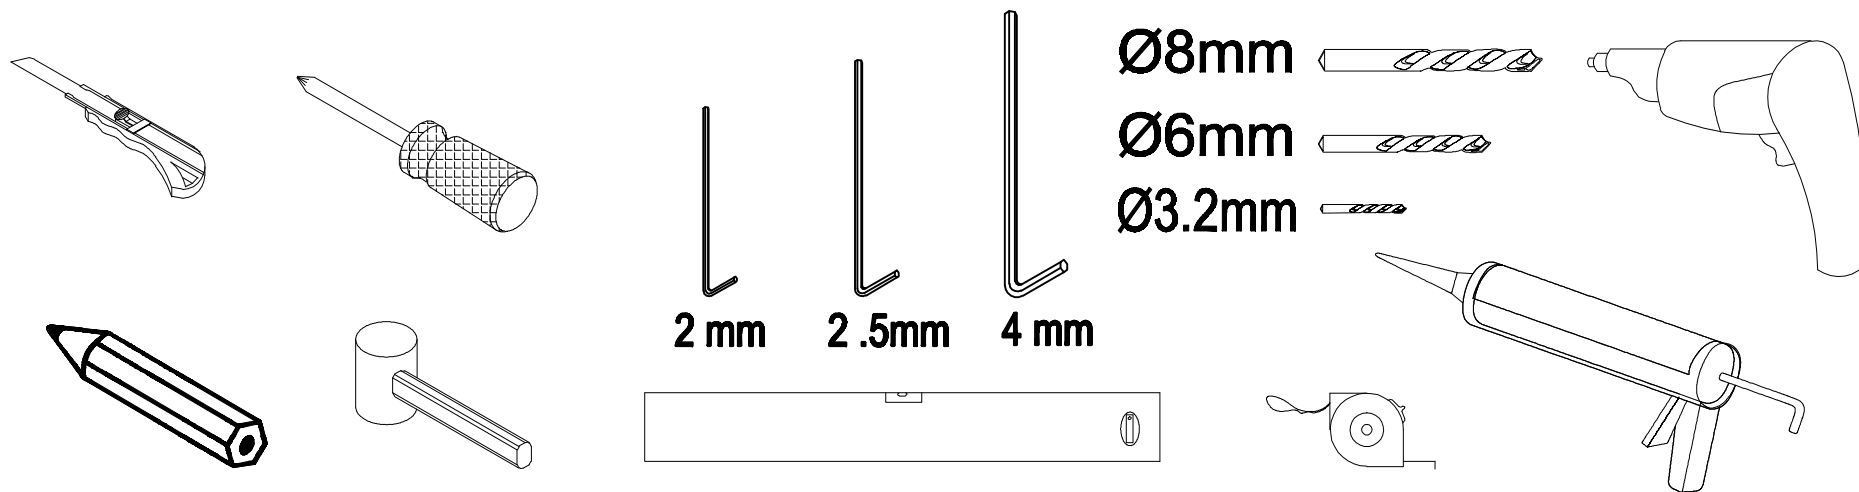







1

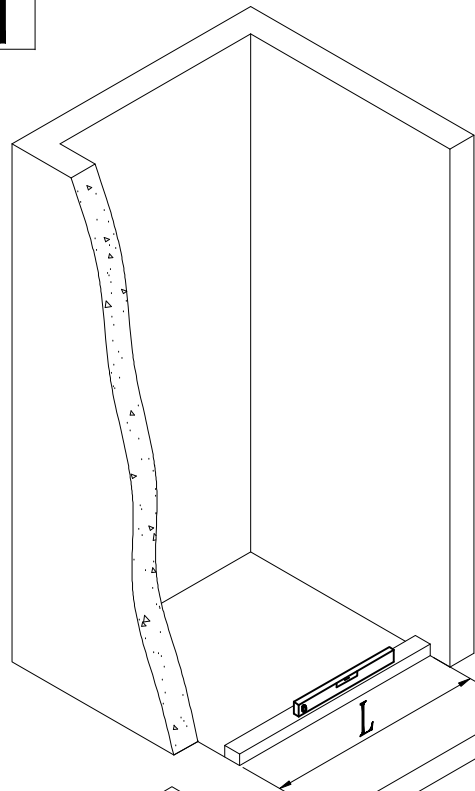





	L
865	845 - 865
1016	996 - 1016

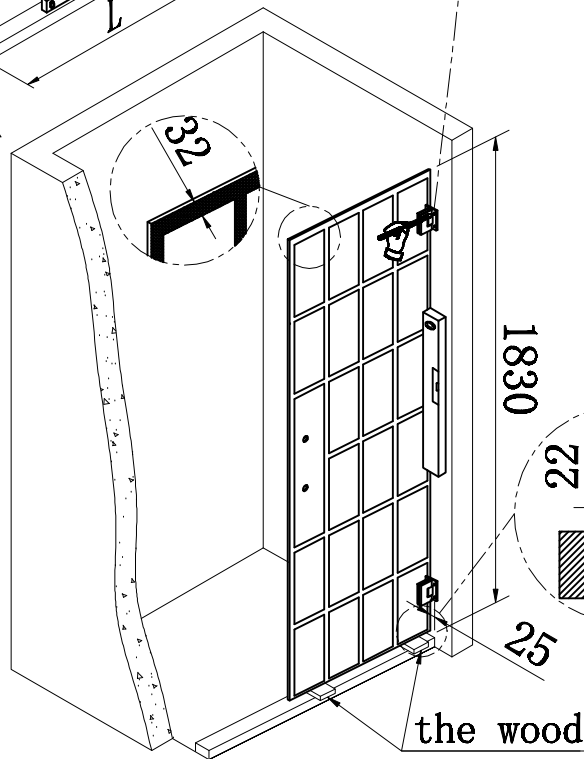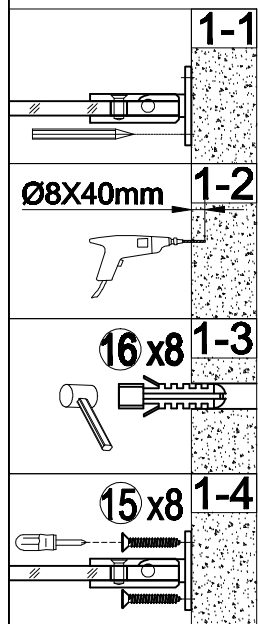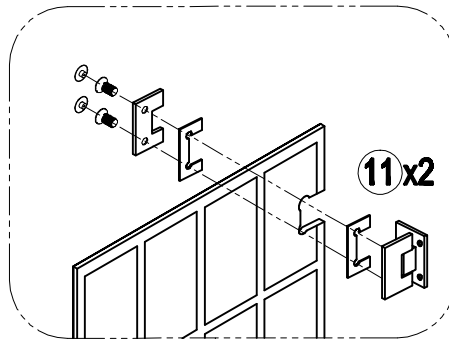


2

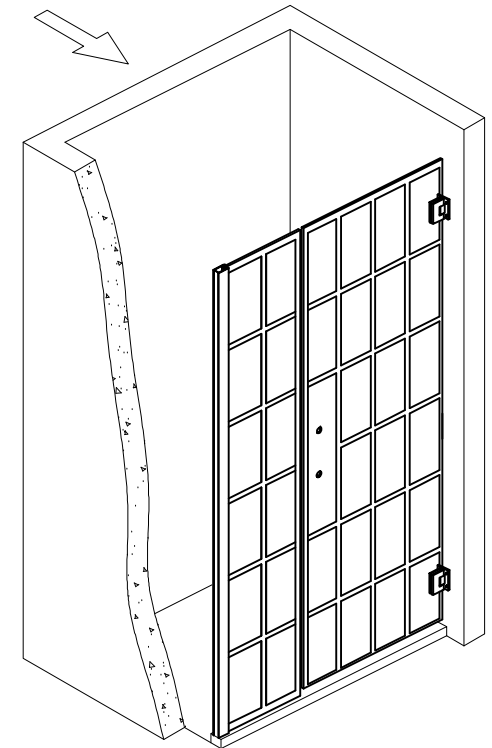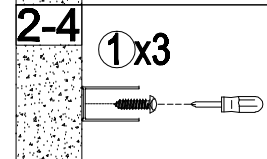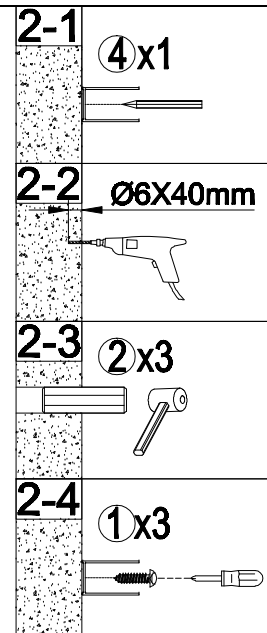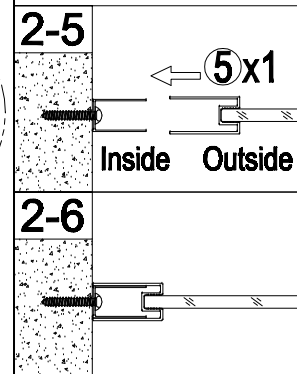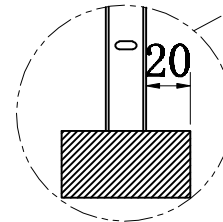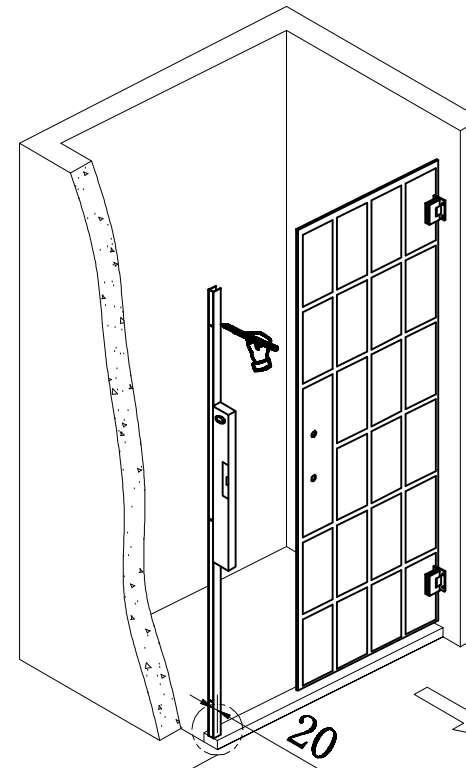


3

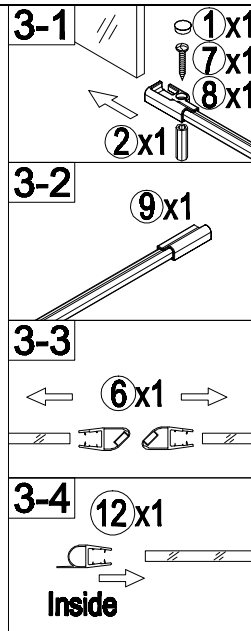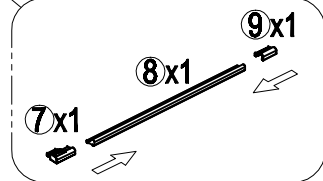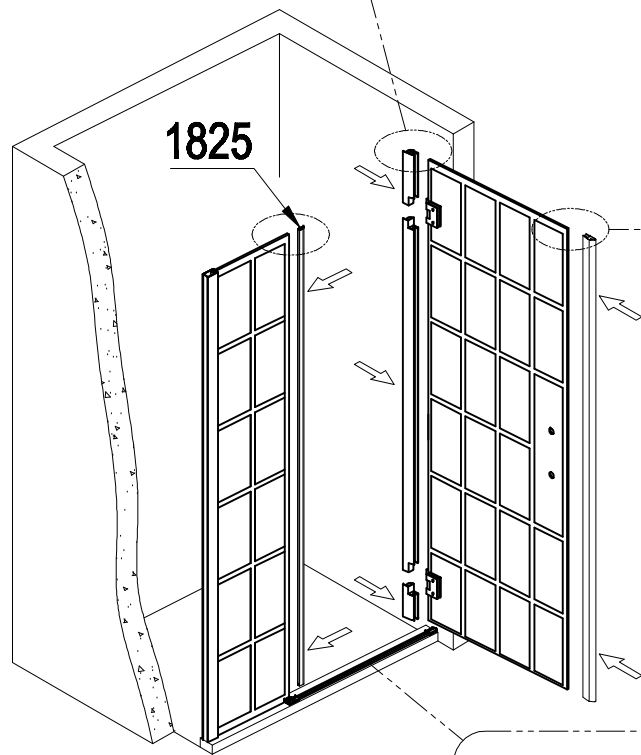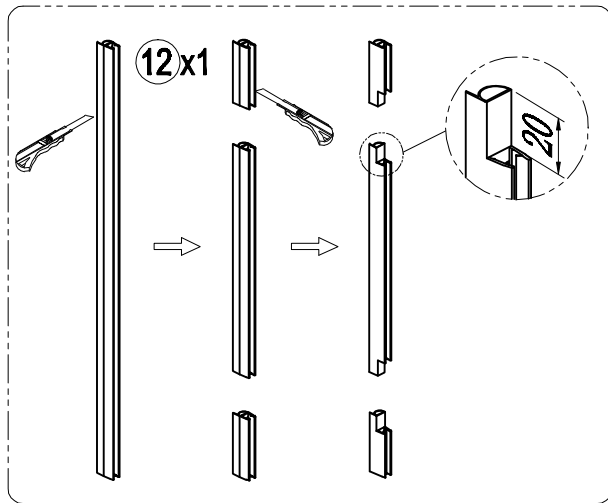



4

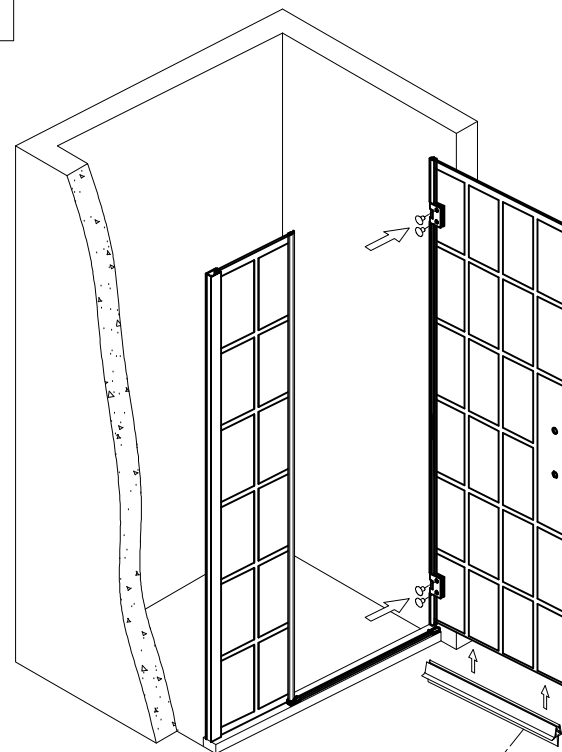

IT IS VERY IMPORTANT
TO HAVE THE BOTTOM
OF THE GLASS PARALLEL
TO THE TRAY TOP FACE,
IT MUST HAVE A 22mm EVEN
GAP ALL THE WAYALONG.

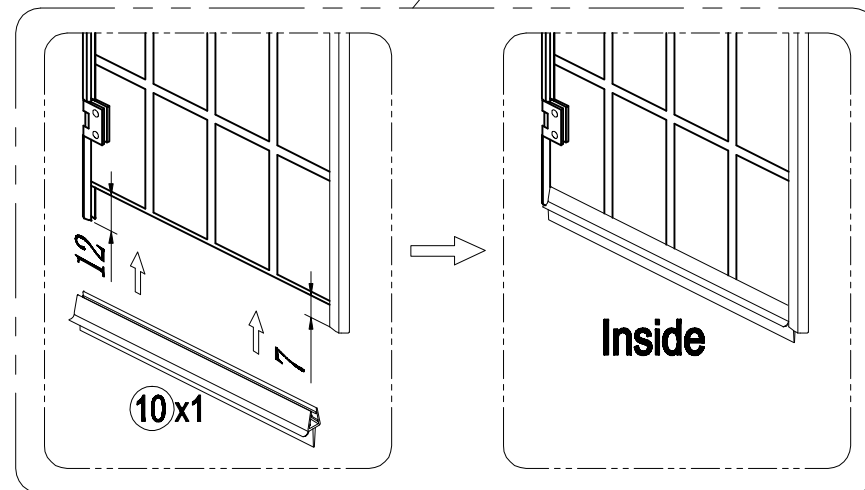

5

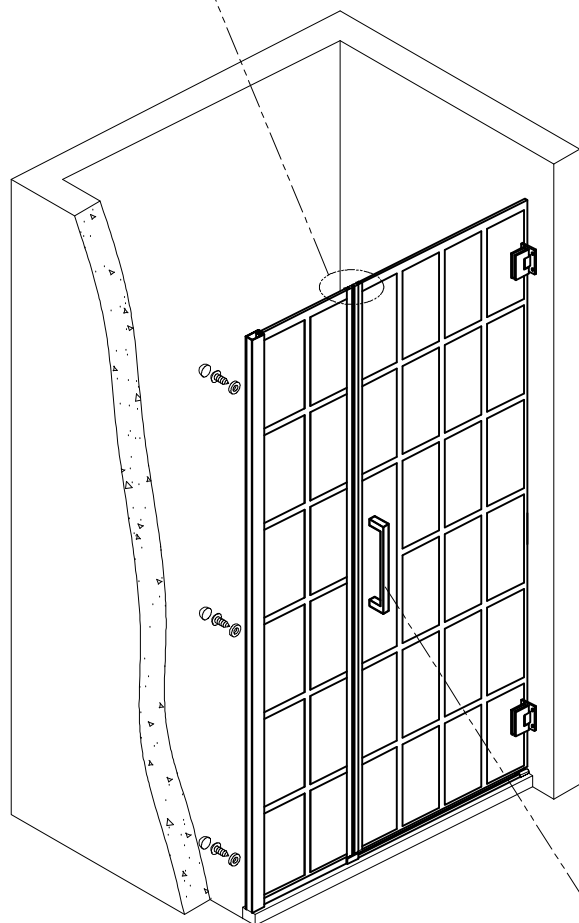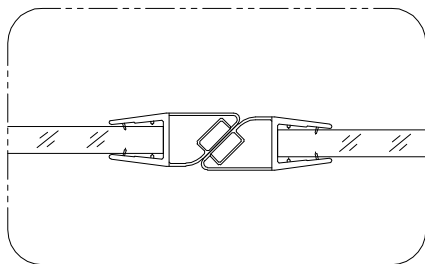

5-1


Ø3.2mm

0-20

5-2

3x3

5-3

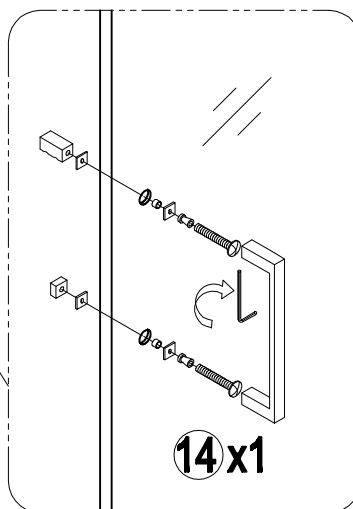

14x1

6

Care Instructions:

Do not use your shower enclosure within 24 hours of assembly .
Do not use caustic cleaning products or abrasive material when cleaning your shower enclosure.

