


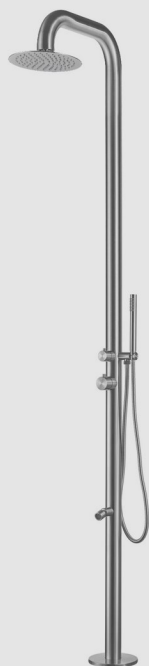


# MAX


## Outdoor Shower




[boldoutdoorshowers.com](http://boldoutdoorshowers.com)

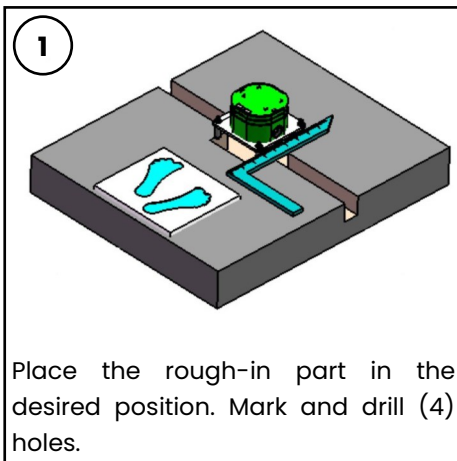


Place the rough-in part in the desired position. Mark and drill (4) holes.

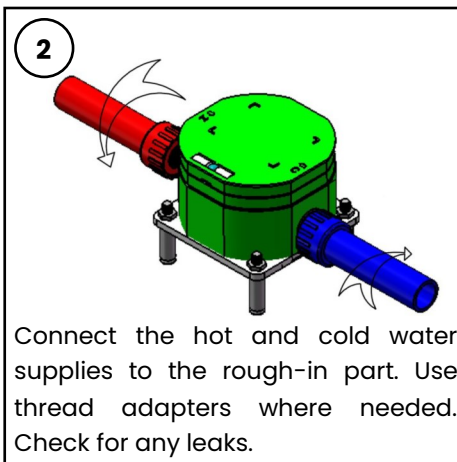


Connect the hot and cold water supplies to the rough-in part. Use thread adapters where needed. Check for any leaks.

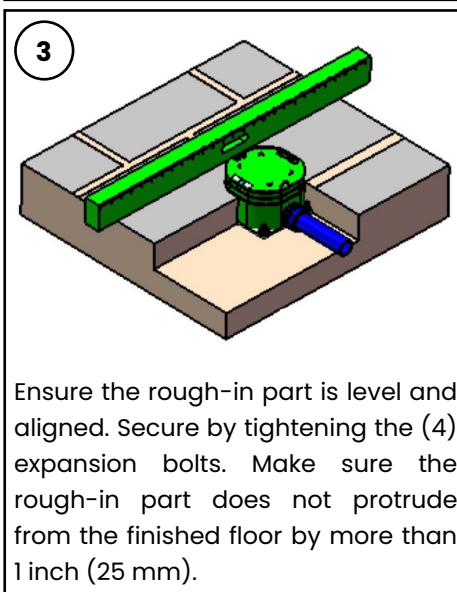


Ensure the rough-in part is level and aligned. Secure by tightening the (4) expansion bolts. Make sure the rough-in part does not protrude from the finished floor by more than 1 inch (25 mm).

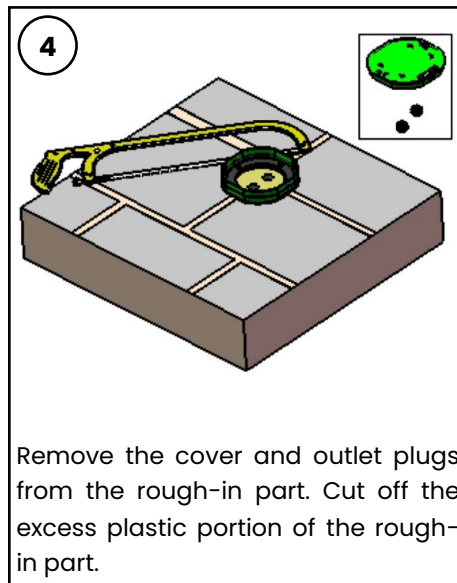


Remove the cover and outlet plugs from the rough-in part. Cut off the excess plastic portion of the rough-in part.

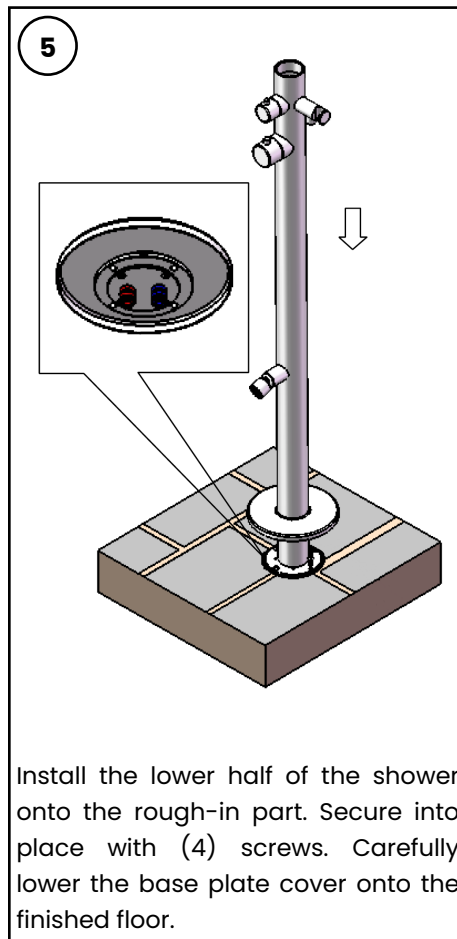

Install the lower half of the shower onto the rough-in part. Secure into place with (4) screws. Carefully lower the base plate cover onto the finished floor.

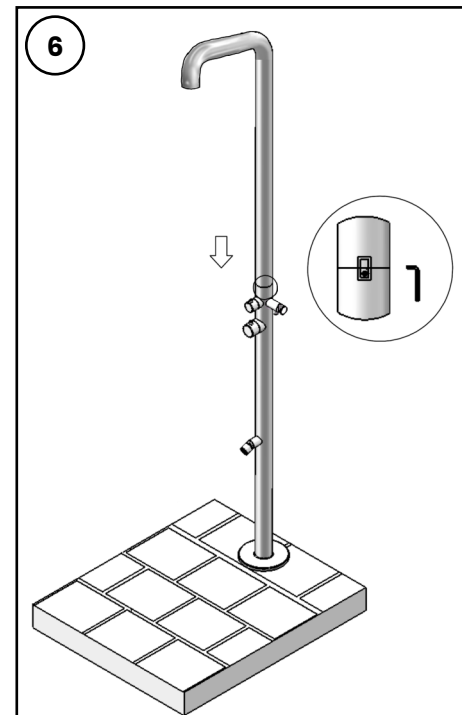

Insert the upper half of the shower into the lower half while connecting the flexible hose. Align the rectangle on the back side of the shower and secure the set screw.

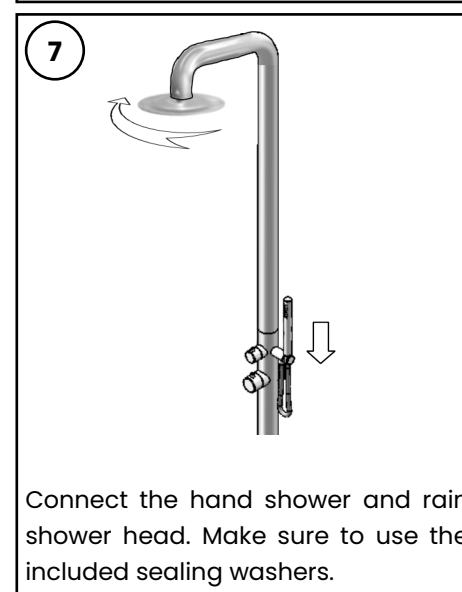

Connect the hand shower and rain shower head. Make sure to use the included sealing washers.