



ASSEMBLY INSTRUCTIONS (CONTINUED)

STEP 4

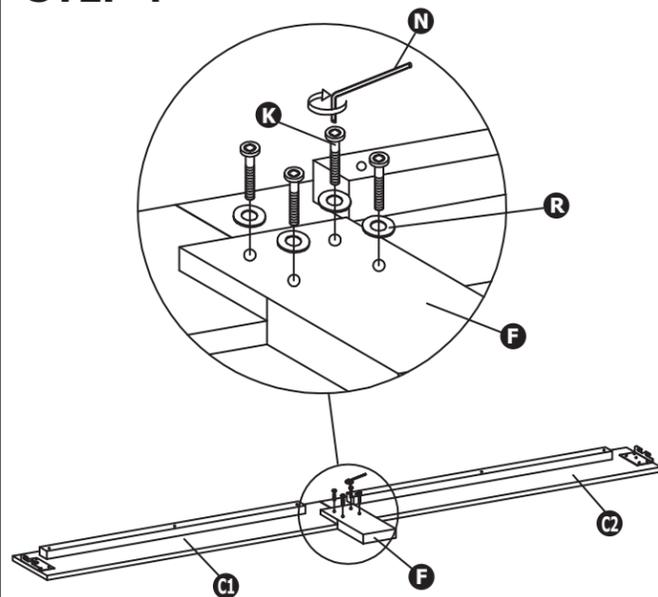


Attach the Side Rail Legs (Part F) to the Side Rails (Part C1 and C2) using 30mm Bolts (Part K) and Flat Washers (Part R). Tighten using Large Hex Key (Part N).

STEP 5

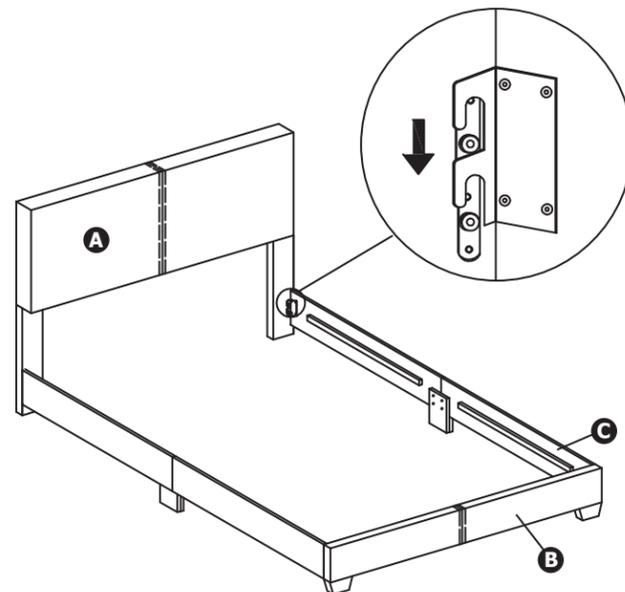


Attach the complete Side Rails to the Headboard (Part A) and Footboard (Part B) by sliding the side rail brackets onto the bolts on the Headboard Legs (Part D) and Footboard (Part B). Do not tighten yet.

STEP 6

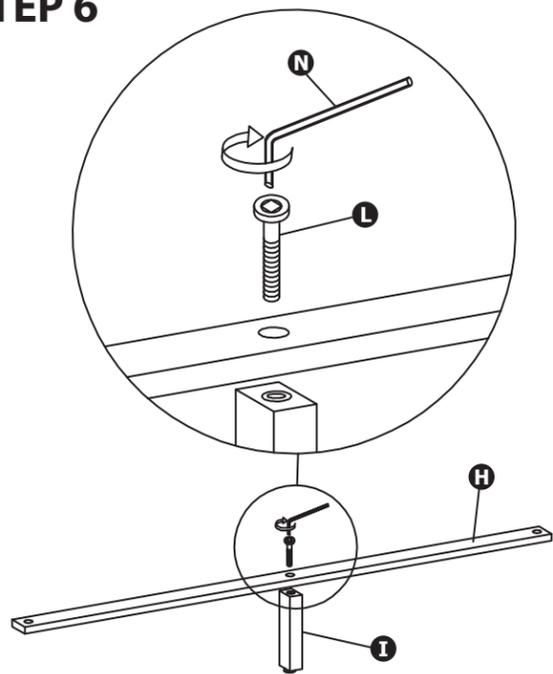

Attach the Center Leg (Part I) to the Slat (Part H) using 35mm Bolt (Part L). Tighten the bolt using Large Hex Key (Part N). Repeat this process for all 4 Support Legs.


STEP 7

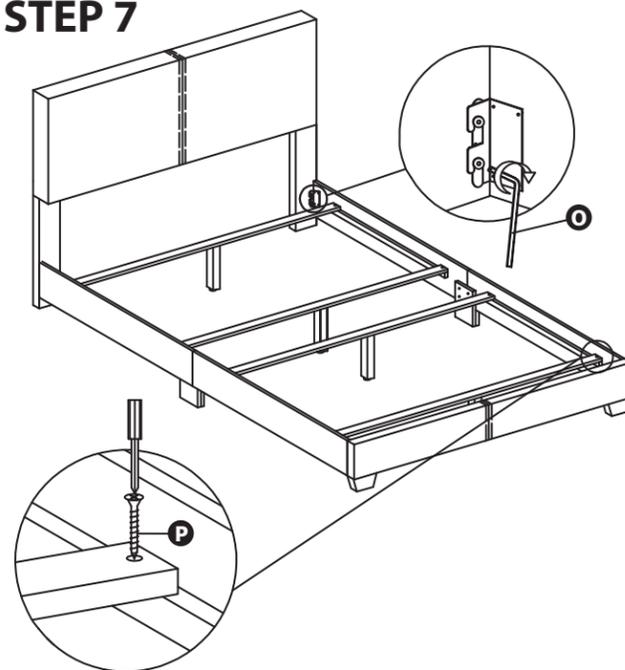

Place the four slats into the bed as shown. Tighten the bolts on the headboard legs and footboard using Small Hex Key (Part O). Secure the 4 slats using eight Screws (Part P) and a Phillips Screwdriver. Your bed is now set up and ready for use.

Assembly Instructions

Contains One Bed and Hardware

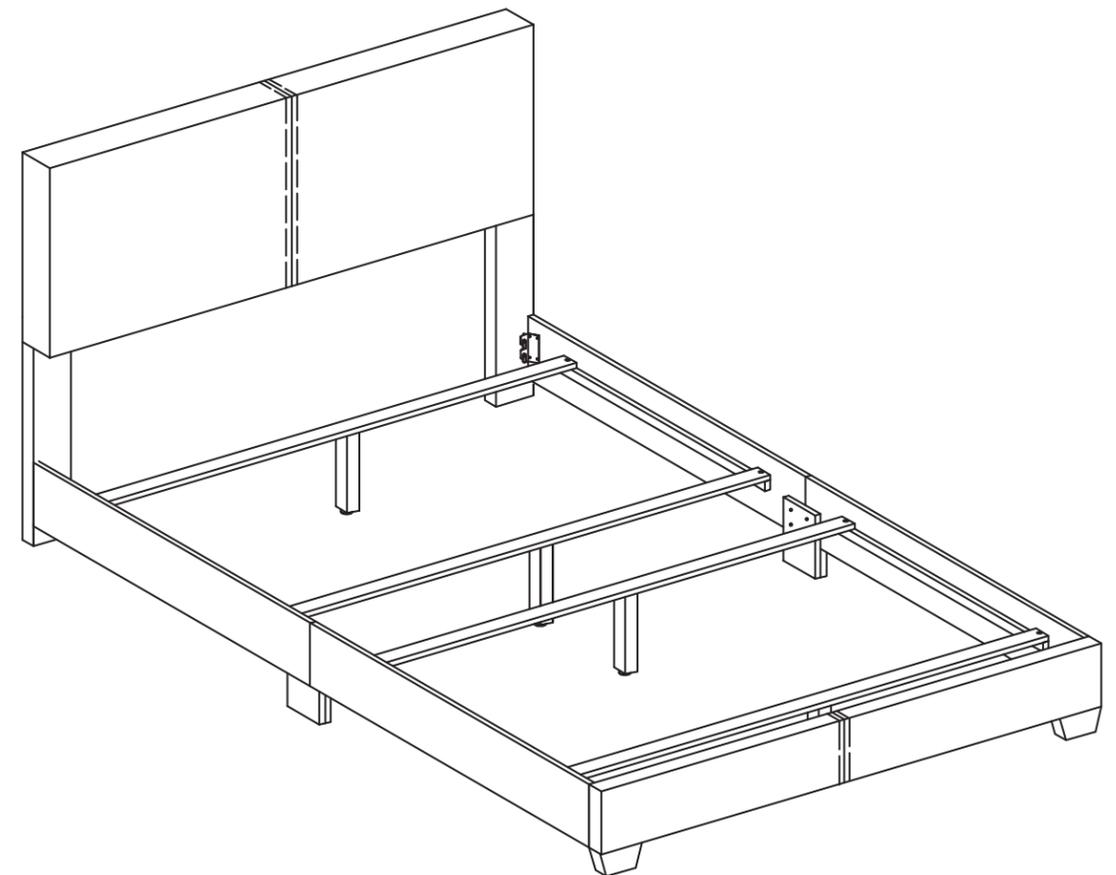

IMPORTANT NOTE:


Carefully remove all the parts from the box. Arrange on a flat surface and verify you have all of the following parts and hardware.

TOOLS REQUIRED:


Phillips Screwdriver

PARTS LIST


A. Headboard Top (1 pc)

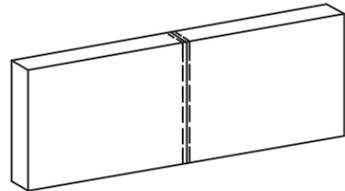


B. Footboard (1 pc)




C. Side Rail (4 pcs)

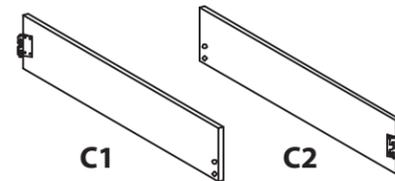


D. Headboard Leg (2 pcs)

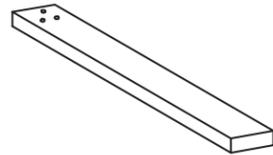


E. Footboard Leg (2 pcs)



F. Side Rail Leg (2 pcs)



G. Side Rail Support (4 pc)



H. Slat (4 pcs)




I. Center Leg (4 pcs)




HARDWARE LIST


J. 16mm Bolt (8 pcs)



K. 30mm Bolt (20 pcs)



L. 35mm Bolt (4 pcs)



M. 50mm Bolt (8 pcs)



N. Large Hex Key (1 pc)



O. Small Hex Key (1 pc)



P. 32mm Screw (8 pcs)



Q. Spring Washer (6 pcs)




R. Flat Washer (8 pcs)




ASSEMBLY INSTRUCTIONS


STEP 1

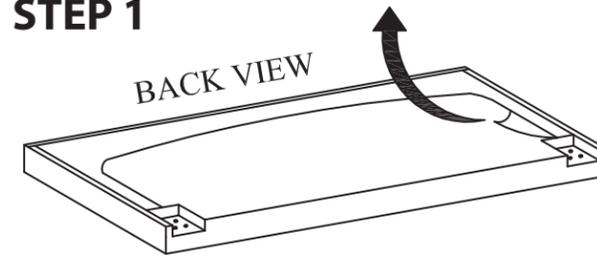

Unzip the black fabric on the back of the headboard and remove the parts. Zip the black fabric closed after parts are removed.

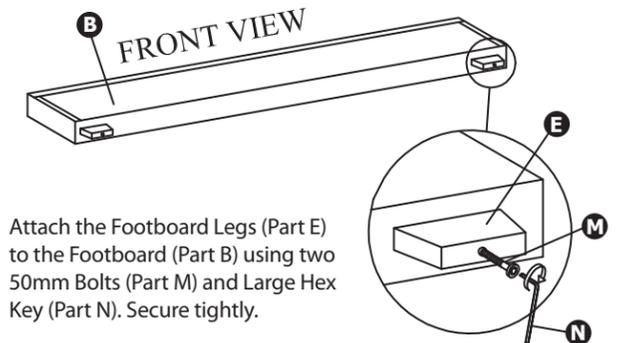


Attach the Footboard Legs (Part E) to the Footboard (Part B) using two 50mm Bolts (Part M) and Large Hex Key (Part N). Secure tightly.

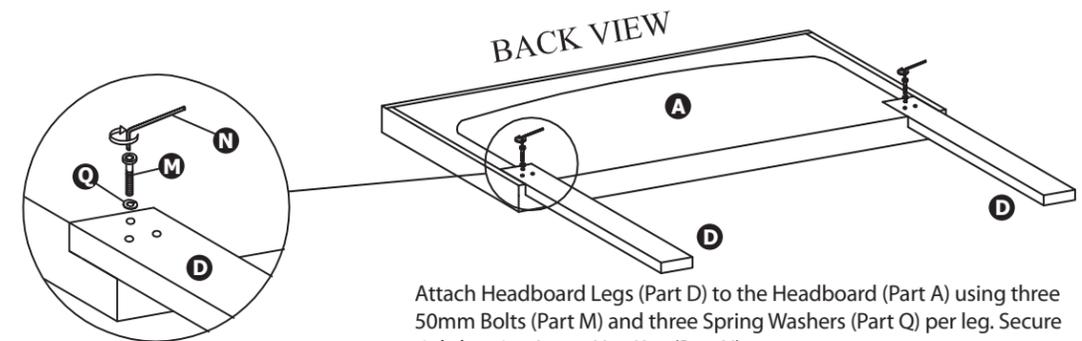


Attach Headboard Legs (Part D) to the Headboard (Part A) using three 50mm Bolts (Part M) and three Spring Washers (Part Q) per leg. Secure tightly using Large Hex Key (Part N).

STEP 2

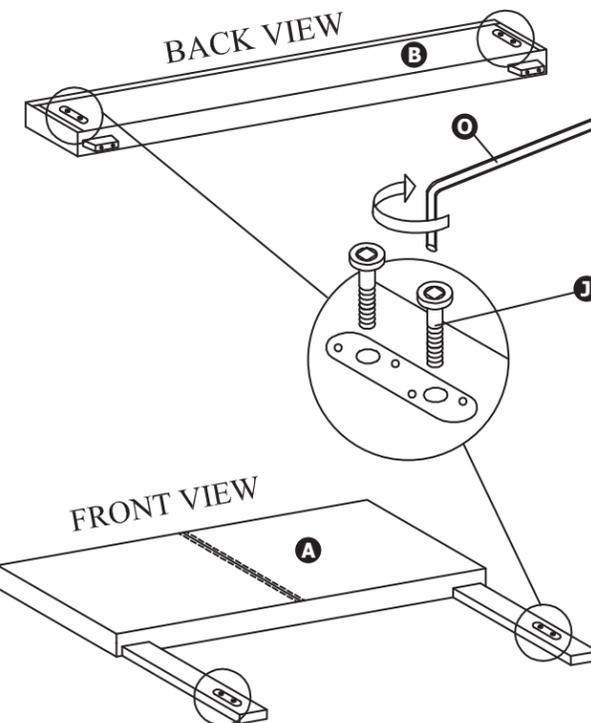

Attach the eight 16mm Bolts (Part J) to the headboard leg brackets and footboard brackets using the Small Hex Key (Part O). Do not tighten.

STEP 3

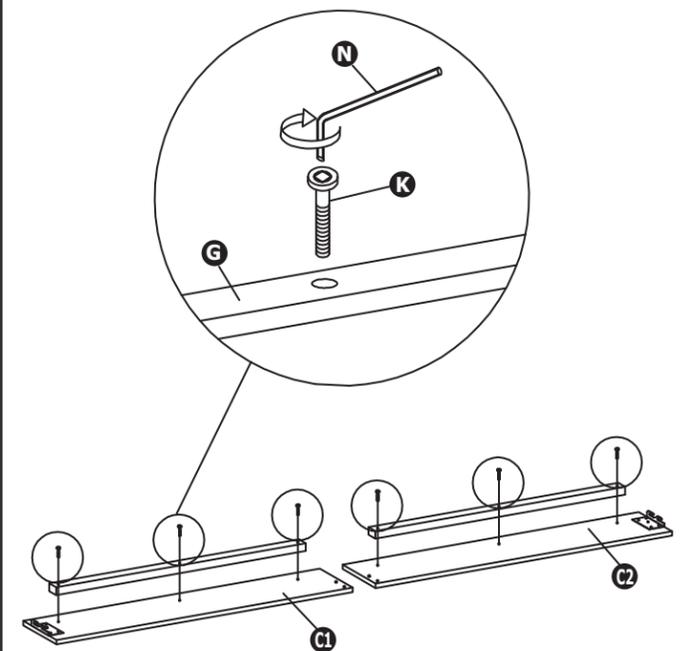

Attach the four Side Rail Supports (Part G) to the Side Rails (Part C1 and C2) using twelve 30mm Bolts (Part K) and Large Hex Key (Part N). Tighten the bolts.