


Installation Instructions

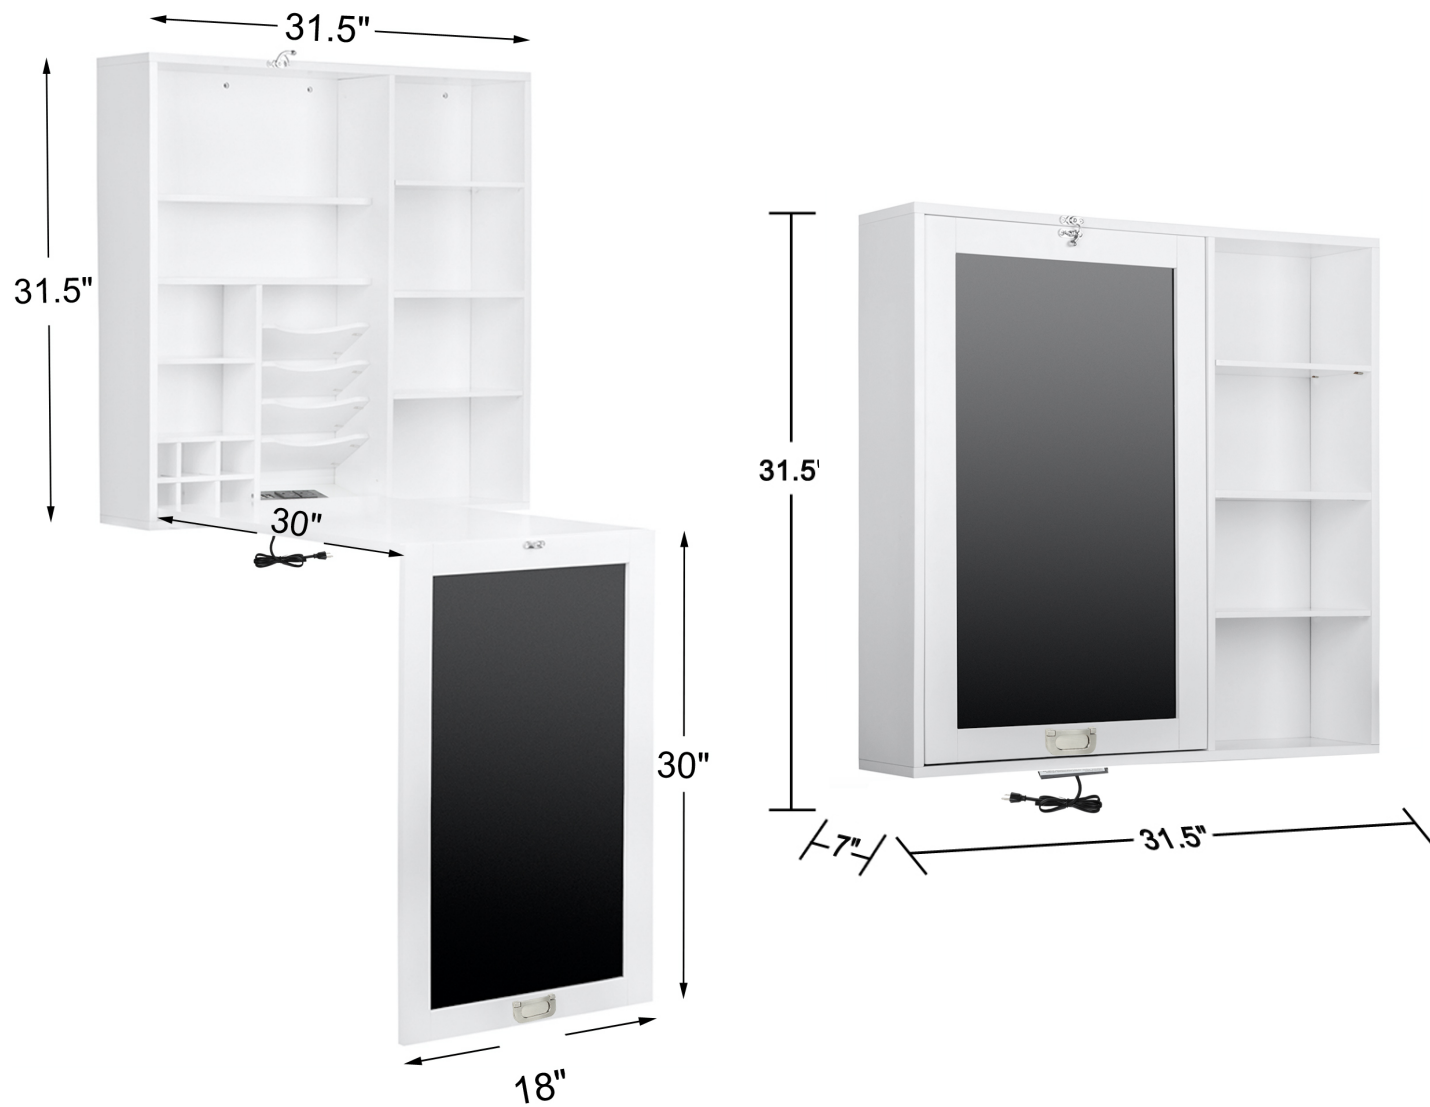

Thank you for purchasing Utopia Alley Products. Please contact us if you have difficulty with assembly or need replacement parts. Utopia Alley customer service is here to assist you.

Email: CustomerService@utopiaalley.com

Please attach your name and Order ID so that we can assist you better .



This document is proprietary and confidential. No part of this document may be disclosed in any manner to a third party without the prior written consent of Utopia Alley.

Item No.: SH71WWE-IS


WARNING

Serious or fatal injury may occur from assembly or usage when not following our instructions.

1. During the assembly process, keep all parts away from babies or children.
2. Always securely fix this product to the wall. Make sure the wall area to be drilled is free from hidden electrical wires, water and gas pipes.
3. Use of tip-over restraints may only reduce, but not eliminated the risk of tip-over.
4. Unless specially designed to accommodate, do not set heavy objects on top of this product.
5. Place the heaviest items on the lowest shelf.
6. Never allow children to climb or hang on drawers, doors or shelves.
7. Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

Assembly Instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.

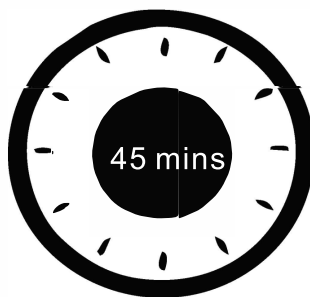

Space for
assembling


100 Sq feet

Before assembly

Tips before you start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

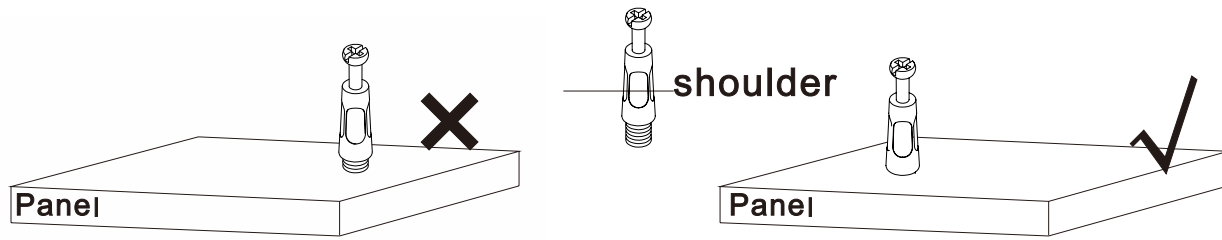


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

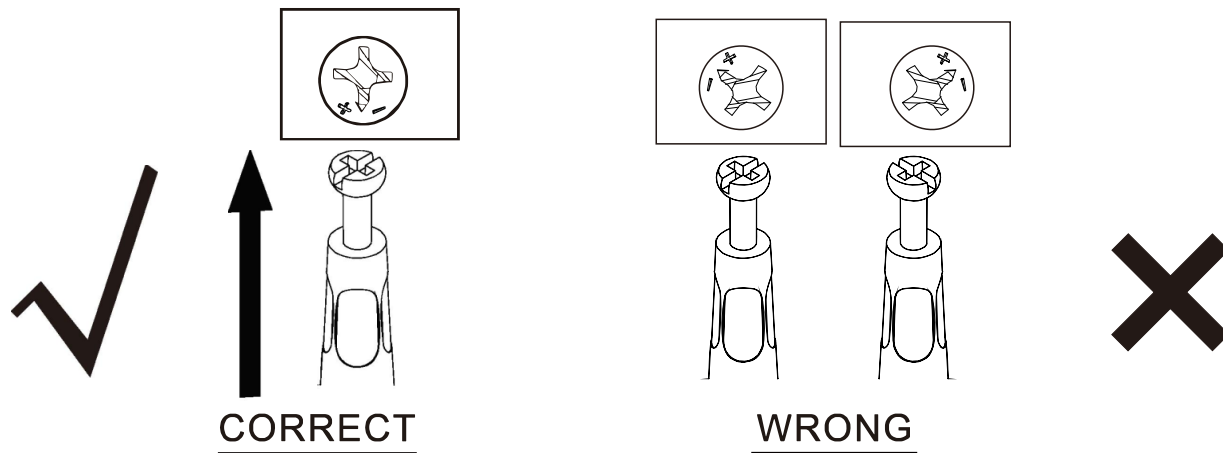

When fitting cam lock, ensure starting positions is correct before you insert cam lock to quickfit.

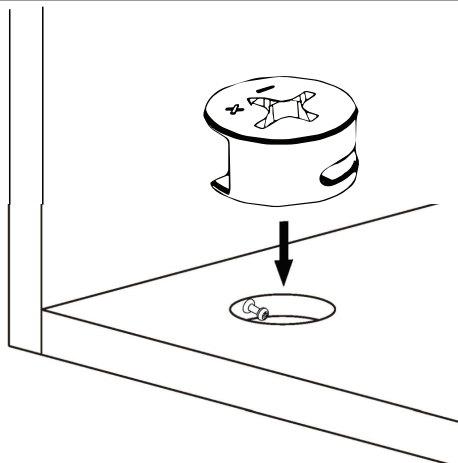

Quickfit head should be in the center of the cam lock. When the two panels are joined. Cam lock should be inserted before quickfit.

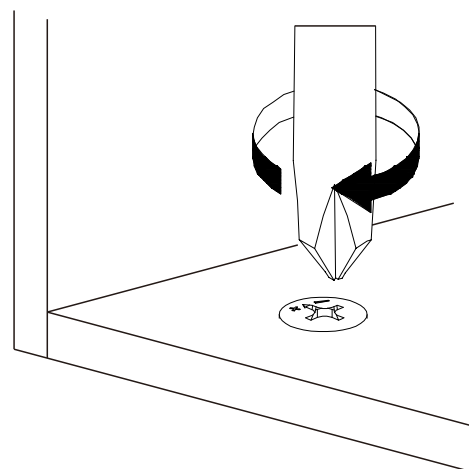

















Turn cam lock clockwise to tighten.


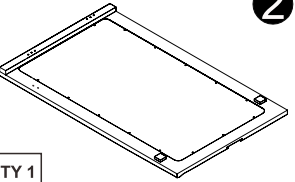
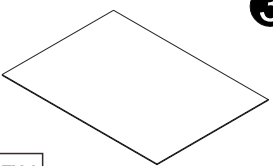
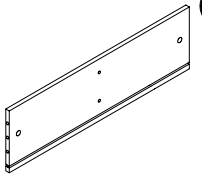
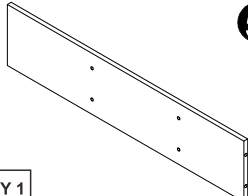
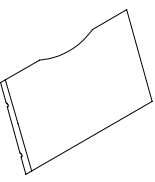
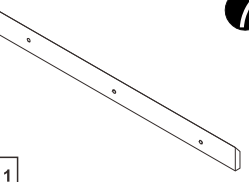
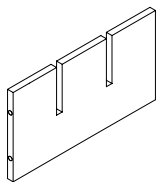

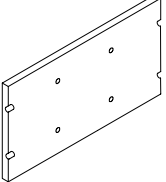
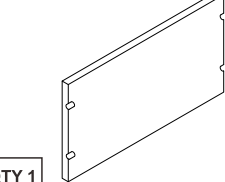
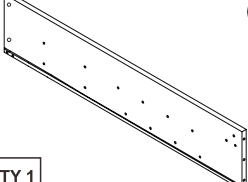
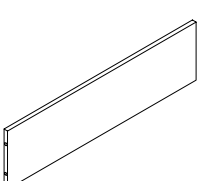
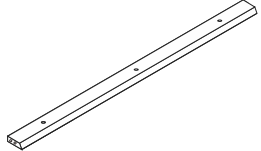
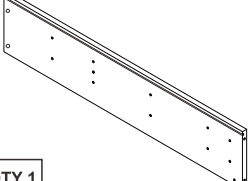
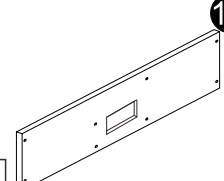
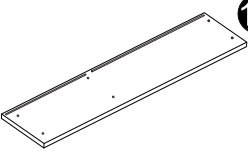
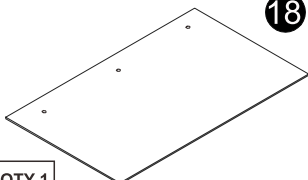
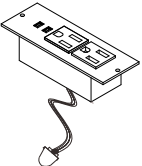
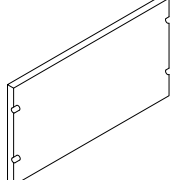
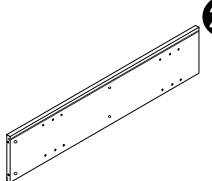
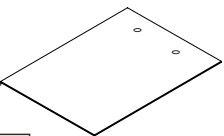
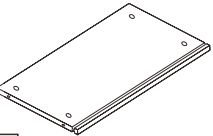
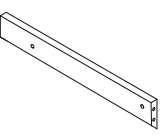
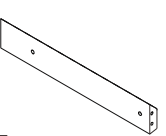
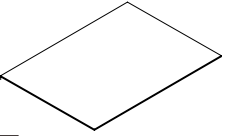

Installation Instructions

Before assembling the product, all shelves and screws should be ready and arranged in order. Please check all parts are in place, this require at least two adults to assemble.


When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

 4x35MM	 3x18MM	 3x12MM		 6x30MM			
A 10PCS	B 2PCS	C 26PCS	D 32PCS	E 30PCS	F 2PCS	G 2PCS	H 1PC
		 4x30MM				 Black 3x12MM	
I 10PCS	J 1PC	K 8PCS	L 12PCS	M 12PCS	N 16PCS	O 2PCS	P 1PC


The parts numbers are stuck on the side of each board.

 QTY 1	 QTY 1	 QTY 1	 QTY 1
 QTY 1	 QTY 4	 QTY 1	 QTY 1
 QTY 2	 QTY 1	 QTY 1	 QTY 1
 QTY 1	 QTY 1	 QTY 1	 QTY 1
 QTY 1	 QTY 1	 QTY 1	 QTY 2
 QTY 1	 QTY 1	 QTY 1	 QTY 1
 QTY 1	 QTY 1	 At least 2 Philip screwdrivers needed: 1) Around 4" length 2) 7" length (NOT INCLUDED)	


1

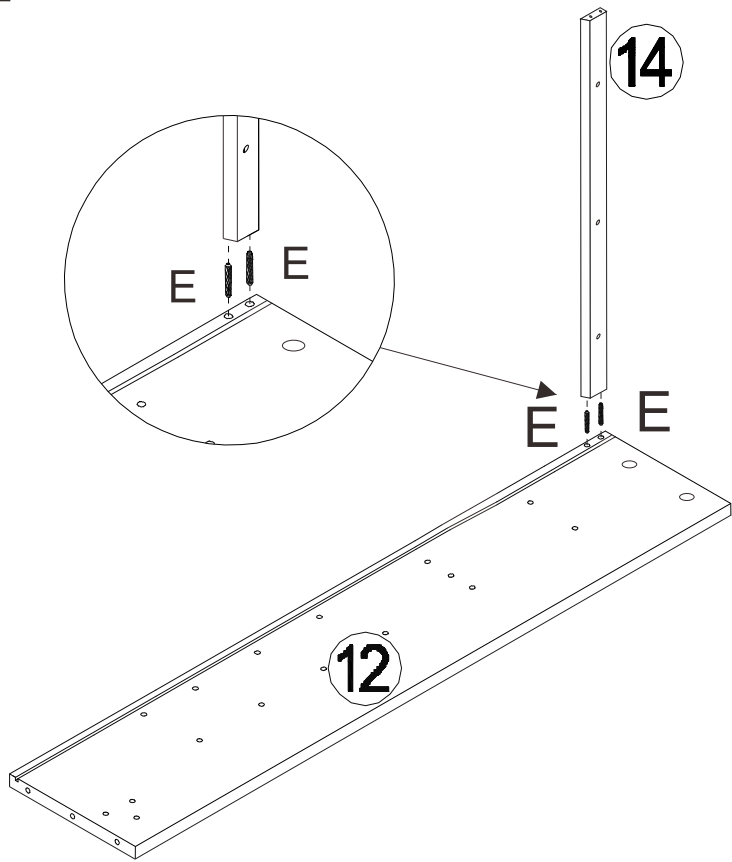


2

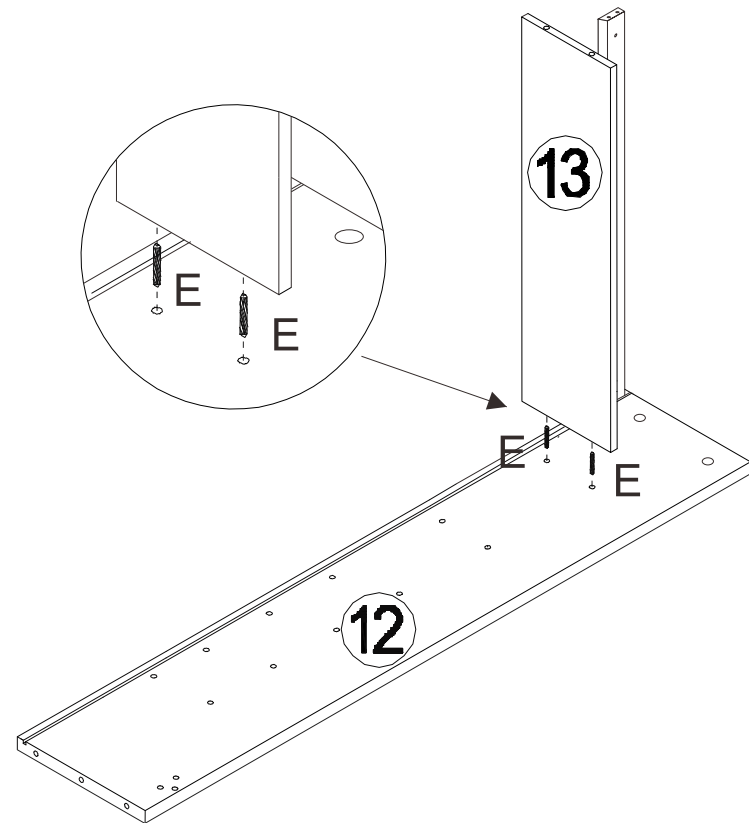


3

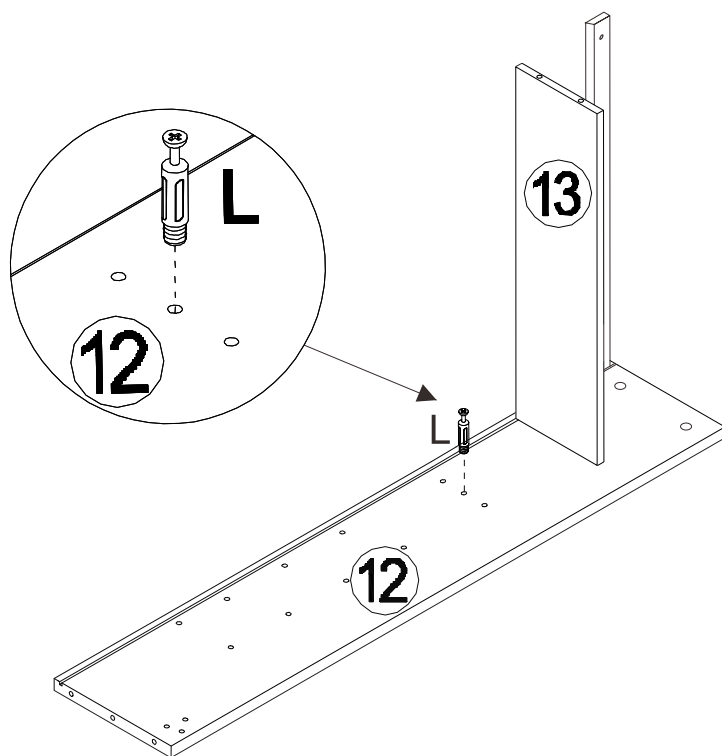


4


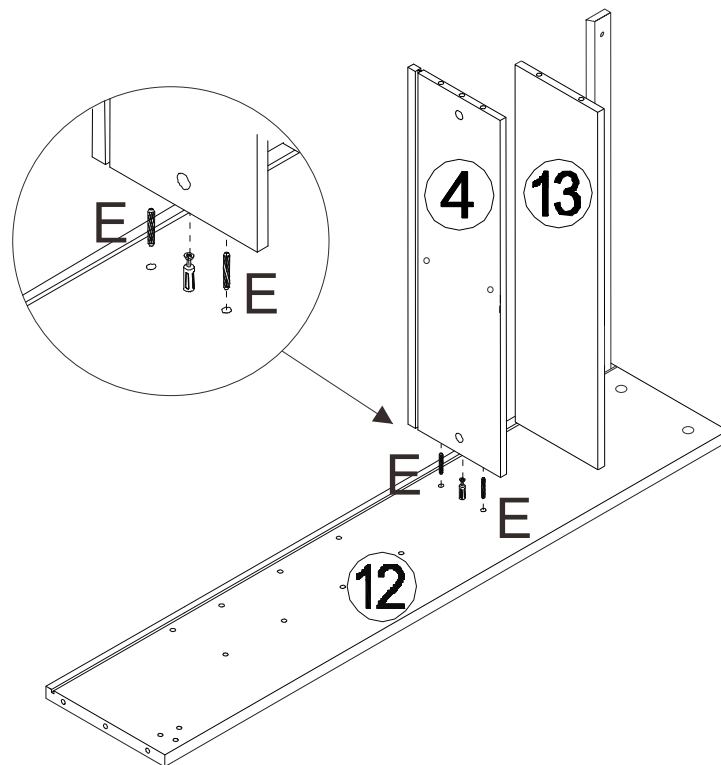


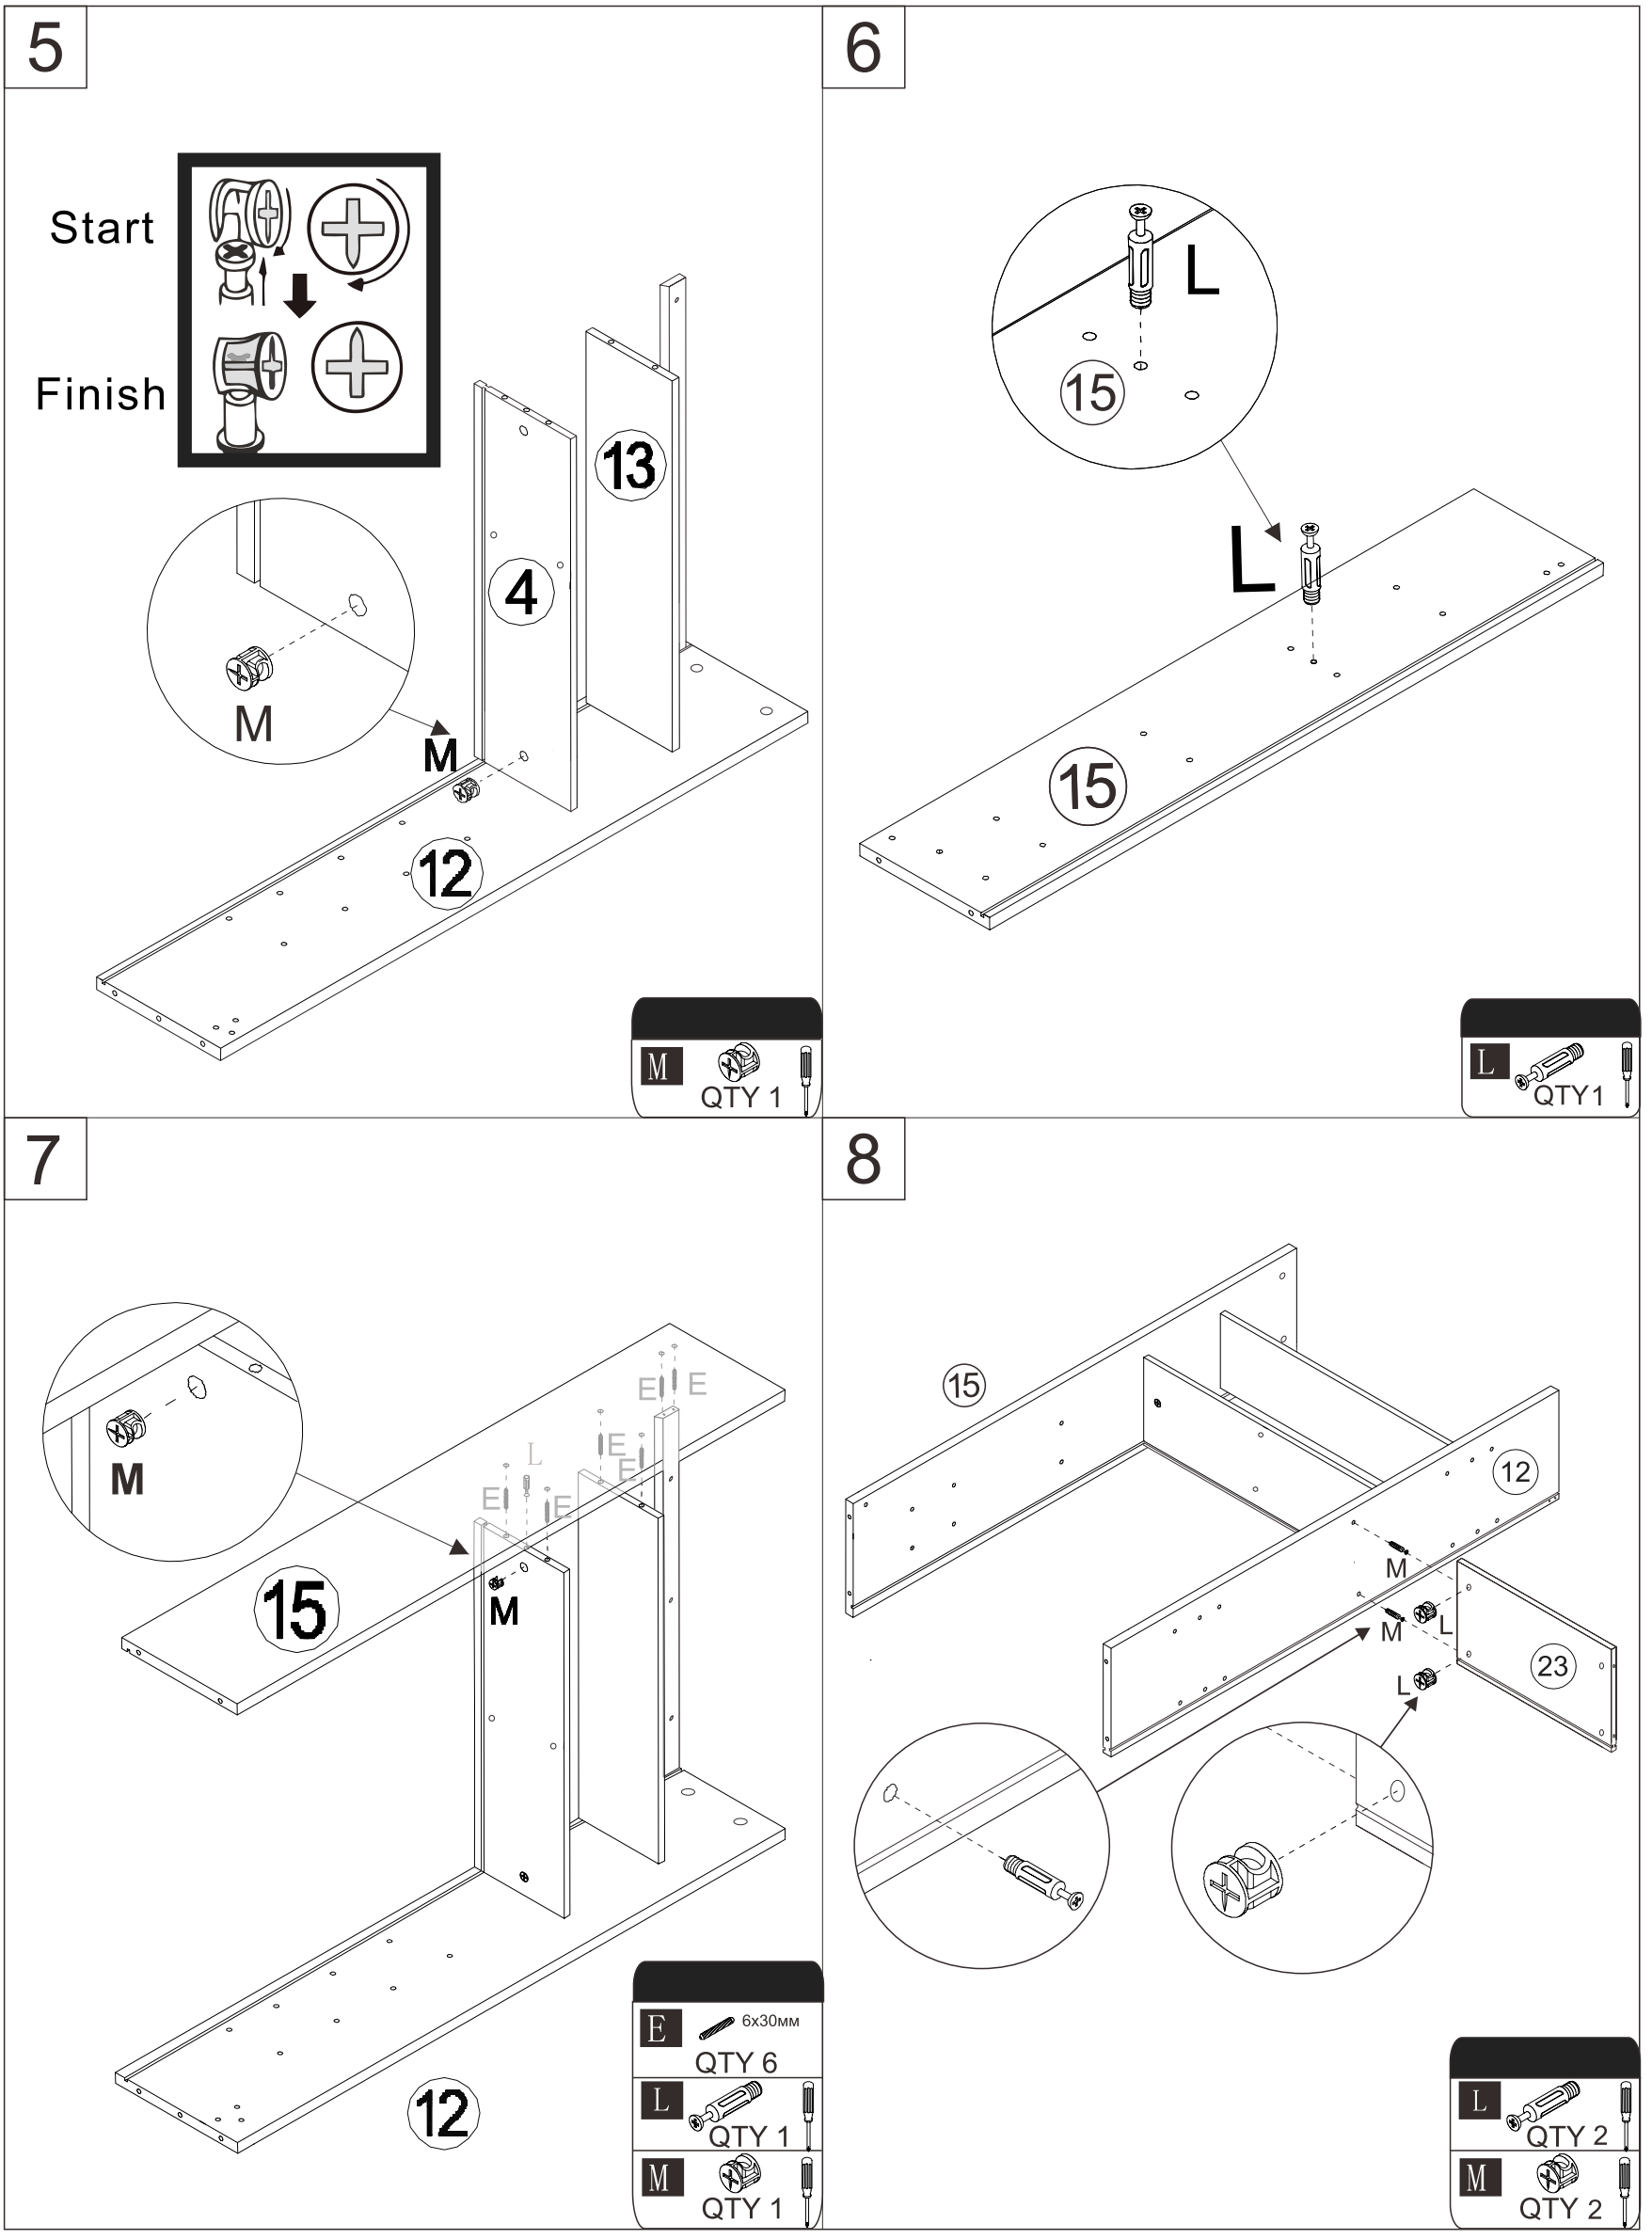


9

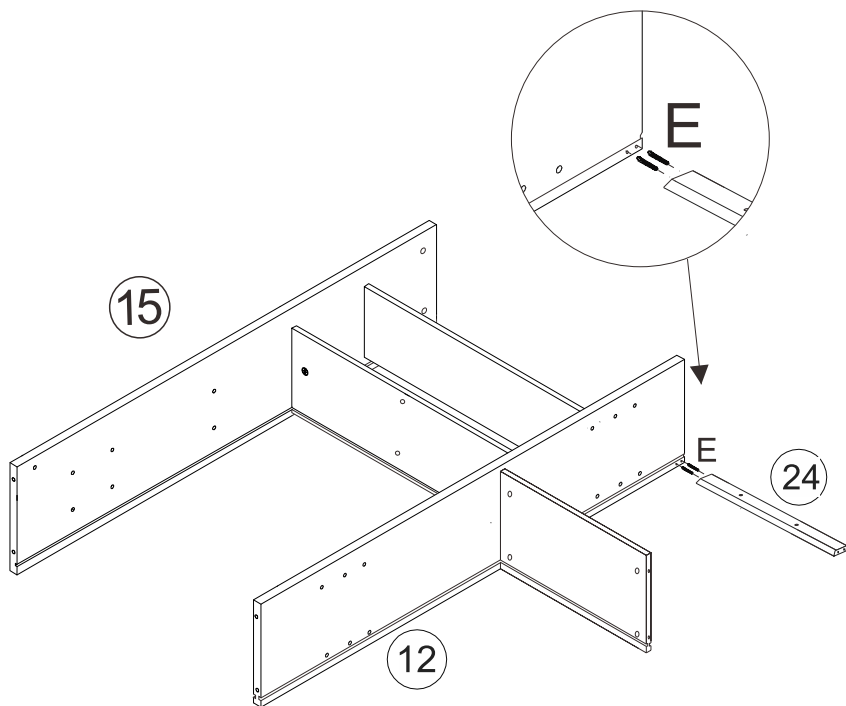


10

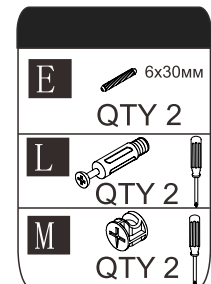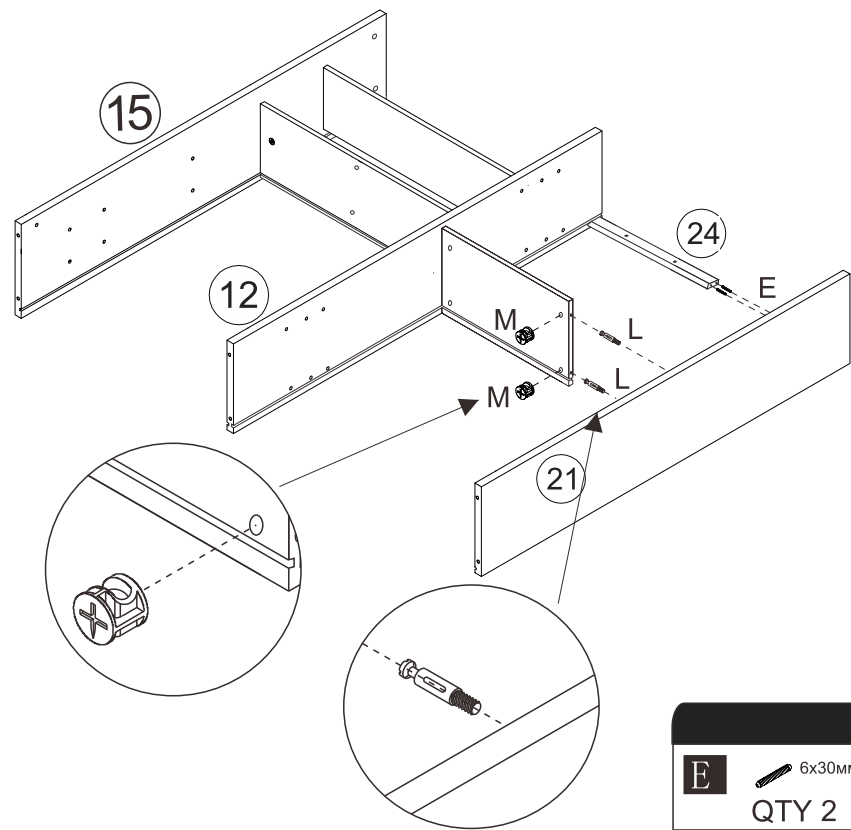


11

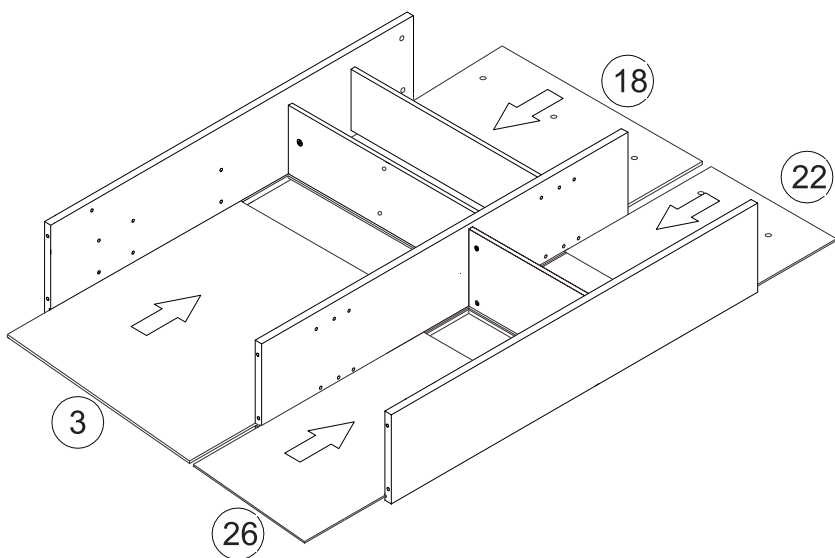

12

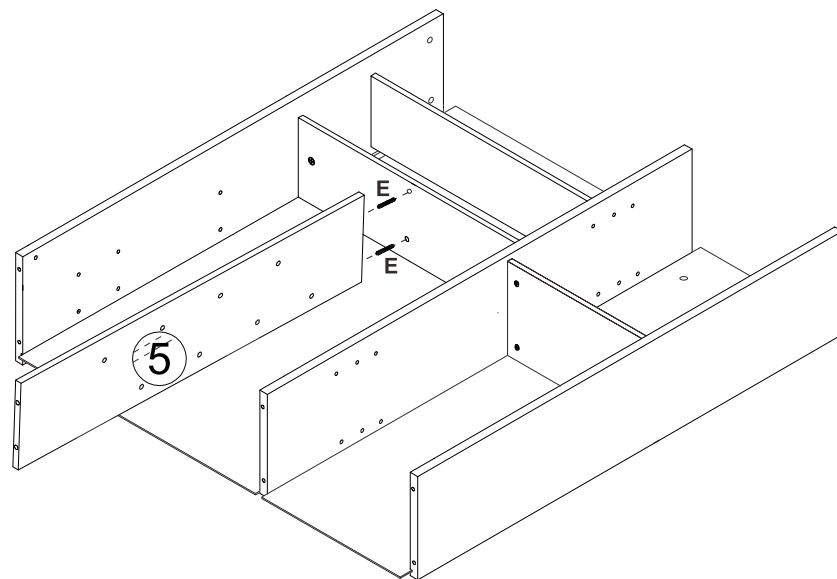


13

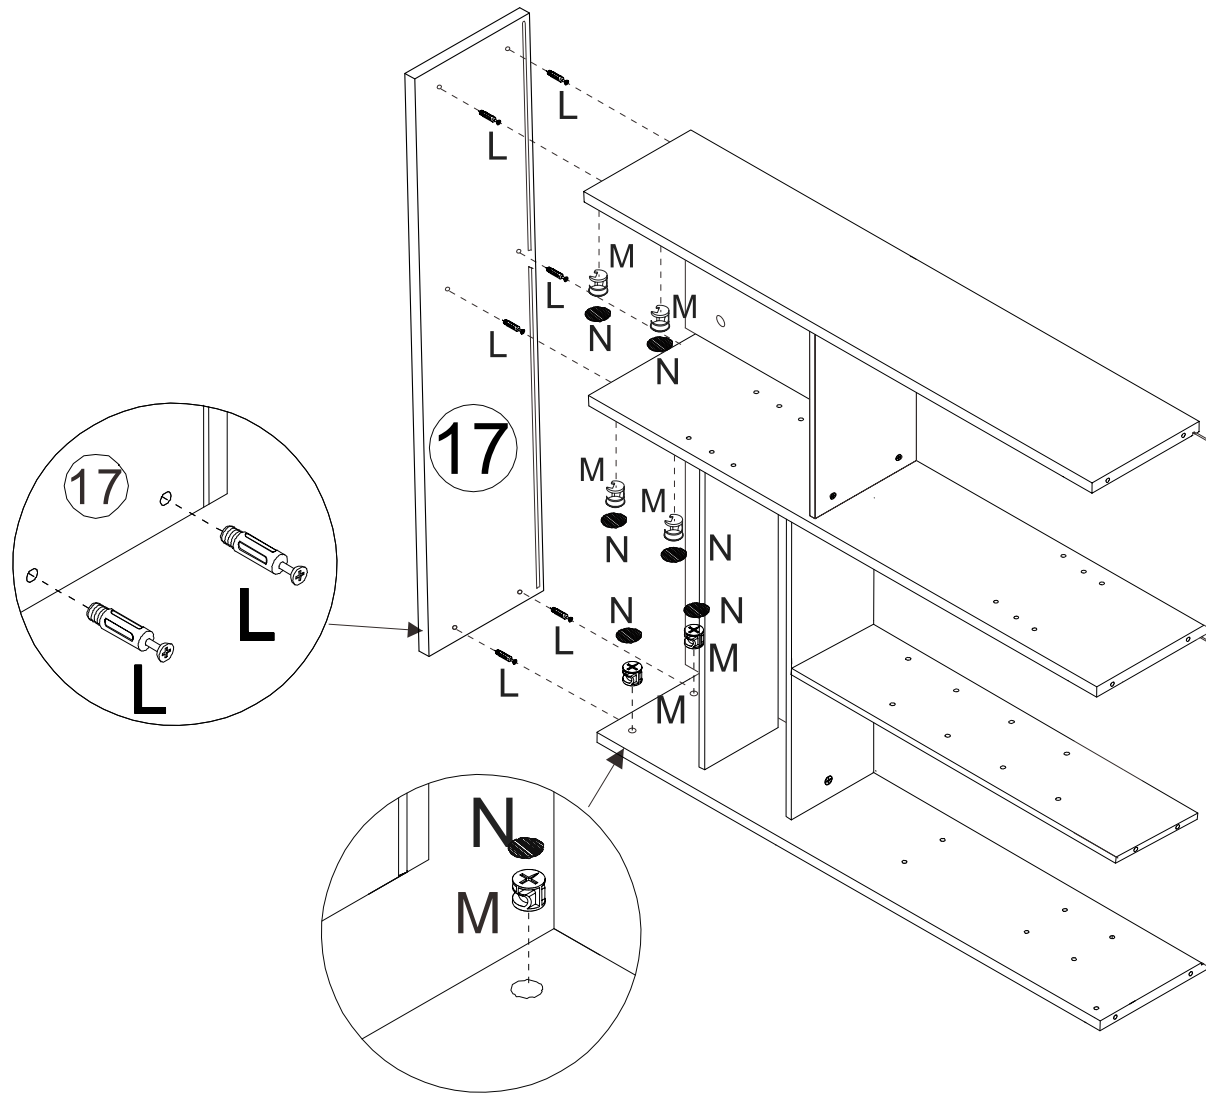


L		QTY 6
M		QTY 6
N		QTY 6

14

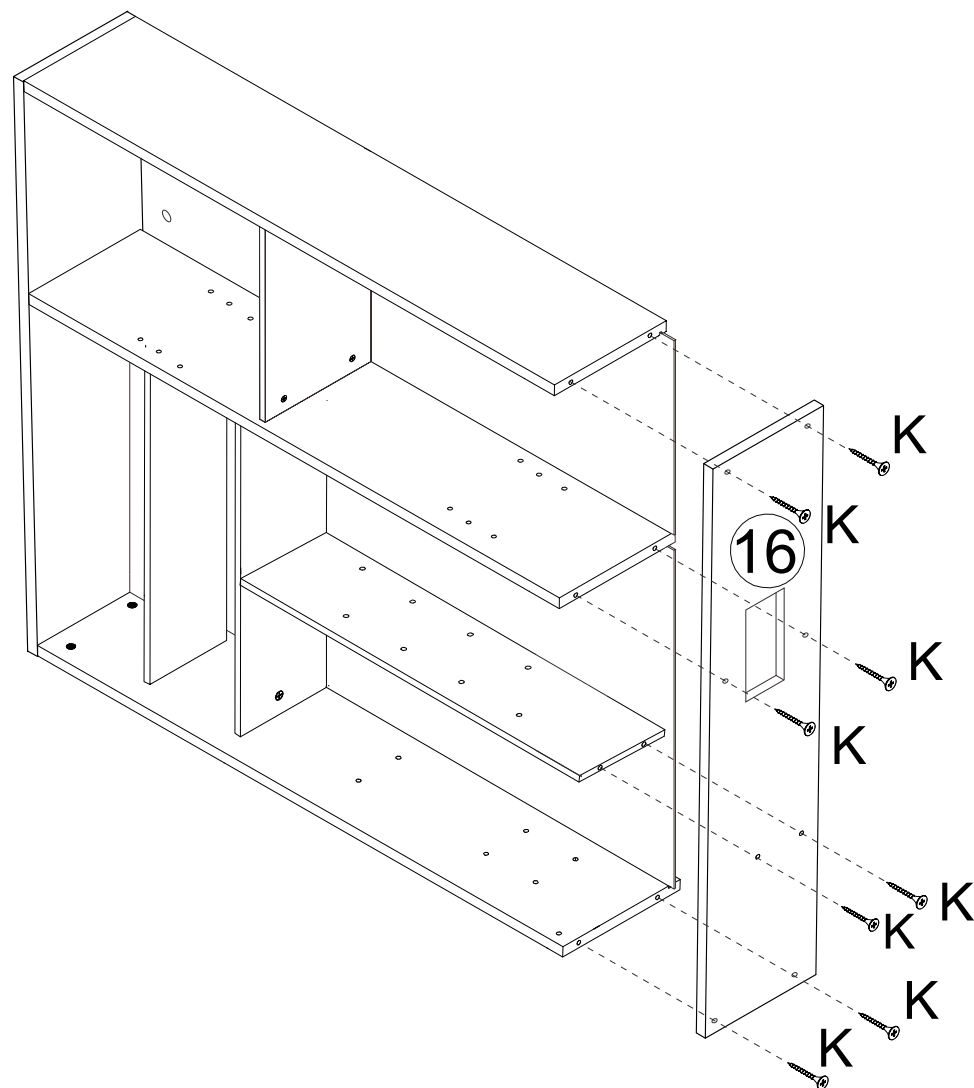

K		4x30MM	QTY 8
---	--	--------	-------

15

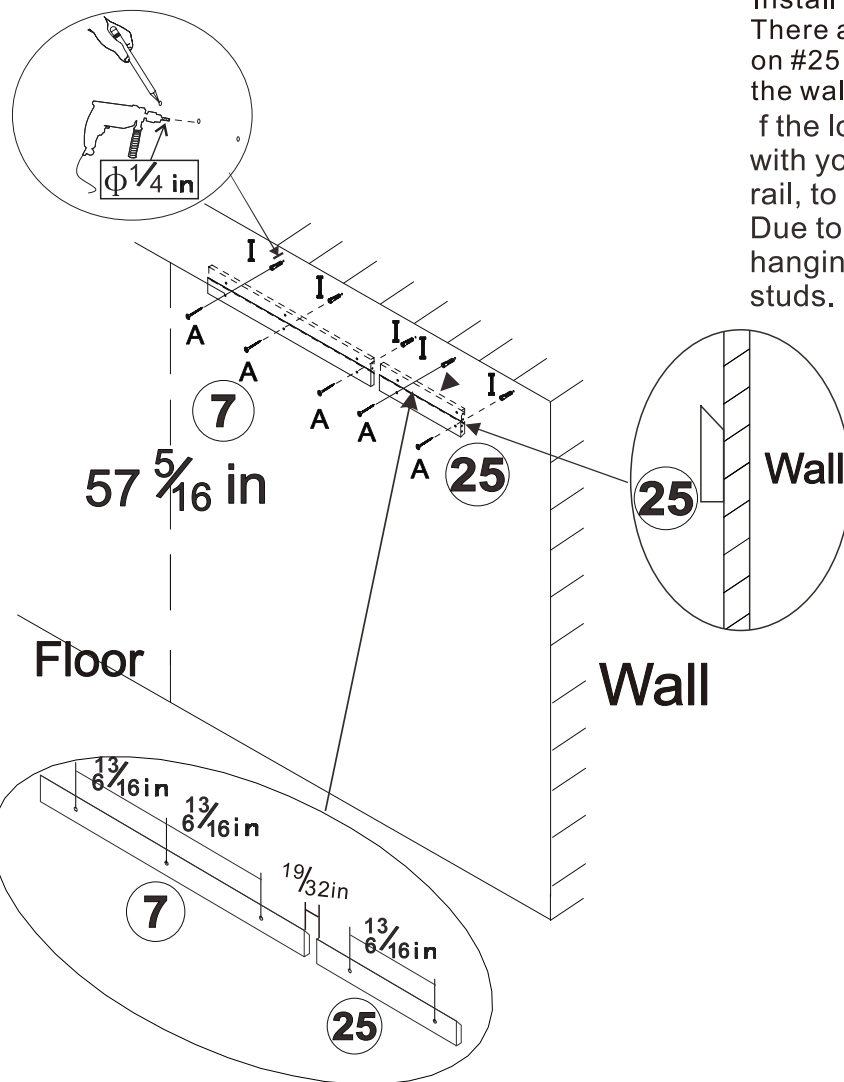

Install the hanging rail (#7, #25) onto the wall first. There are 3 Pre-drilled holes on #7 and 2 Pre-drilled holes on #25 provided on the Hanging Rail for drilling directly into the wall.

If the location of these pre-drilled holes do not line up with your studs, please drill new holes into the hanging rail, to line up with the location of your studs.


Due to the weight of the desk, it is imperative that the hanging rail, and therefore the desk, be attached to the studs.

If screwing into stud, no need for anchor.

I		QTY 5
A		QTY 5
N		QTY 5


16

Then hang the cabinet onto the hanging rail.

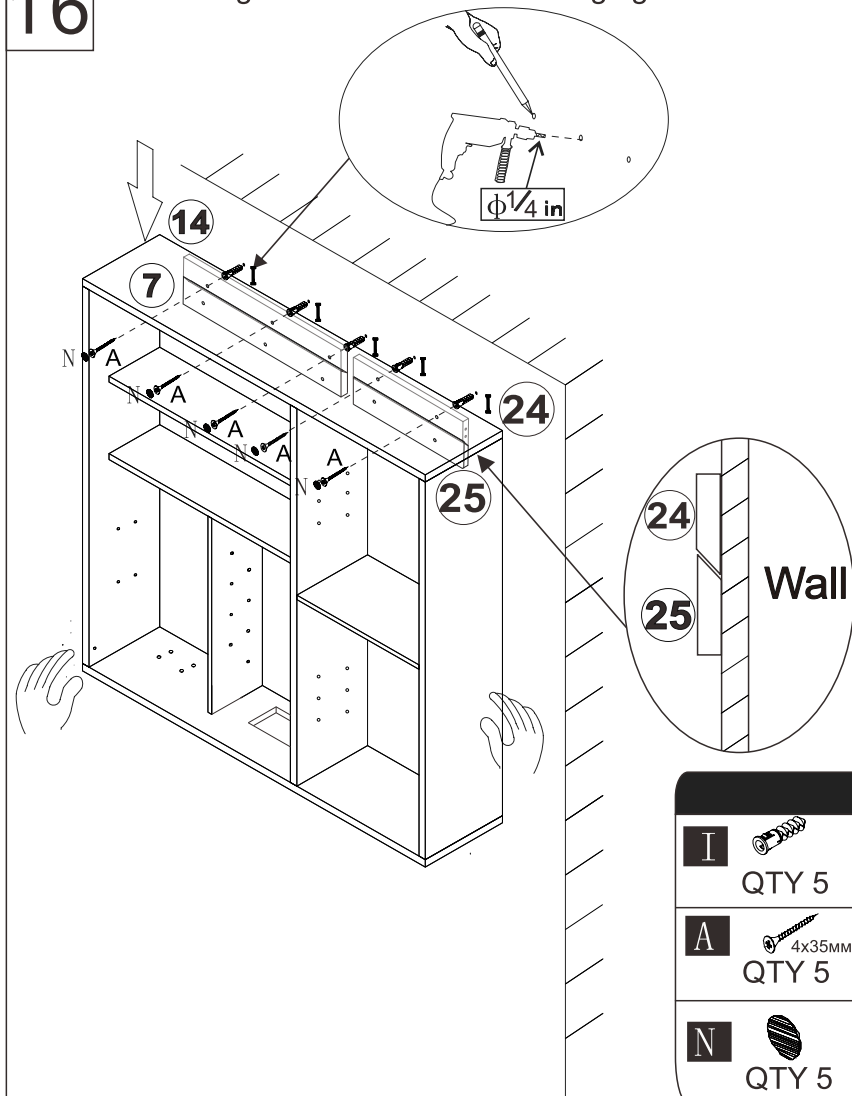


I		QTY 5
A		QTY 5
N		QTY 5

17

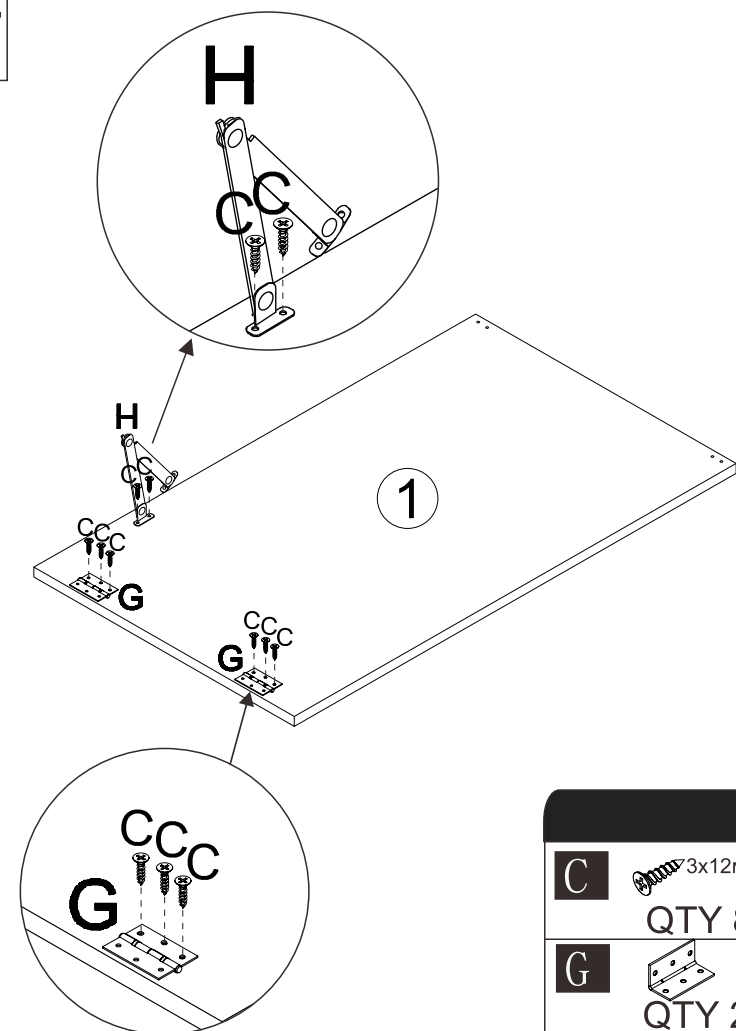


C		QTY 8
G		QTY 2
H		QTY 1


18

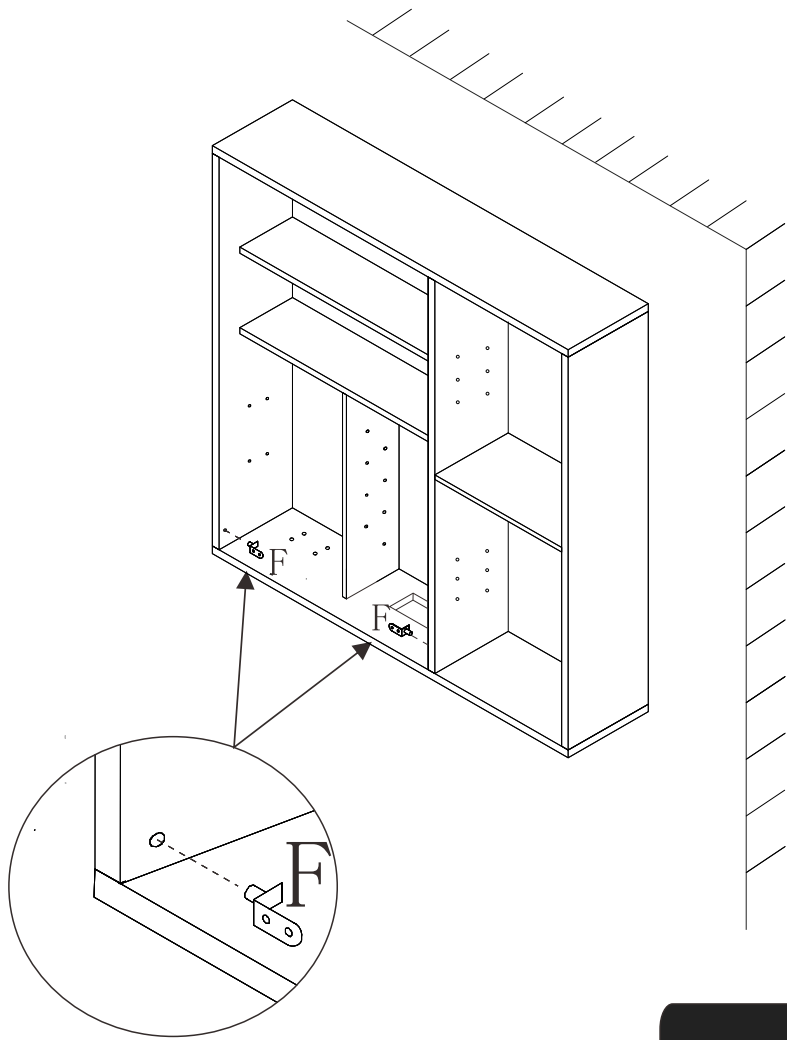



19

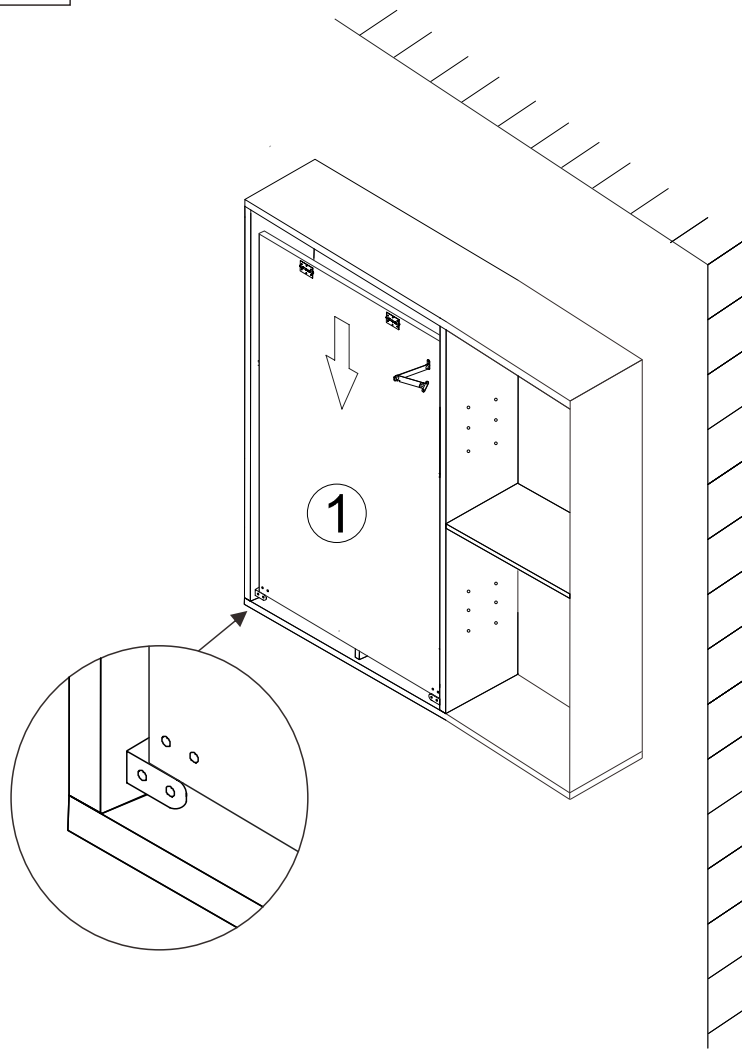


20

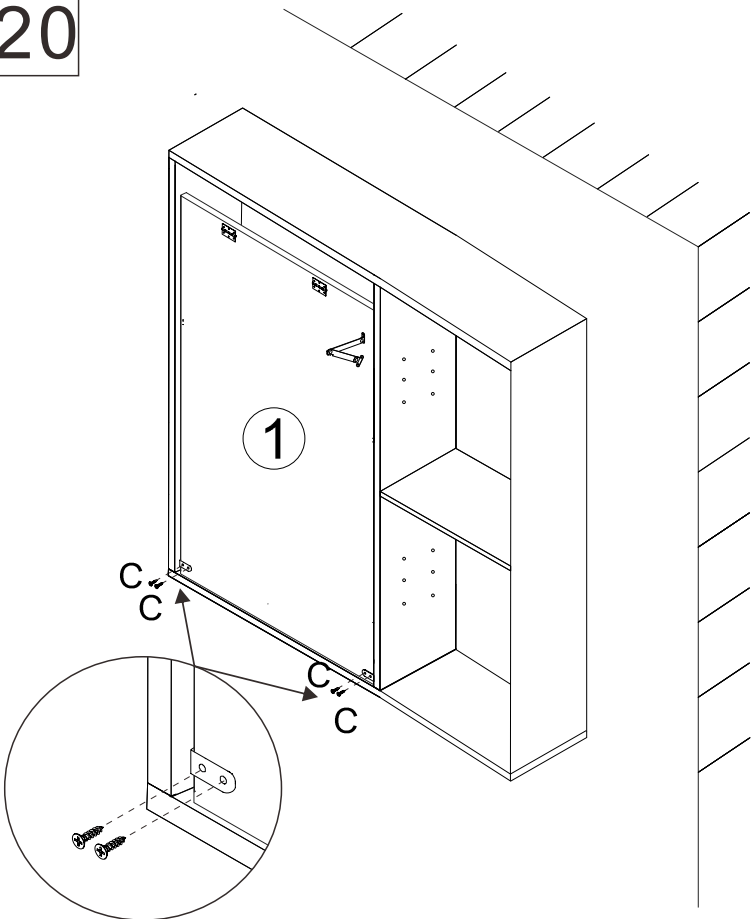

21

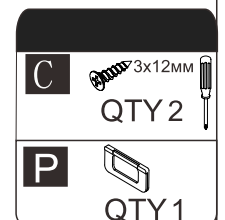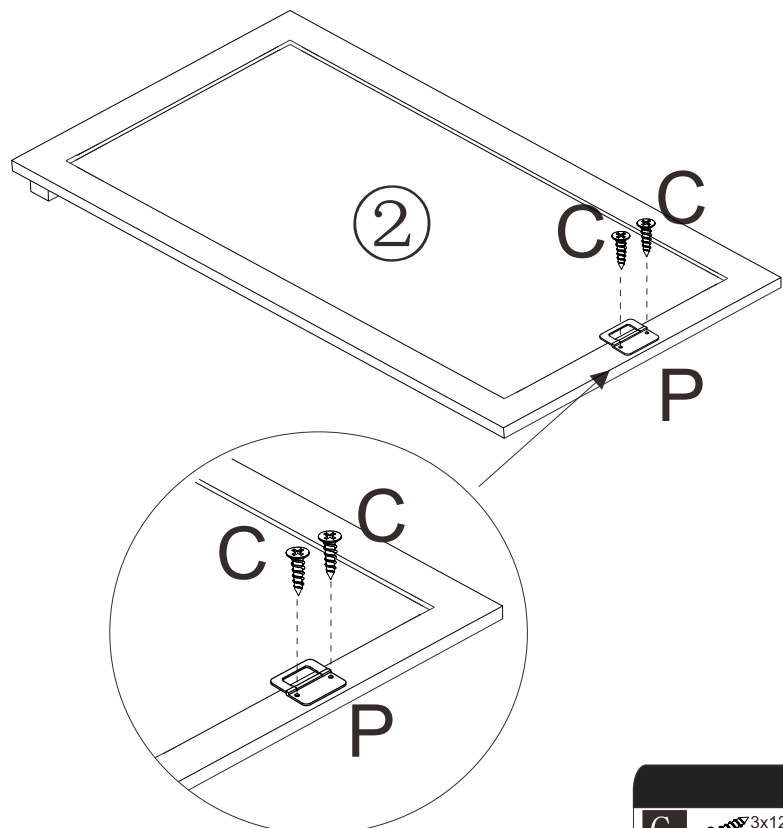


22

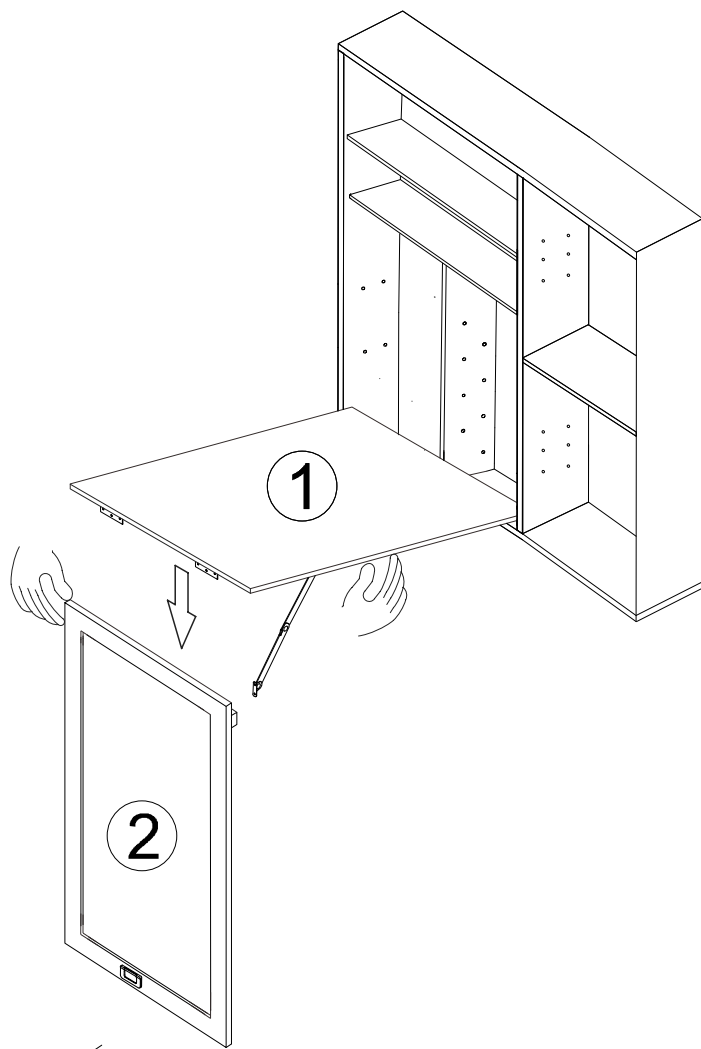


Pull down part#1 carefully to align with part#2.



23

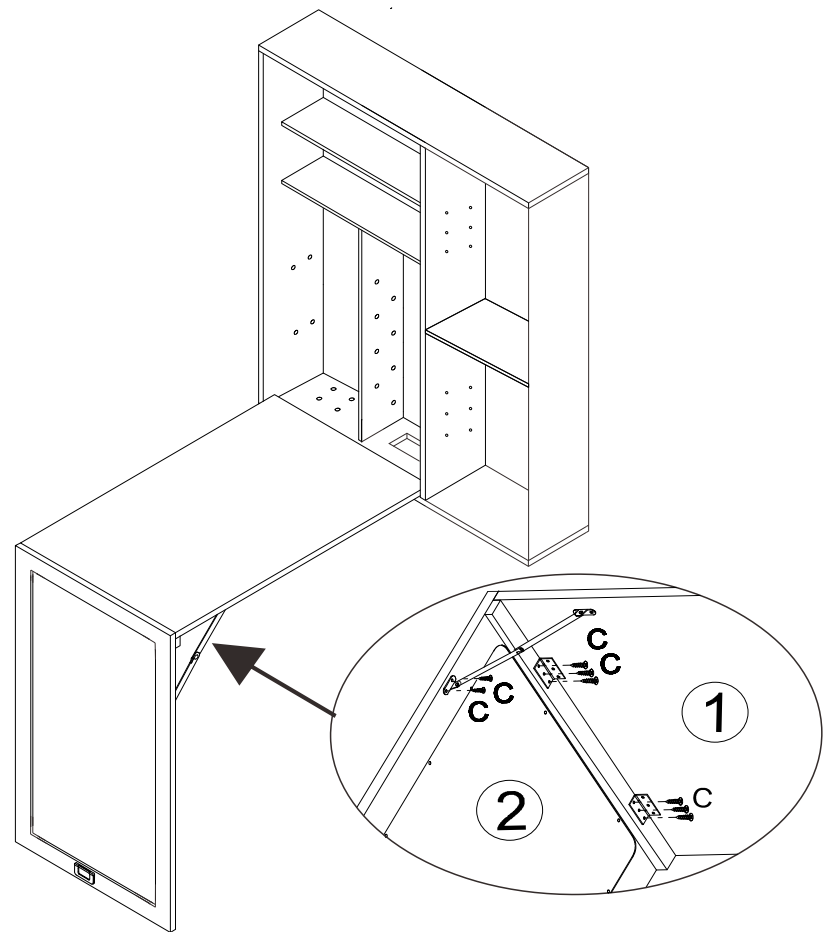


24

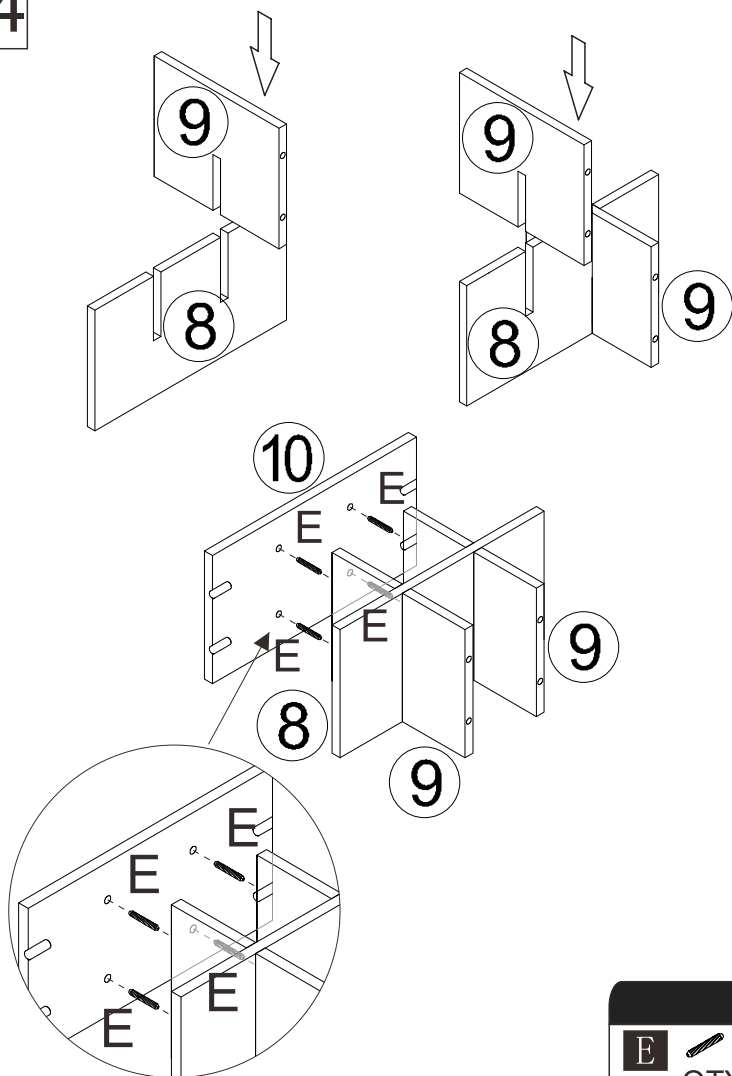



25

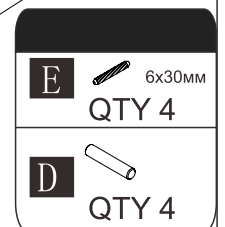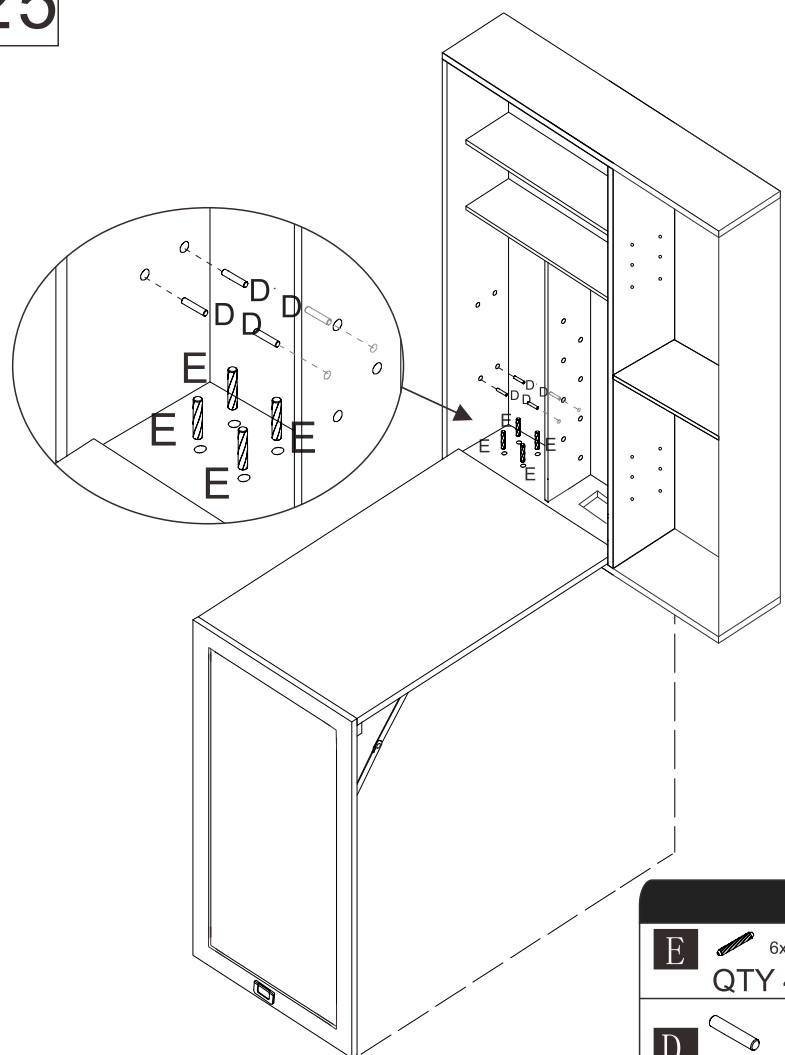


26

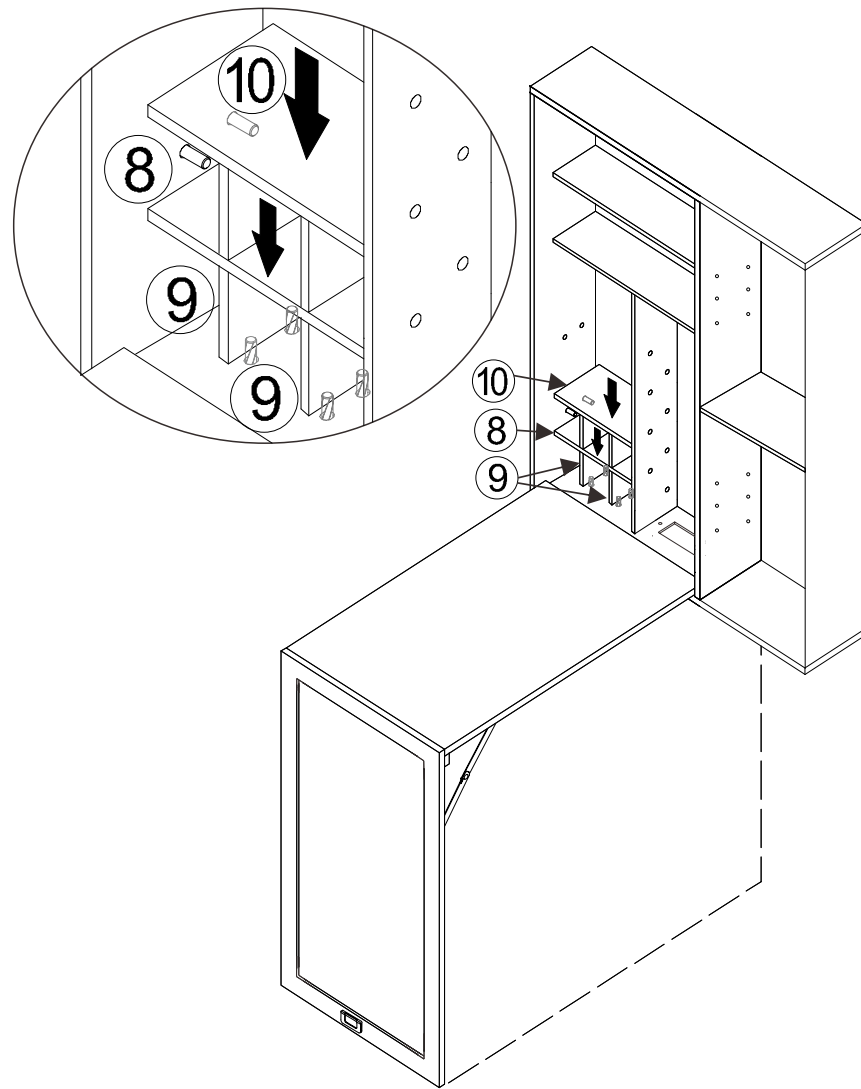


27

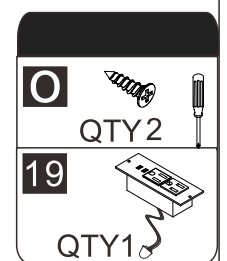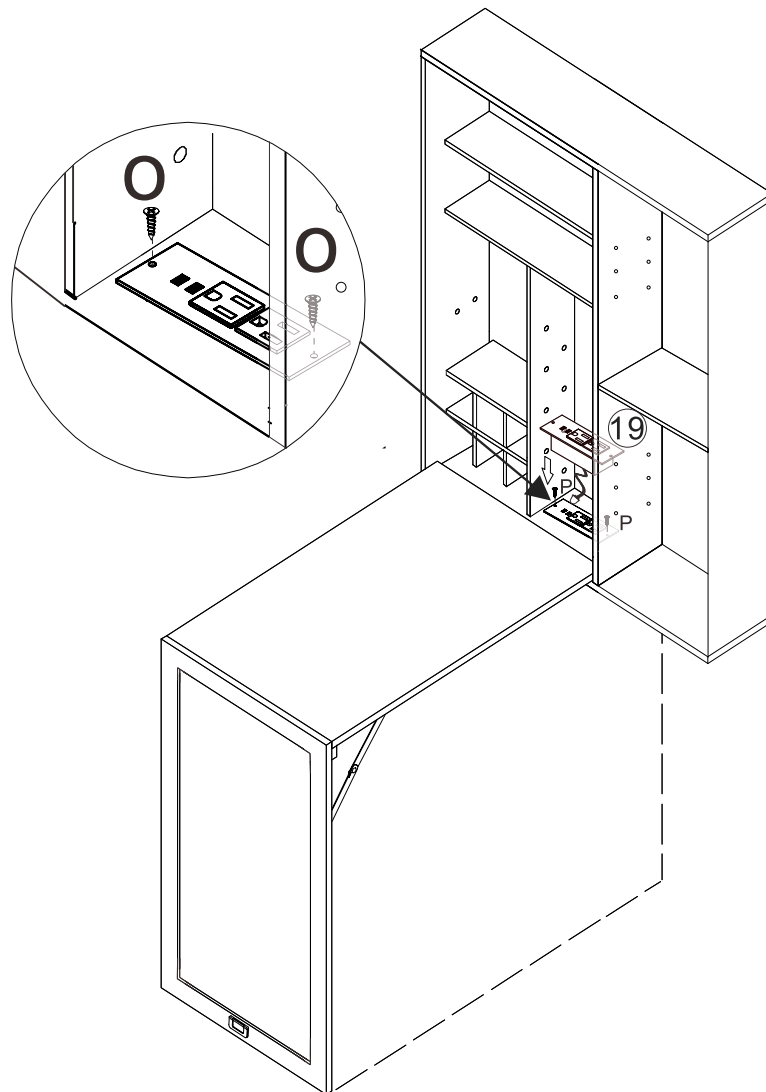


28

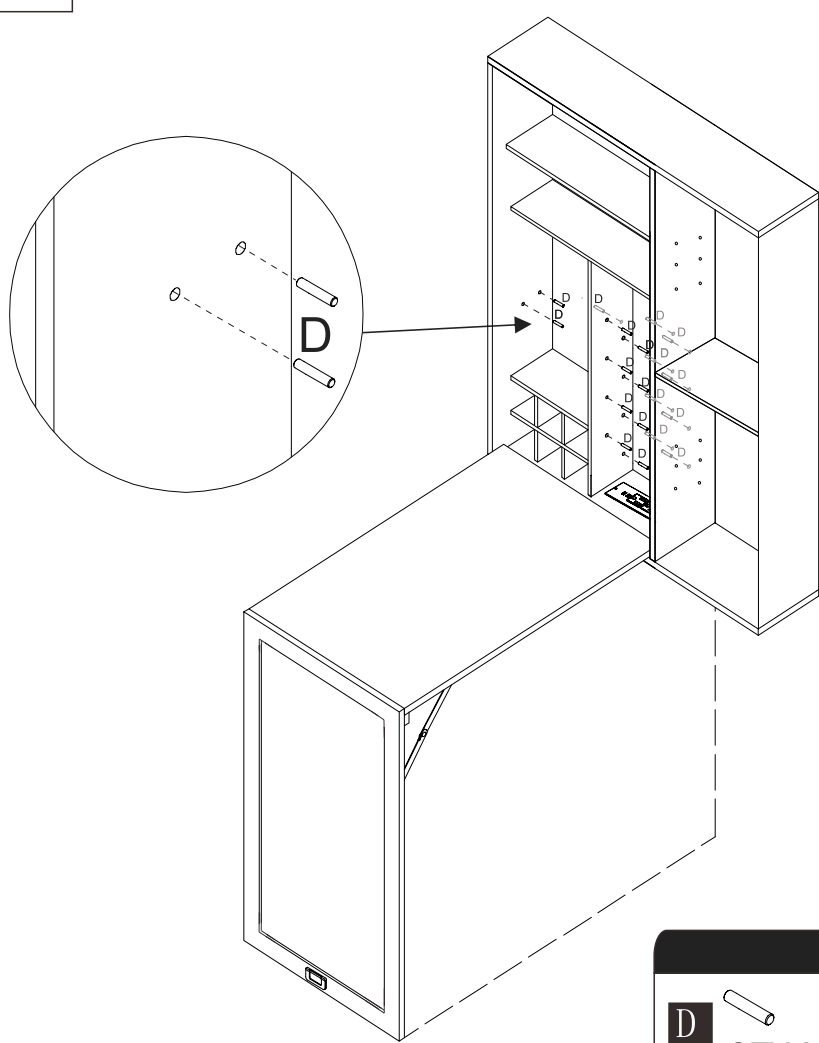





29

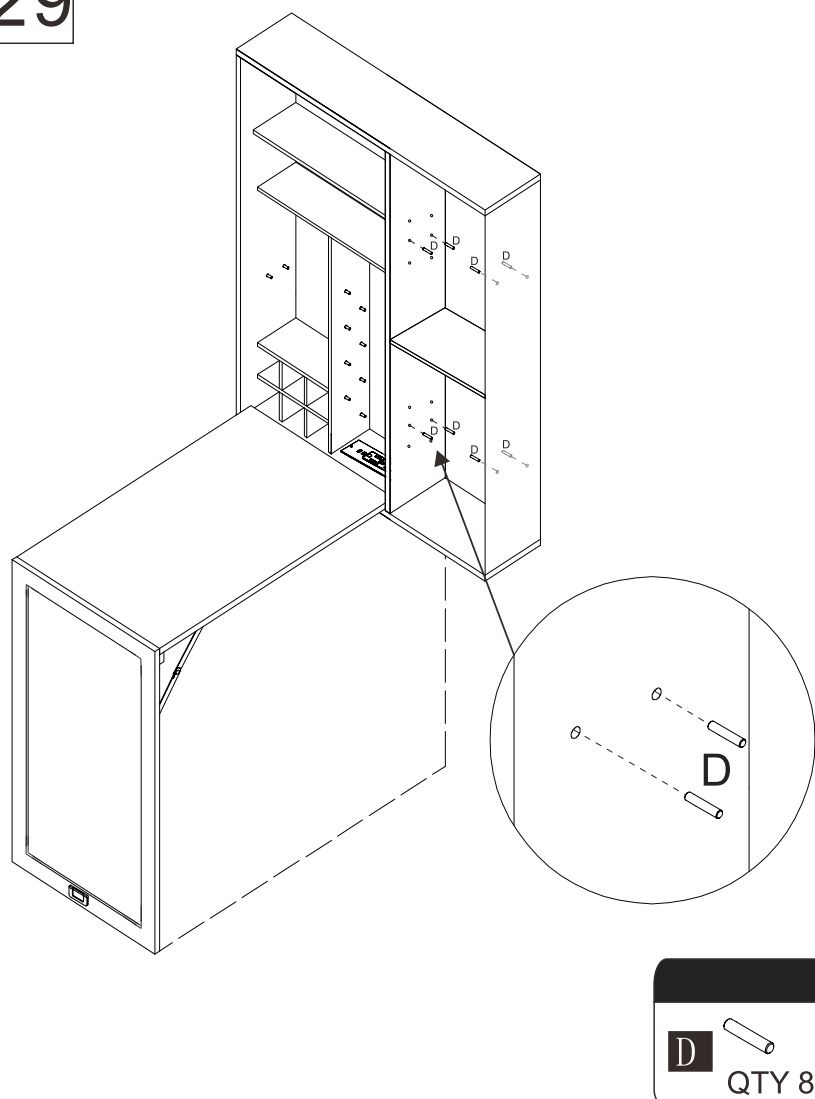

30

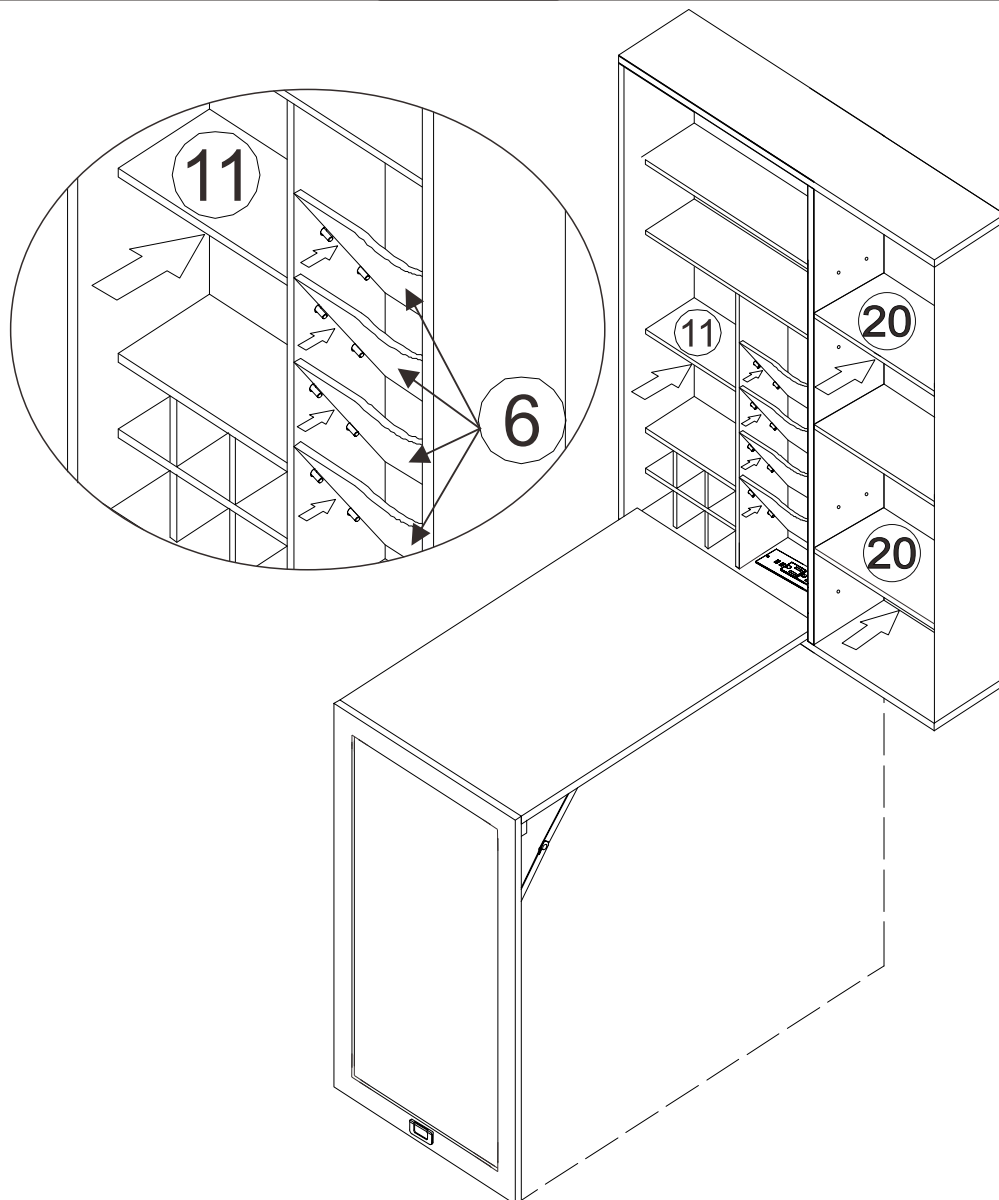

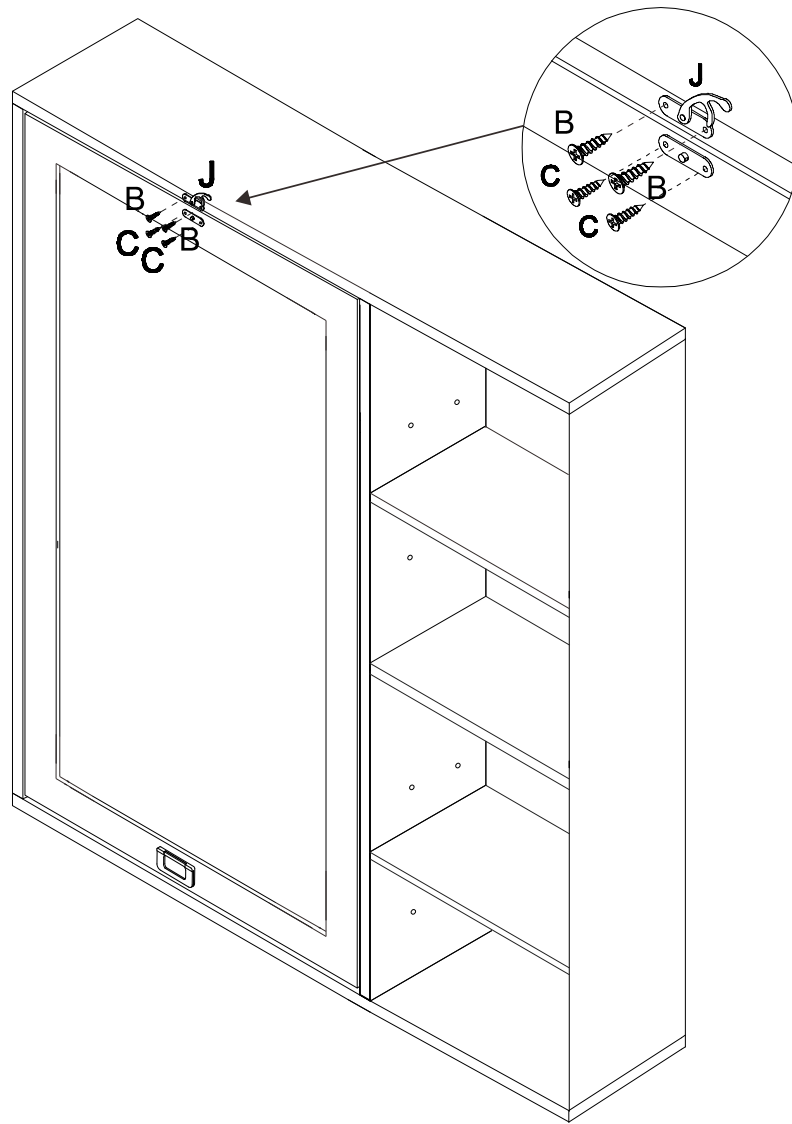

B		3x18MM
		QTY 2
C		3x12MM
		QTY 2
J		
		QTY 1

