


# Item # : AF20OLI2D

## Assembly Instructions

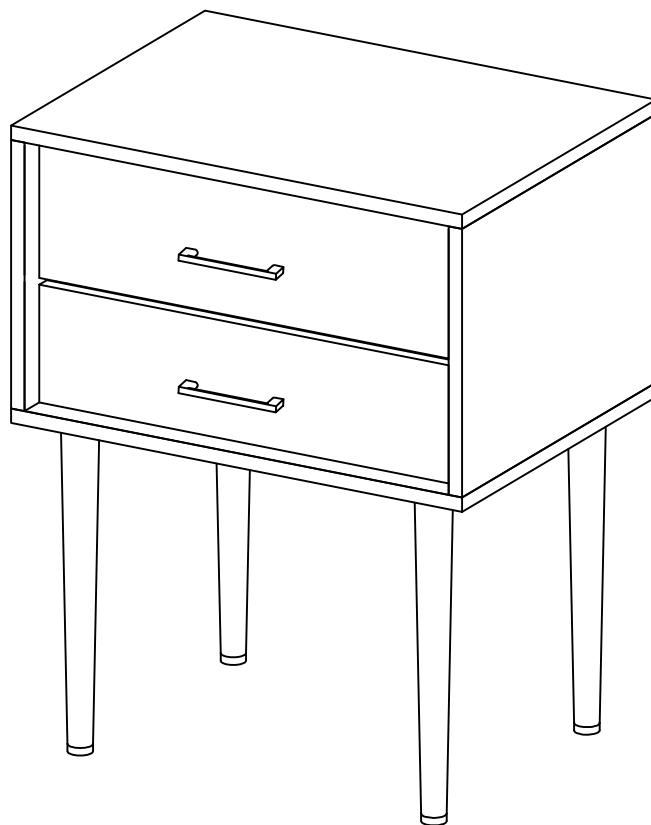


Walker Edison®

*Please visit our website for the most current instructions, assembly tips, report damage, or request parts. **[www.walkerredison.com](http://www.walkerredison.com)***


Revised 07/09/2018

# General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are: wood dowels, screws and bolts.
- V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.

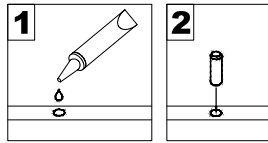


In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.

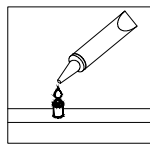

- VI. A Phillips head screwdriver is required for the assembly of this product .

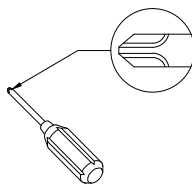


- VII. Power tools should not be used to assemble this product.

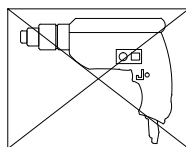





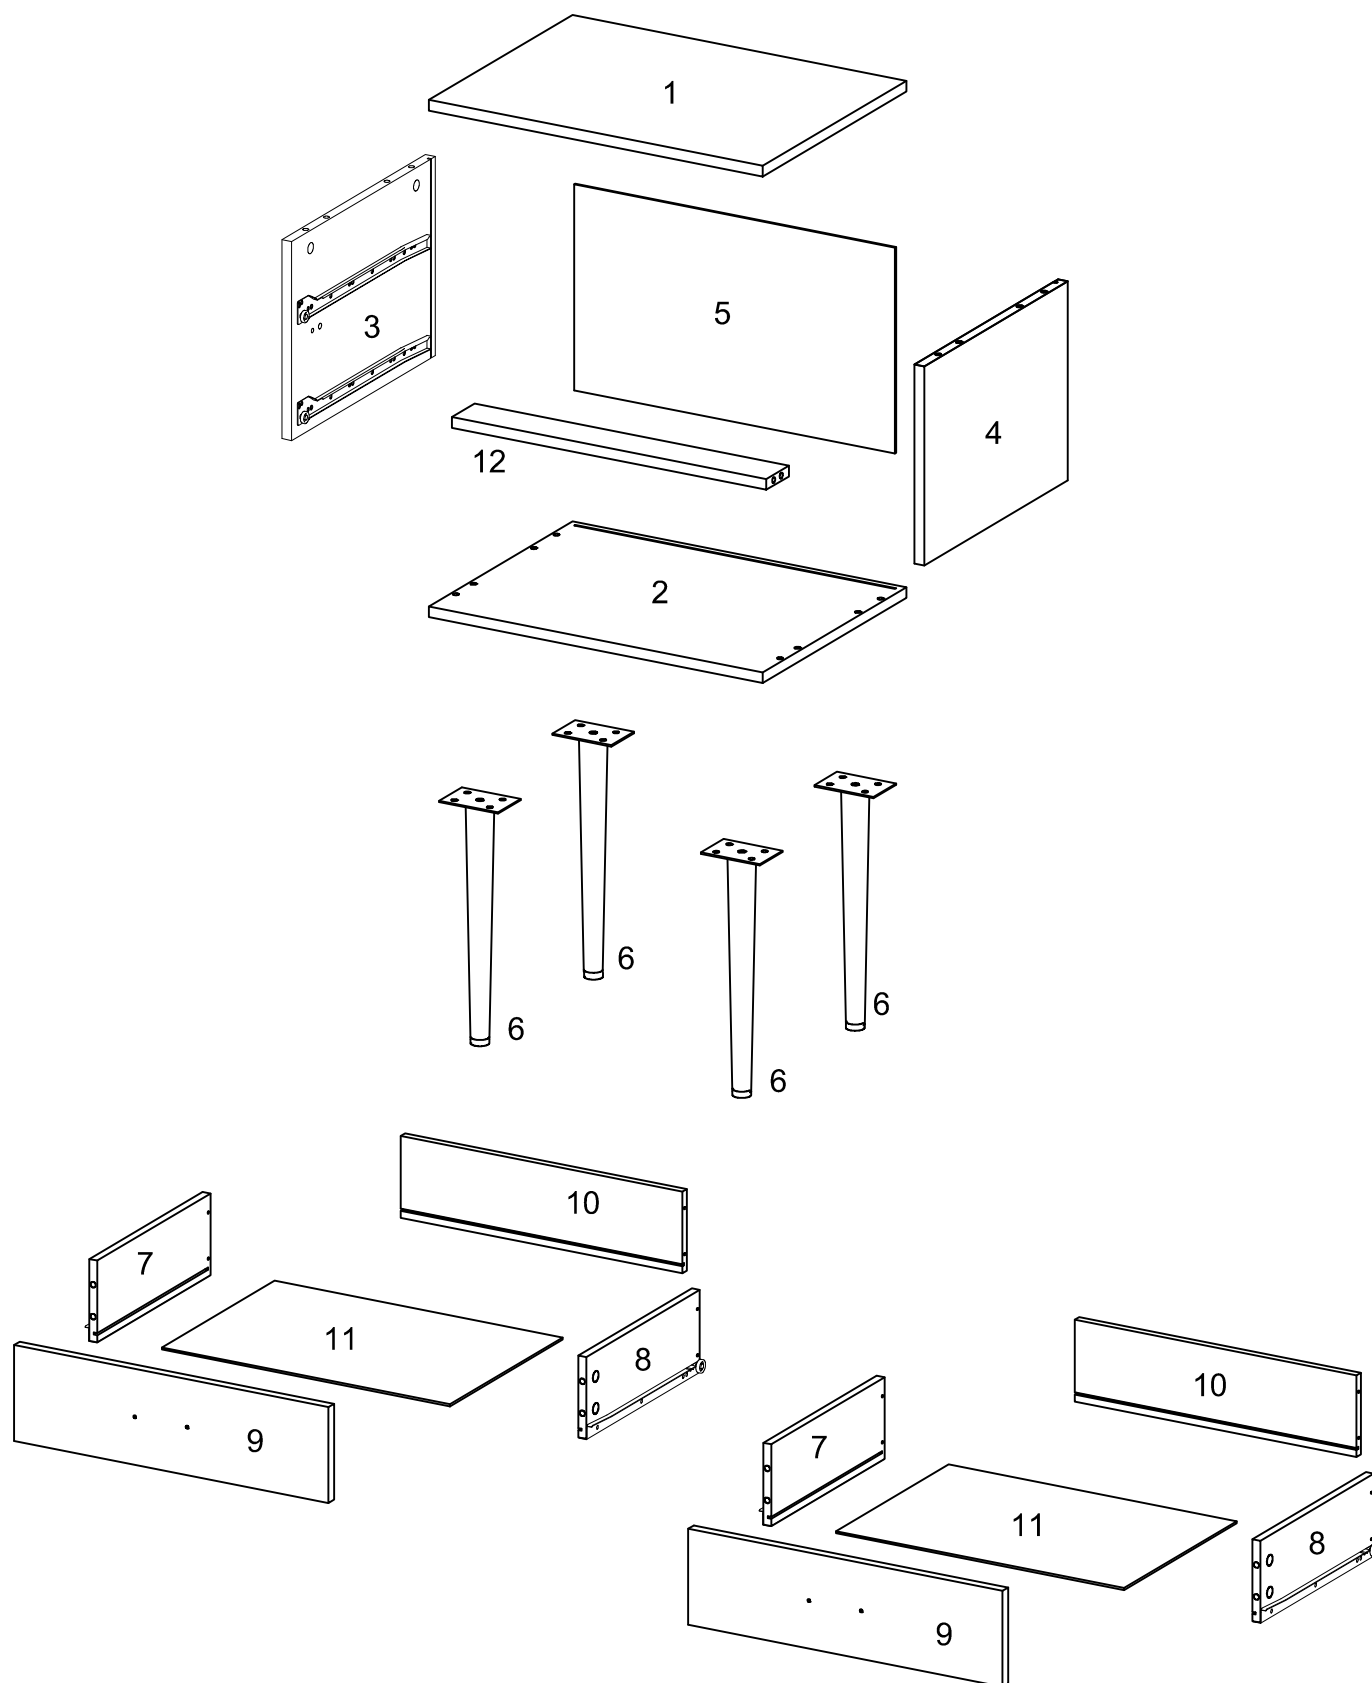










- VIII. Drill may be needed for securing product to wall.

# Parts List



# Hardware List


A		Ø8x30mm	Wooden dowel	10 pcs
B		Ø15x12mm	Cam lock	6 pcs
C		Ø15x9mm	Cam lock	8 pcs
D		Ø6x32mm	Cam bolt	14 pcs
E			Handle	2 pcs
F		Ø4x22mm	Bolt	4 pcs
G		Ø4x32mm	Screw	8 pcs
H		M6x12mm	Bolt	16 pcs
I			Plastic wedge	4 pcs
J		Ø3x17mm	Screw	4 pcs
K		Ø30	Sticker	14 pcs
L			Glue tube	1 pc
M		Ø6x50mm	Bolt	4 pcs
N		M4	Hex Key	1 pc

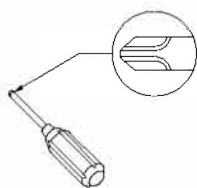

**Philips head screwdriver required for assembly  
(not included)**


*The hardware quantities listed above are required for proper assembly.  
Some extra hardware may also have been included.*

# Step 1

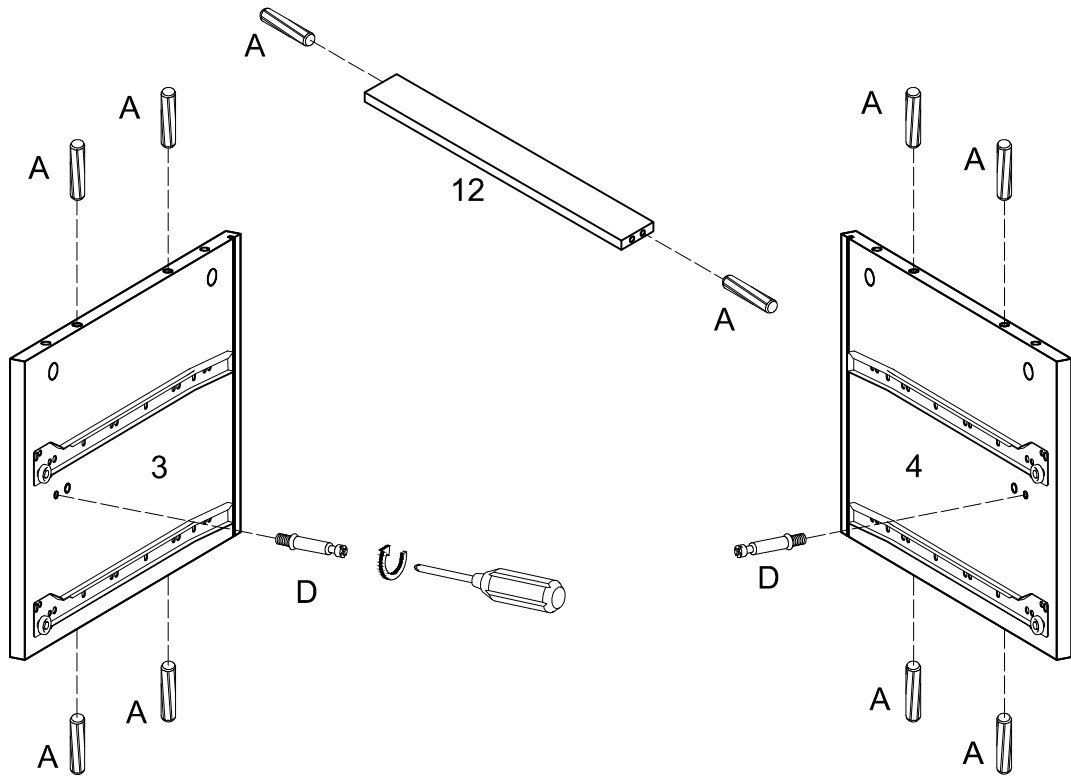



Insert dowels (A) into side panles (3)(4) and slat (12). Screw cam bolts (D) into side panels (3,4).

## Step 2

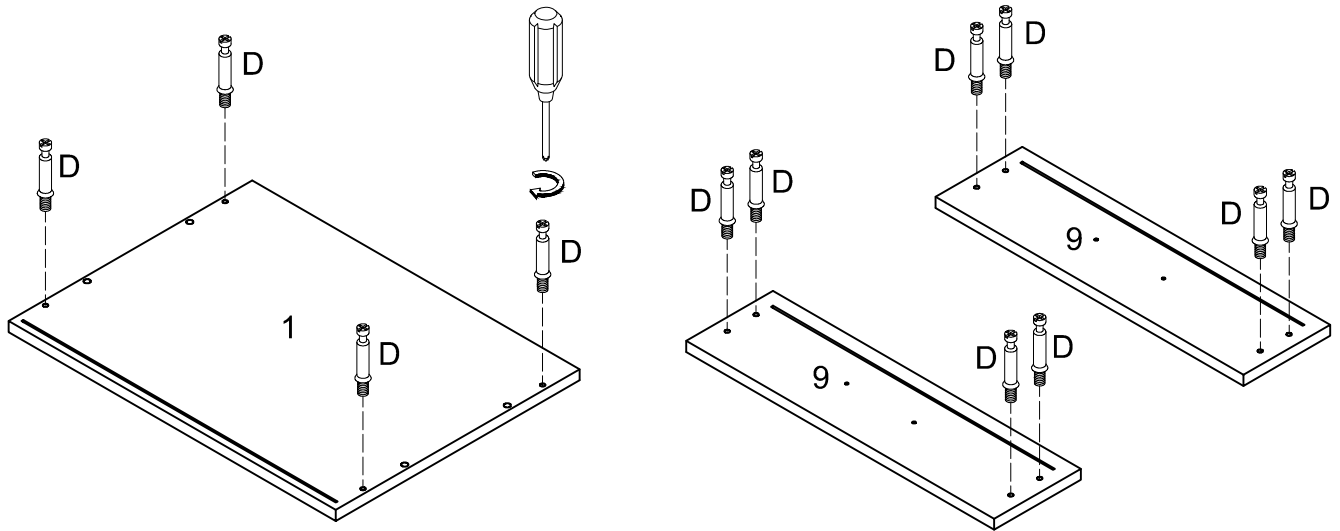


Screw cam bolts (D) into panels (1,9).

## Step 3

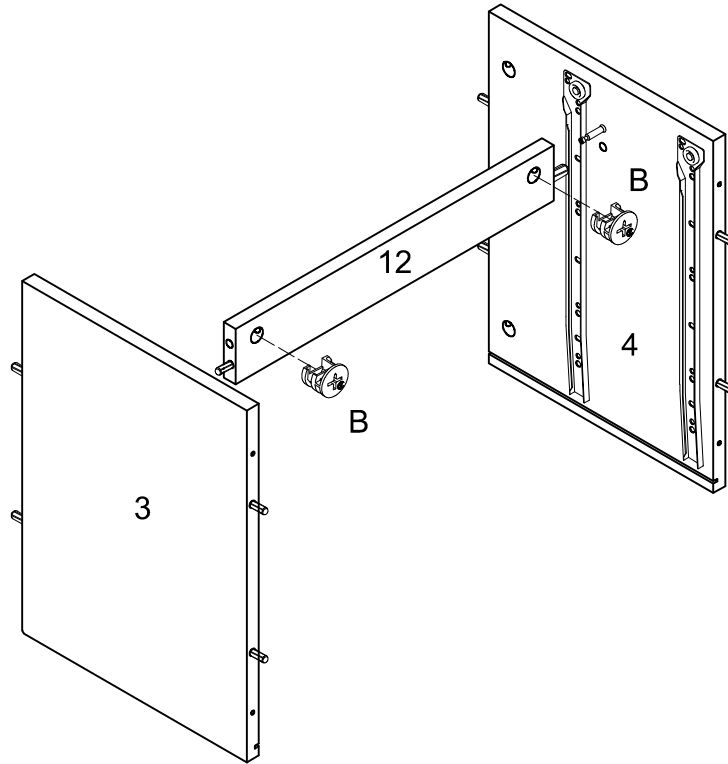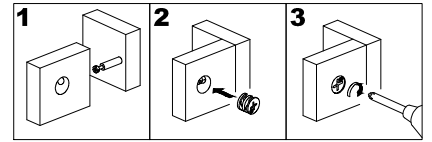

Attach side panels (3,4) to the slat (12). Insert cam locks (B) into slat (12) and tighten with a screwdriver.


## Step 4

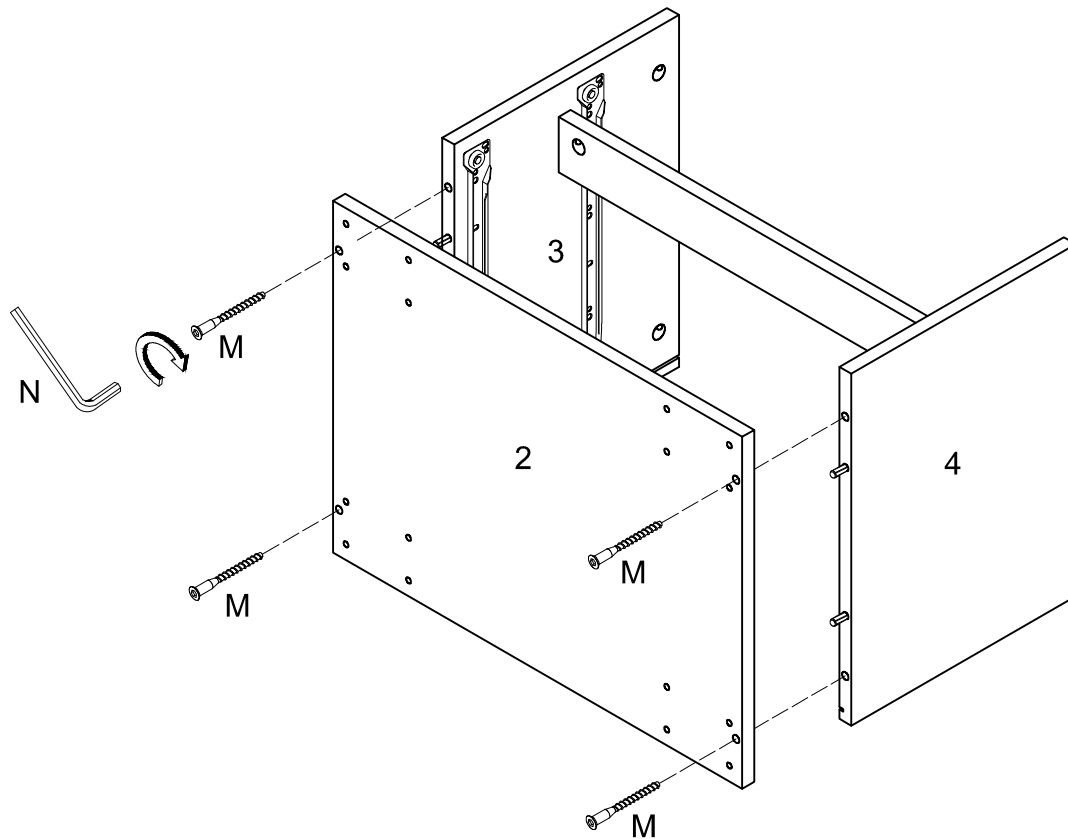

Use Hex Key (N), screw (M) to secure the bottom panel (2) to the side panels (3,4).





## Step 5

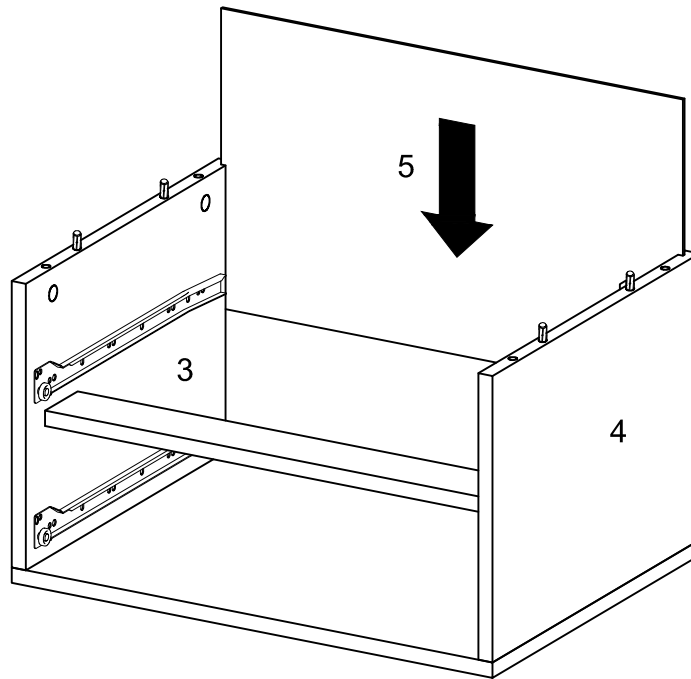


Slide back panel (5) into groove.

## Step 6

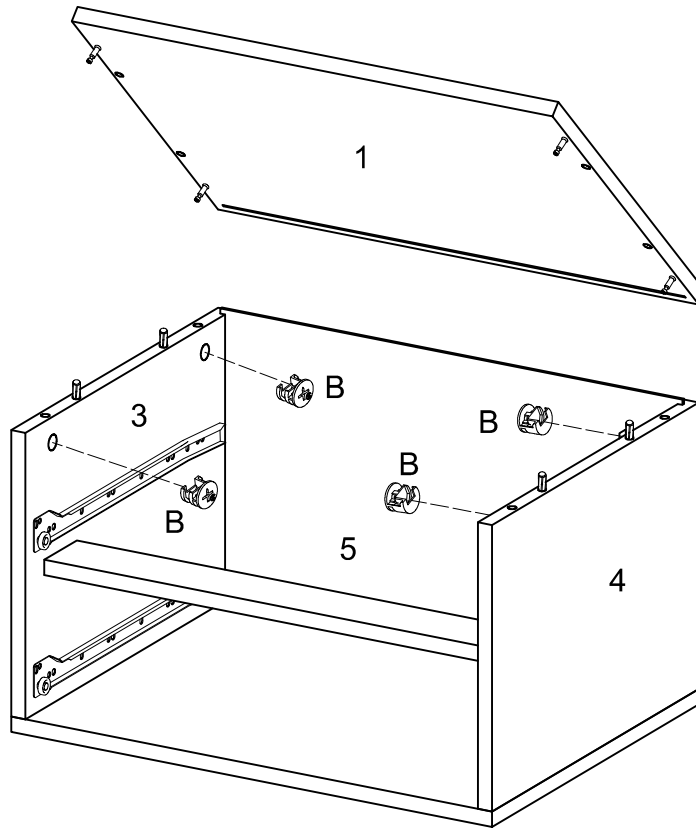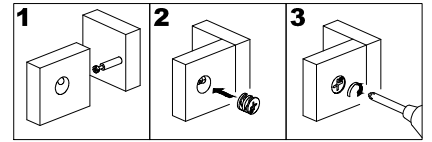


Place the top panel (1) to the side panels (3,4). Insert cam locks (B) into side panels (3,4) and tighten with a screwdriver.

## Step 7

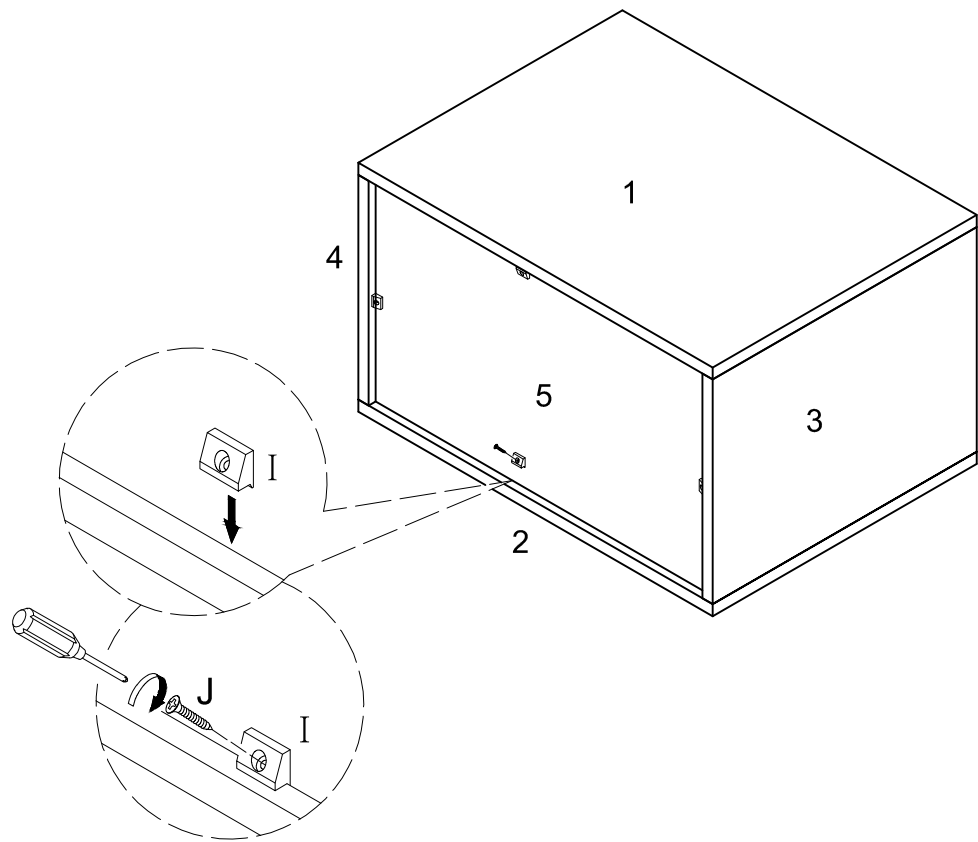


Secure the back panel (5) by using the plastic wedge (I) and screw (J).

## Step 8

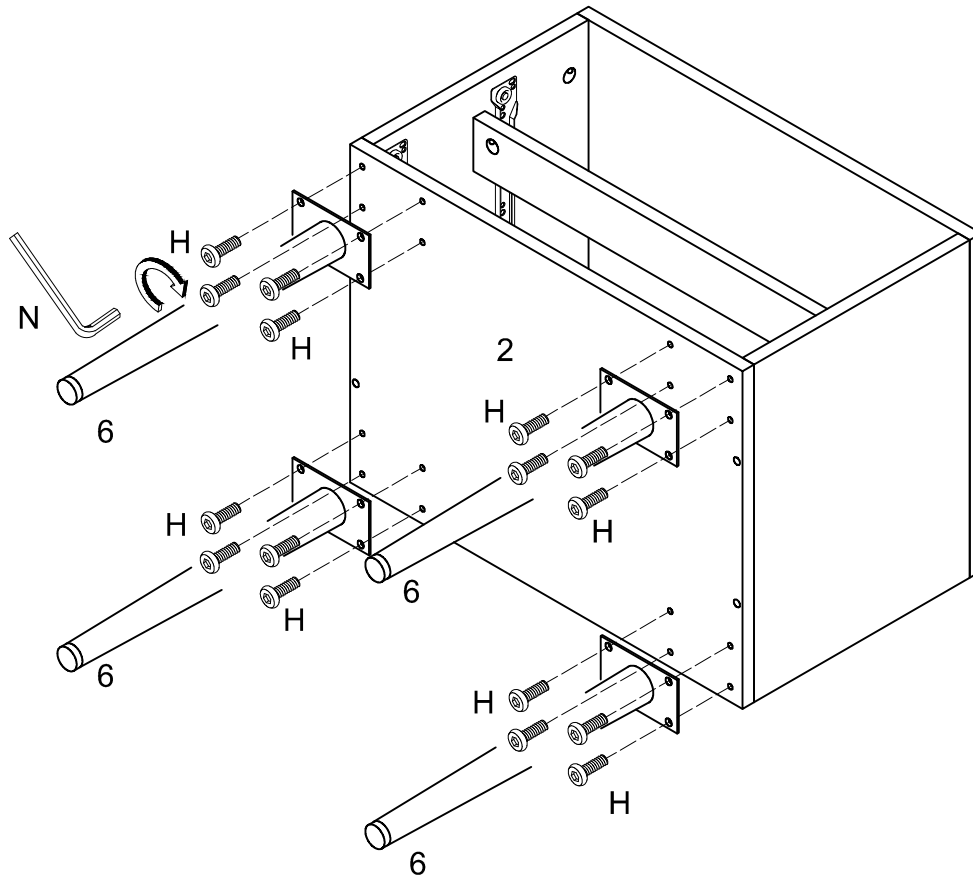


Use Hex Key (N), bolts (H) to secure legs (6) into bottom panel (2).

## Step 9

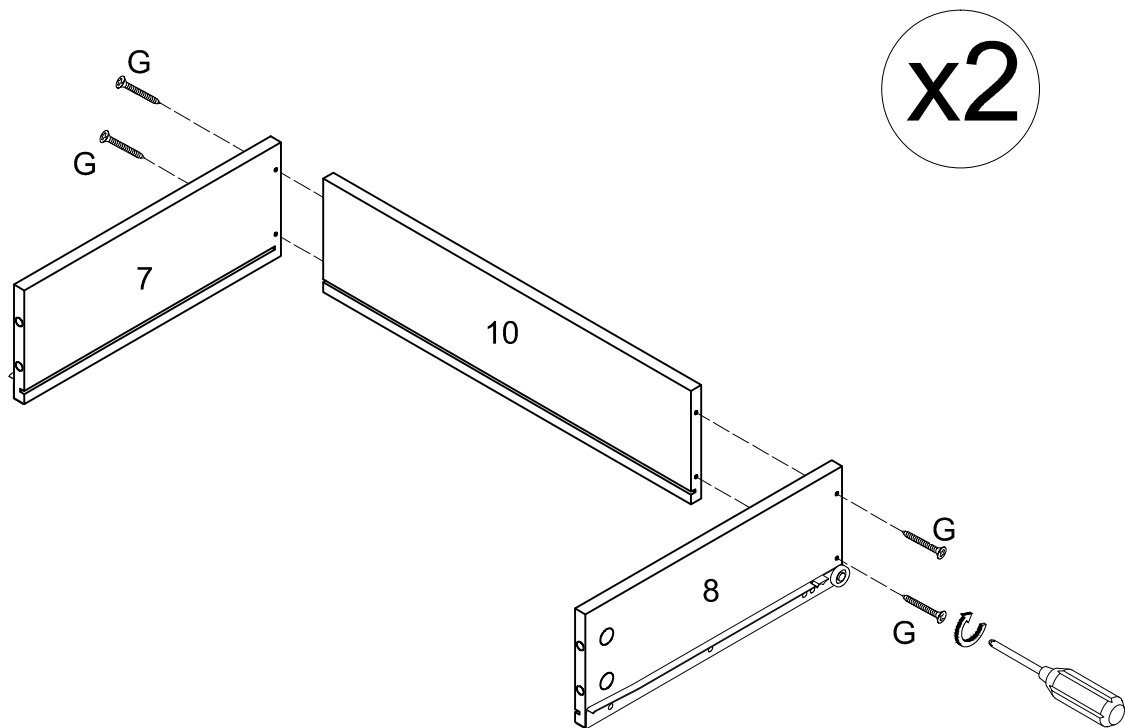


Use screw (G) to secure the drawer side panels (7,8) into drawer back panel (10).

## Step 10

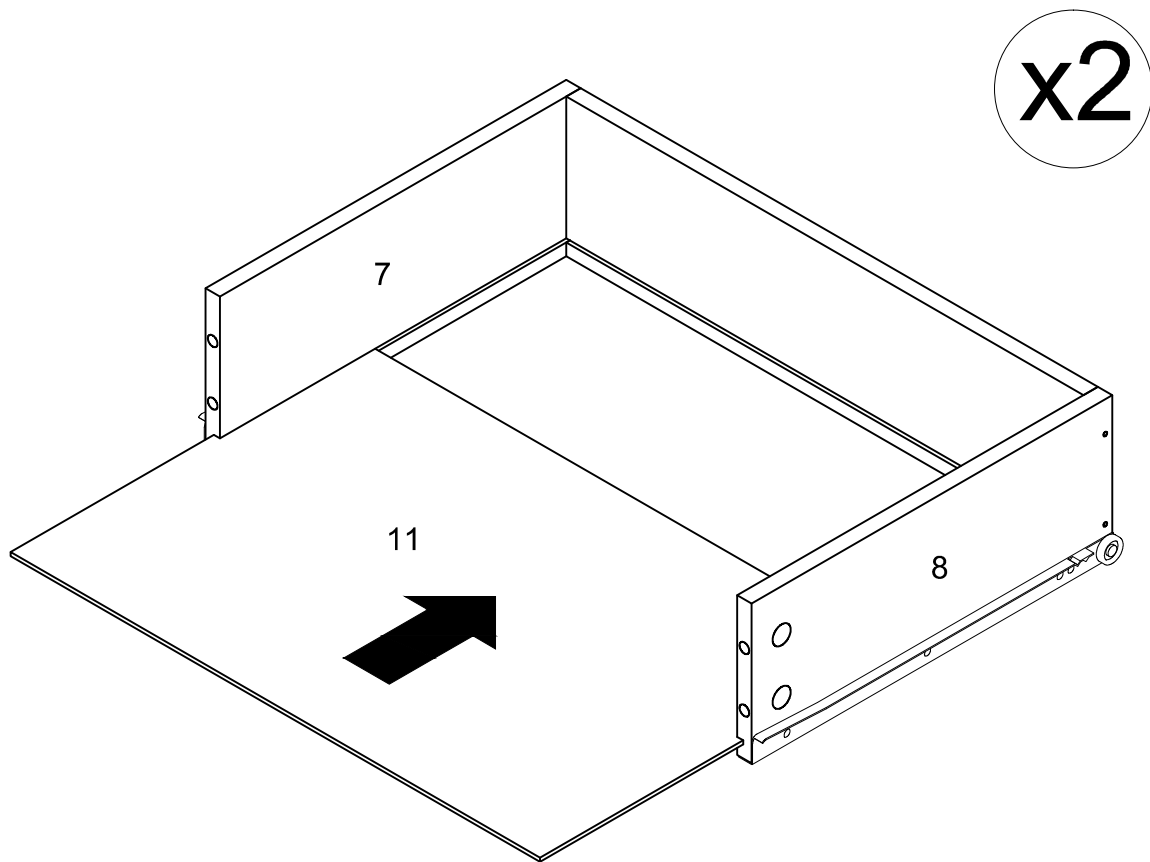



Slide drawer bottom panel (11) into groove.

## Step 11

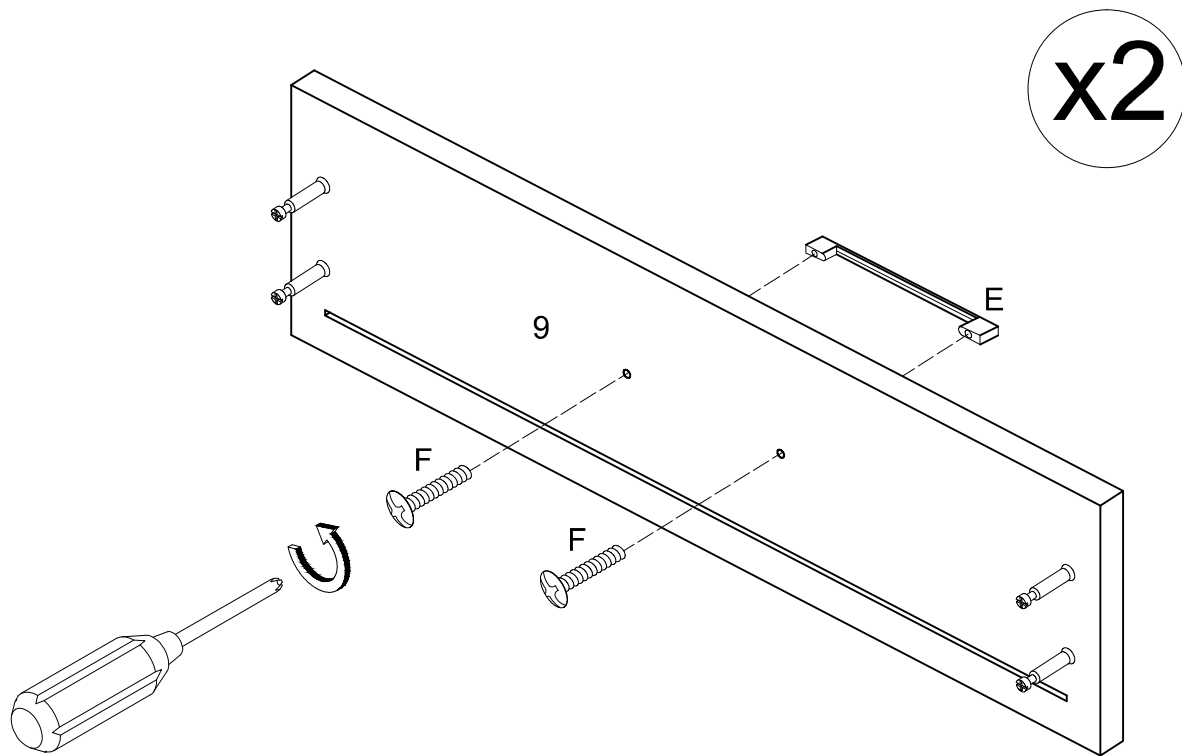

Secure handle (E) with bolts (F) into drawer front panel (9).


## Step 12

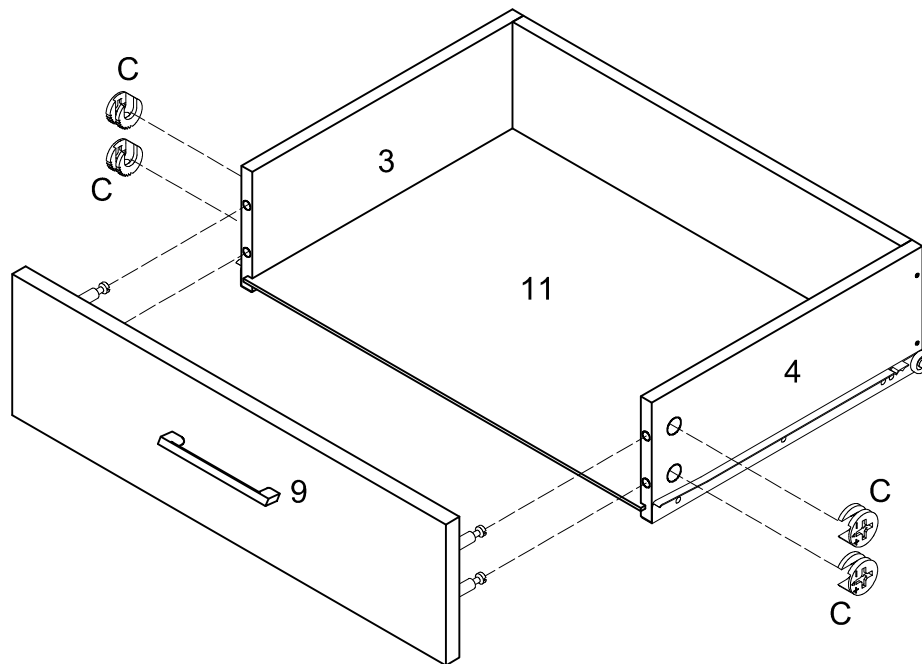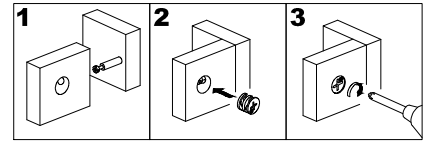

Attach drawer front panel (9) to drawer side panels (3,4). Insert cam locks (C) into drawer side panels (3,4) and tighten with a screwdriver.





## Step 13

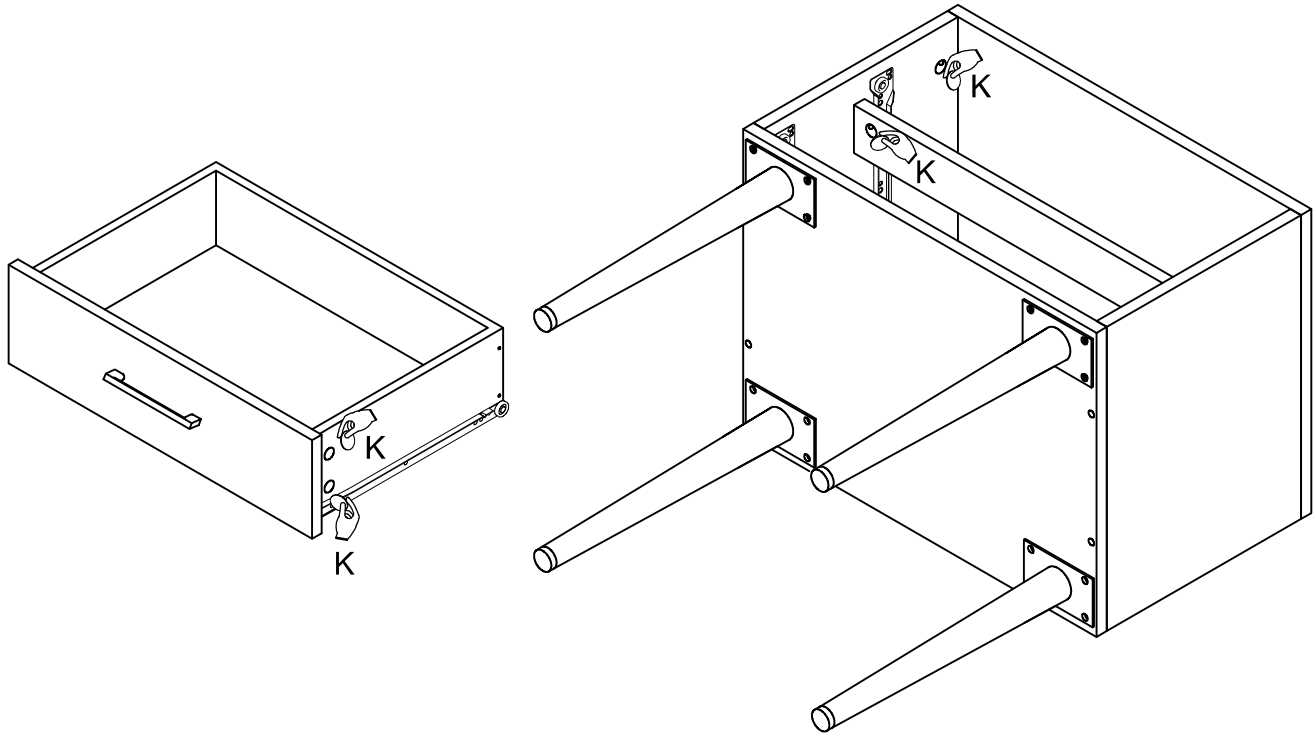



Place sticker (K) over holes as per diagram.

## Step 14

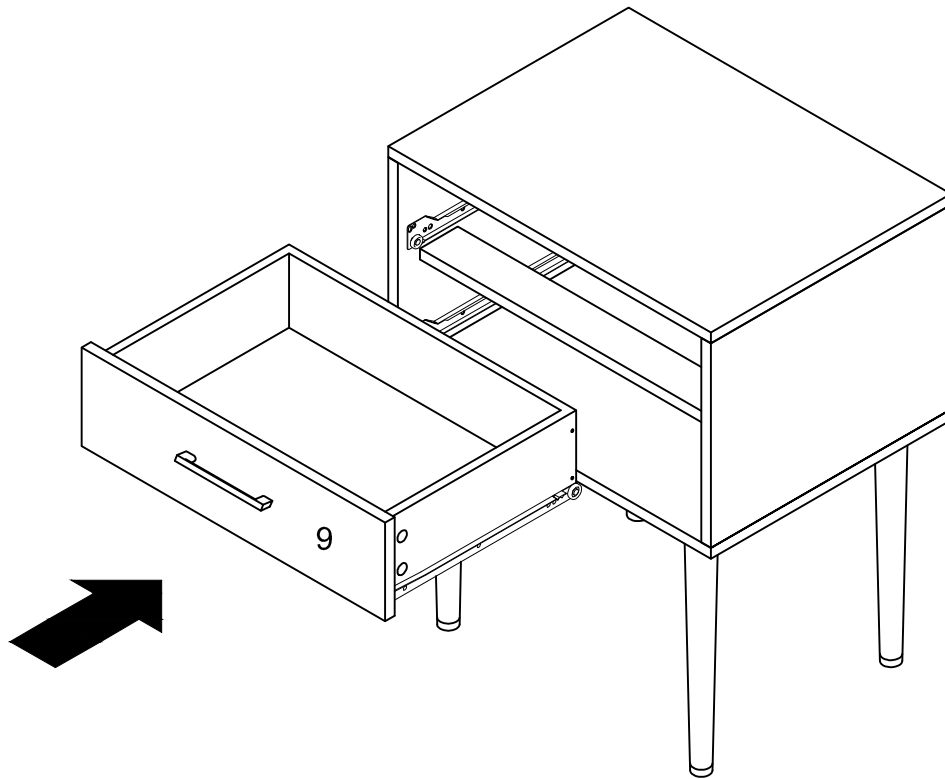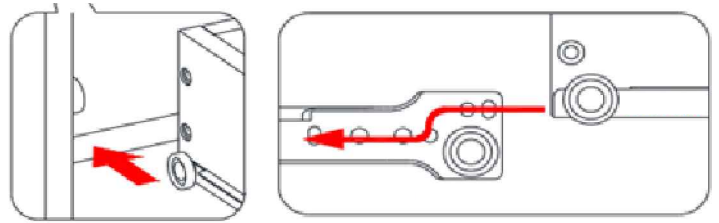


To insert the assembled drawers inside the unit , tip the front of drawer down and drop the rollers of the drawer slide runners behind the rollers of slide tracks on the unit . Lift the front of the drawer up and slide it into the unit.

## Step 15

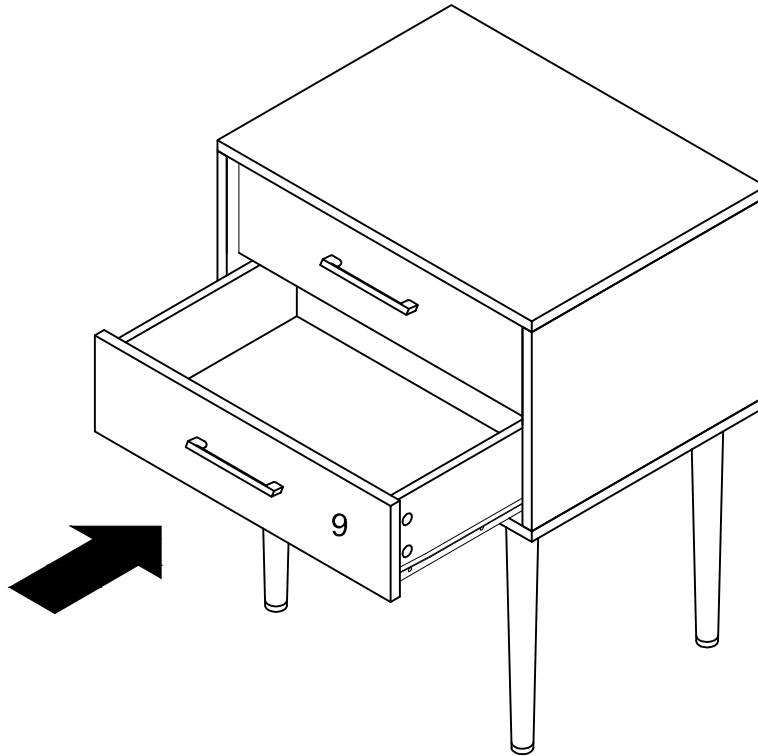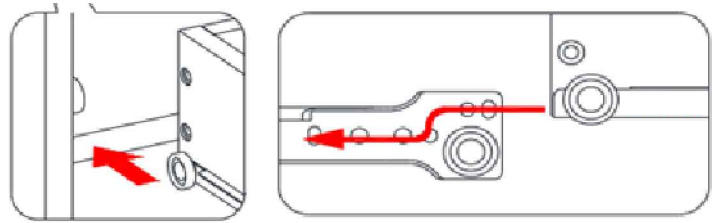

To insert the assembled drawers inside the unit , tip the front of drawer down and drop the rollers of the drawer slide runners behind the rollers of slide tracks on the unit . Lift the front of the drawer up and slide it into the unit.

## Step 16

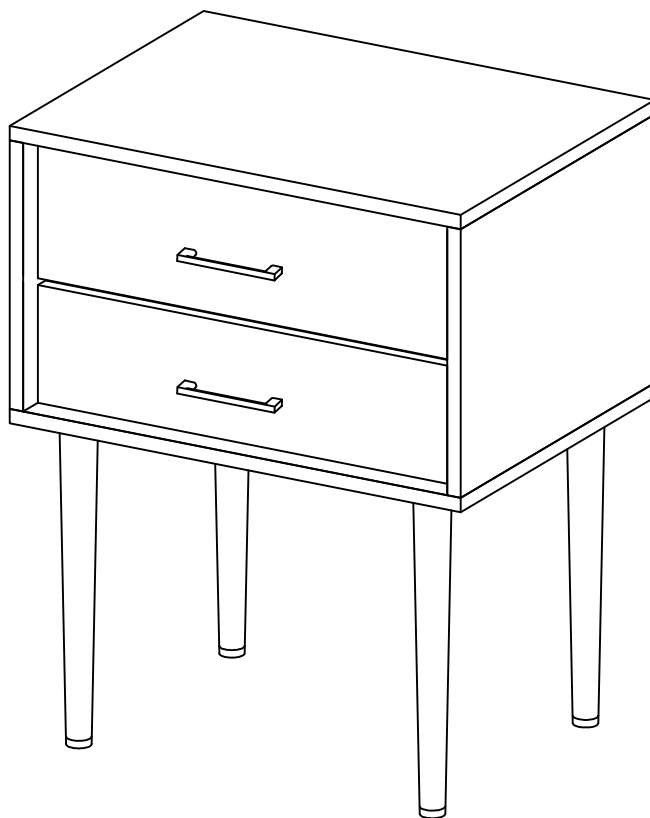

**Final Assembly**