## For Style 1225P20 Assembly Instruction Sheet #IS-1225P20

Code Required: Fathead acressitiver, Philips acressitiver, plans, who culture, who stippers, electrical laps, safety glasses.

(2) 120V LED "14W DIMAKRI E (4000X)

Identified Season (3) 120V LED "14W DIMAKRI E (4000X)


Identified Season (3) 120V Time: 10-20 mirutus

Included the state of th

## **△Warnings and Cautions**

Turn off electricity at circuit breaker or main fuse box before installation. Consult a ficensed electricism if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the ticture. We strongly recommend that a licensed, professional electricism perform the installation.

Disconnect fixture from power source before replacing bufbs. Make sure bufbs are given sufficient time to cool before removal

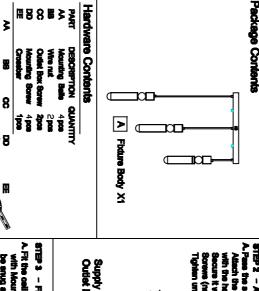

A Pass the supply wires through the Crossbar (EE) Attach the Crossbar (EE) to the Outlet Box (CC) STEP 2 - Attach Croseber to Outlet Box. with the head of the Gree Secure it with Outlet Box Bareins (not included). Supply Wires with Outlet Box Screws Ground Wire griten undi anug **ian Ground Screw facing you.** 8 A **Outlet Box** Ħ

Figure 2

Figure 5

A-Fit the ceiling canopy to Mounting Screws (DD) and secure with Mounting Balls (AA). Note: The ceiling canopy should be arug against the ceiling and the Mounting Balls (AA). correct length is achieved.
Once the ceiling campy is secure, remove the Mounting Ball (AA) and ceiling campy and proceed to Step 4. STEP 3 — Fit Calling Canopy to Crossber Assembly hen screwing Mounting knews (DD) in or out of the necrewing the Hex Nut nd Lock Washer and f not, adjust the length of the ounting Screws (DD) by ber (EE) until the ≱ 8

, Lock Washen

and Hex Nuts to Crossbar.

A. Line up a set of holes on the
Crossbar (EE) and Holes


ne ceing caropy. read Mounting Screwe (DD) the holes on the bar (EE). Pass Lock ors and thread Hex

> Calling Cana 8

ute onto the Mounting


Figure 1

Figure 3

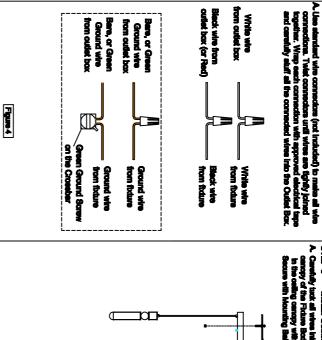

refully tuck all whee into the outlet box and position the ceiling copy of the Foture Body (A) over the outlet box. Align the holes the ceiling campy with the Mounting Screwe (DD). stall Celling Can ig Balls (AA) and hand tighten until enug opy to Calling

STEP 4 - Wire Conn

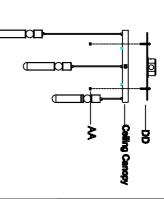

2 of 2