

# ASSEMBLY INSTRUCTIONS








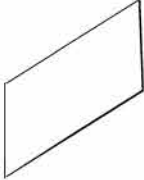




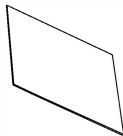
## CHEST















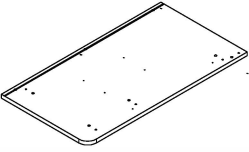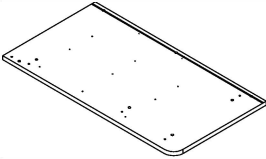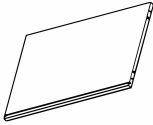
### NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on a dry, soft, smooth and clean surfaces during assembly to prevent any damage. Avoid damp and direct sunlight.
- During assembly do not over tighten the screws or bolts, as this may damage the product.
- Please ensure you retain all the product packaging until the item is completely assembled.
- Periodically check all fitting and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.



## PARTS IDENTIFICATION

<b>P1</b> Quantity: 1  Side Panel-Left	<b>P2</b> Quantity: 1  Side Panel-Right	<b>P3</b> Quantity: 1  Top Panel	<b>P4</b> Quantity: 1  Back Top Rail	<b>P5</b> Quantity: 1  Back Middle Rail
<b>P6</b> Quantity: 1  Back Bottom Rail	<b>P7</b> Quantity: 3  Front Rail	<b>P8</b> Quantity: 2  Back Panel	<b>P9</b> Quantity: 3  Drawer Front	<b>P10</b> Quantity: 3  Drawer Back
<b>P11</b> Quantity: 3  Drawer Side-Left	<b>P12</b> Quantity: 3  Drawer Side-Right	<b>P13</b> Quantity: 3  Drawer Base		

## HARDWARE LIST

<b>H1</b> Flat Head Screw m6 x 40mm  Quantity: 16 pcs	<b>H2</b> Screw m4 x 12mm  Quantity: 36 pcs	<b>H3</b> Screw #9 x 1 1/2"  Quantity: 12 pcs	<b>H4</b> Leg Stud  Quantity: 4 pcs	<b>H5</b> Allen Key  Quantity: 1 pc
<b>H6</b> Wooden Dowel m8 x 25mm  Quantity: 16 pcs	<b>H7</b> Pan Head Screw #6 x 20mm  Quantity: 6 pcs	<b>H8</b> Wooden Dowel m6 x 25mm  Quantity: 6 pcs	<b>H9</b> Cam Lock 12/9.5mm  Quantity: 6 pcs	<b>H10</b> Connecting Bolts  Quantity: 6 pcs
<b>H11</b> Sticker  Quantity: 16 pcs	<b>H12</b> Pull Handle  Quantity: 3 pcs	<b>H13</b> Drawer Slider  Quantity: 3 sets		



## STEP 1 *insert wooden dowels (H6) & (H8) into the following parts respectively.*

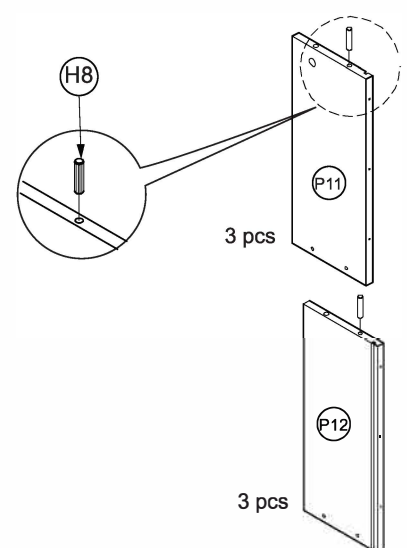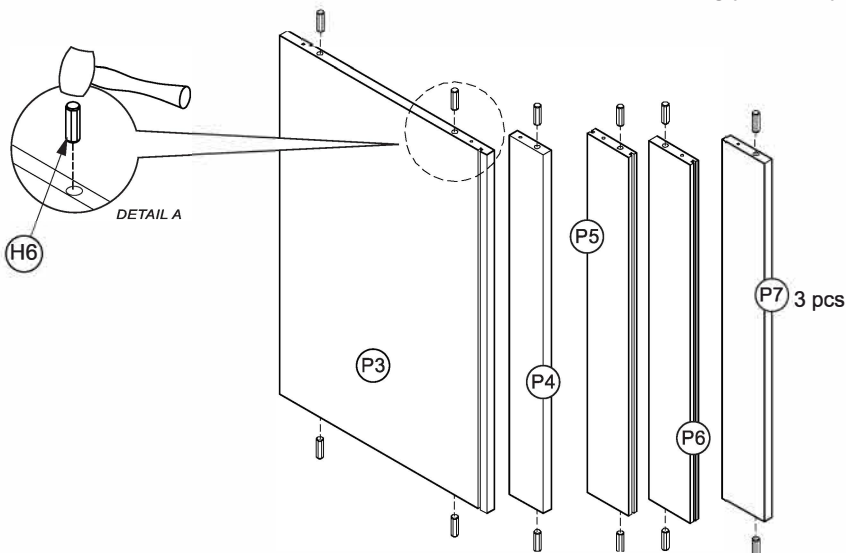


# ASSEMBLY INSTRUCTIONS

## CHEST


**STEP 2** install the hardware into the following parts respectively.

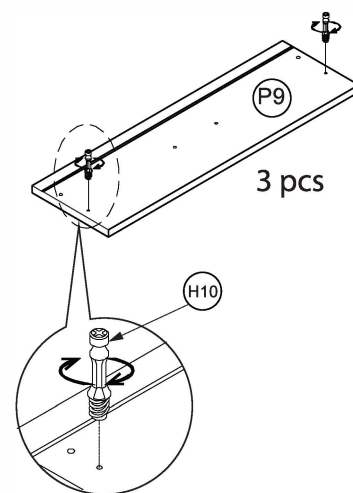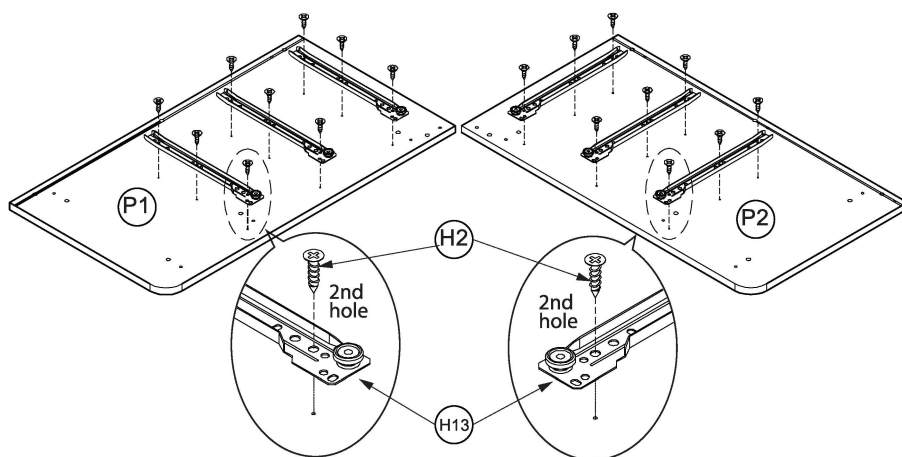

**STEP 3**

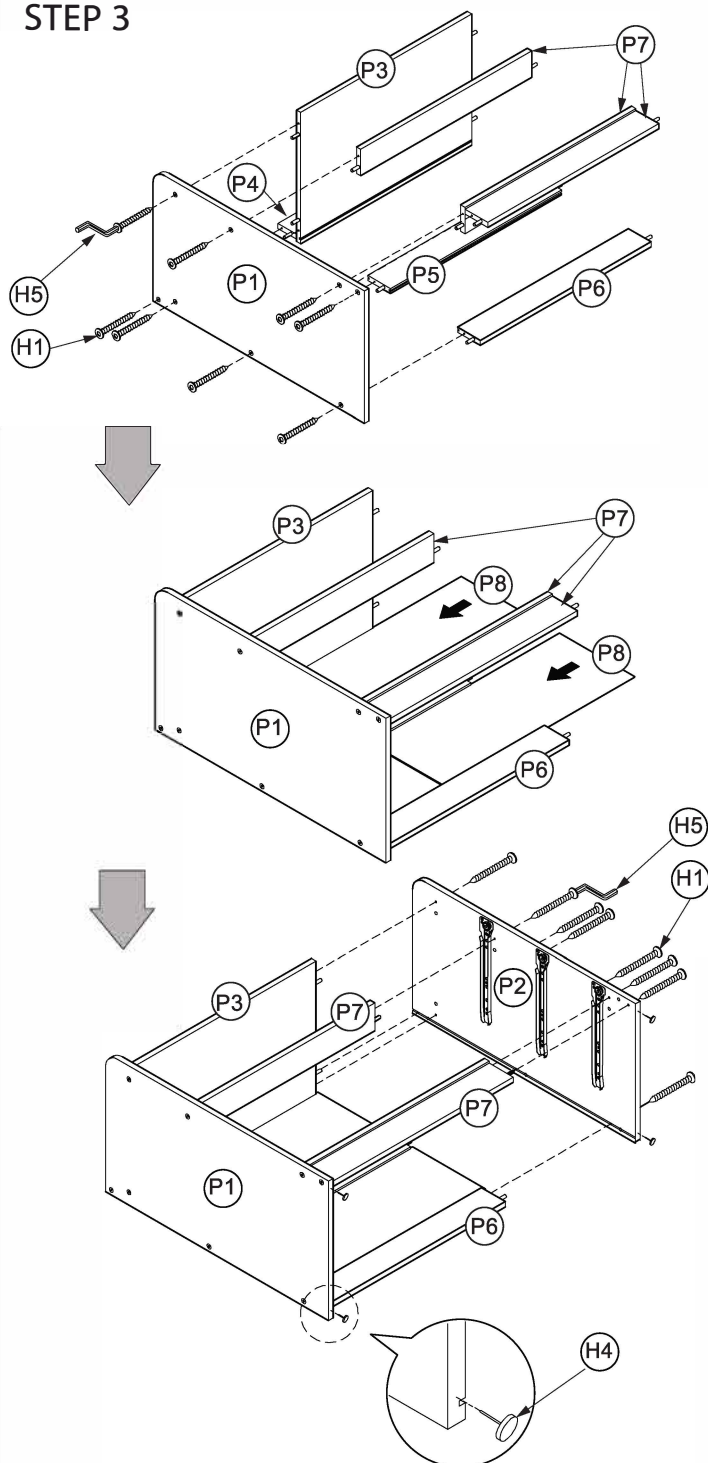

**STEP 4** Drawer assembly.

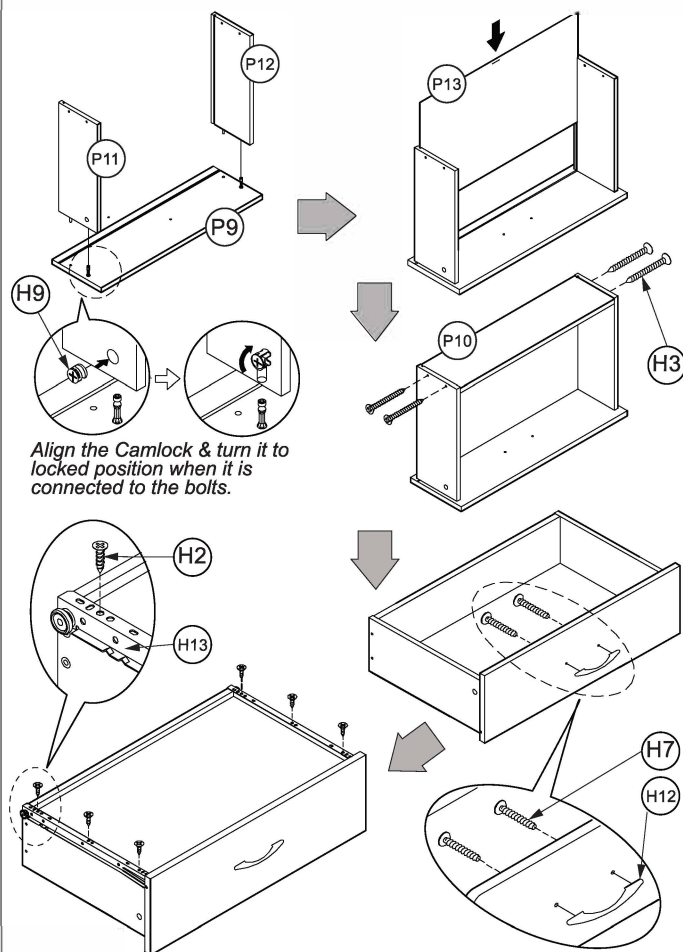

**STEP 5**

