


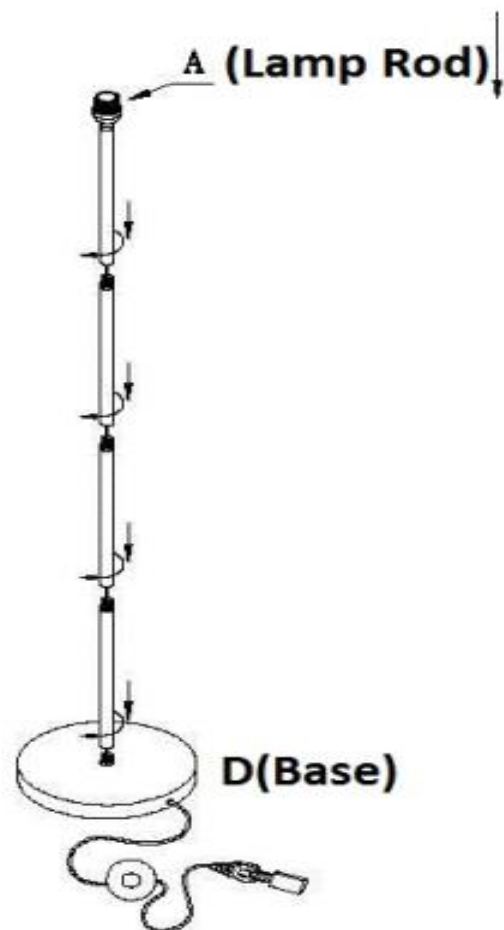
# ASSEMBLY INSTRUCTIONS

1. Unpack all parts from the carton carefully
2. Place the lamp base D) on the floor, thread the rods (A) clockwise to the base one by one, refer figure (1) on page 2.
3. Put the shade (B) onto the socket, refer figure (2) on page 2.
4. Then use Rim(C) to secure the shade (B) on the socket, refer figure (3) on page 2.
5. This lamp uses a Type "A" 100 watt bulb not included.
6. This lamp with a foot step type switch.

## Important safety instruction:

This floor lamp has a polarized plug (one blade is wider than the other). As a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it is still does not fit. Contact a qualified electrician, never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

CAUTION: TO REDUCE THE RISK OF FIRE USE  
MAXIMUM 100 WATT TYPE A BULE. 




**FIGURE(1)**



**FIGURE(2)**



**FIGURE(3)**

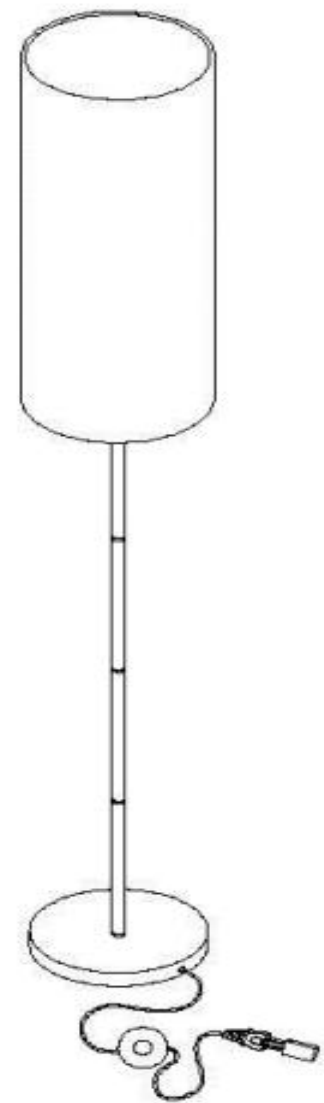

**FIGURE(4)**