ASSEMBLY INSTRUCTION FOR ACME FURNITURE MODEL# BD02353Q


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

IMPORTANT: PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

	HARDWARE LIST					
ITEM	DESCRIPTON	DRAWING	SIZE	QTY		
А	JCBB SCREW		M8 X 20MM	8PCS		
В	JCBC SCREW	0	M6 X 35MM	6PCS		
С	JCBC SCREW		M6 X 50MM	6PCS		
D	WOOD DOWEL		M8 X 30MM	2PCS		
Е	SPRING WASHER	0	M6 X 12MM	8PCS		
F	FLAT WASHER	0	M6 X 19MM	8PCS		
G	SCK SCREW	()	M4 X 32MM	8PCS		
Н	L - KEY		M4 X 100MM	1PC		
Ι	L - KEY		M5 X 65MM	1PC		

PART LIST					
ITEM	DESCRIPTON	DRAWING	QTY		
1	HEADBOARD		1PC		
2	HEADBOARD LEG WITH LABEL"R"	₹ Ţ	1PC		
3	HEADBOARD LEG WITH LABEL "L"		1PC		
4	FOOTBOARD		1PC		
5	FOOTBOARD LEG		2PCS		
6	SIDE RAIL L/R	a constant	2PCS		
7	SLAT		4PCS		
8	SUPPORT LEG WITH ADJUSTABLE FEET	Î	4PCS		

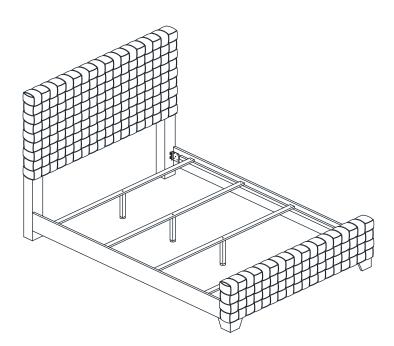

ATTENTION

*** Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements.

ASSEMBLY INSTRUCTION FOR ACME FURNITURE MODEL# BD02353Q

