

ReGENCY

Legacy Racetrack Conference Table • INSTRUCTIONS

(LCTRT7135, LCTRT9543, LCTRT12047)

Organize your parts. You may need a rubber mallet.



Parts:

A: Legs



Quantity: 2

B: Tabletop



Quantity: 2

C: Stringer



Quantity: 1

D: EClip Bracket



Quantity: 2
(Not included with LCTRT12047)

Hardware:

E: Flat Bracket



Quantity: 2

G: Corner Bracket



Quantity: 2

H: DPEL



Quantity: 1

F: Thumb Screws



Quantity: 10

IMPORTANT NOTICE:

Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts. Check to be sure that you have all parts and hardware. Remove all wrapping materials, including staples & packing straps before you start to assemble. Keep all hardware parts and packaging out of reach of children.

Any problems or questions call Regency Office Furniture at 1-866-816-9822

REGENCY

Legacy Racetrack Conference Table • INSTRUCTIONS

(LCTRT7135, LCTRT9543, LCTRT12047)

Organize your parts. You may need a rubber mallet.

STEP 1a: Attach **Stringer (C)** to one of the **Legs (A)** by lining up the Eclip with its corresponding holes, and sliding down into place (see figure 1). *Please Note: The interior of Legs(A) have two EClip attachment holes and the exterior has just one.*

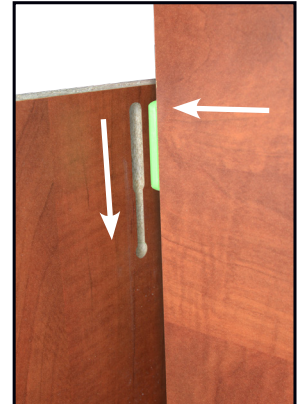



Figure 1

STEP 1b: Attach **Stringer (C)** to the other **Leg (A)** (see figure 2) by lining up the Eclip with its corresponding holes, and sliding down into place (see figure 1.) *Please Note: The interior of Legs (A) have two EClip attachment holes.*



Figure 2

STEP 2: Attach **Eclip Brackets (D)** to outside of **Legs (A)** by lining up Eclip with it's corresponding hole, and sliding down into place (see Figure 1 above). **Please Note:** Skip this step if you are assembling an LCTRT12047.

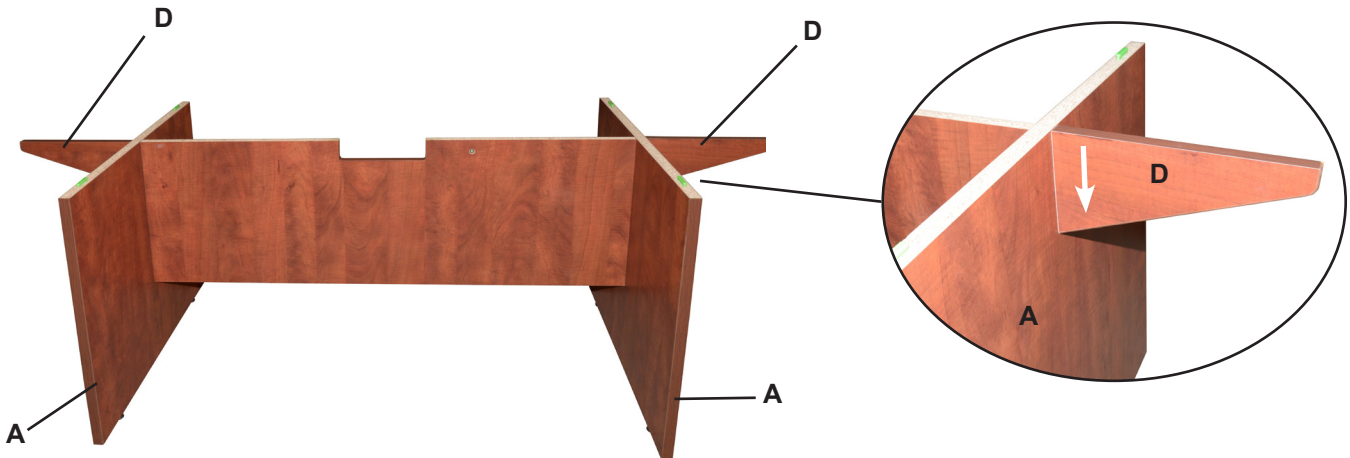

ReGENCY

Legacy Racetrack Conference Table • INSTRUCTIONS

(LCTRT7135, LCTRT9543, LCTRT12047)

Organize your parts. You may need a rubber mallet.

STEP 3: Attach **Tabletops (B)** to assembled base by lining up pre-drilled holes on bottom with the EClips on **Legs (A)**. Then slide **Tabletops (B)** into place from opposite sides. *Please note: fit will be snug. You may need a rubber mallet to tap into place*



STEP 4a: From underneath the table, lock both Sash Locks on **Tabletops (B)** (see figure 3).

STEP 7b: From underneath the table, attach both **Flat Brackets (E)** and **Corner Brackets (G)** into pre-drilled holes by using **Thumb Screws (F)** (see figures 4 and 5).



Figure 3



Figure 4



Figure 5

OPTIONAL STEP 8: Insert **DPEL(H)** using provided screws.

