
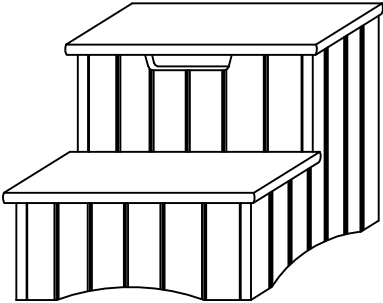



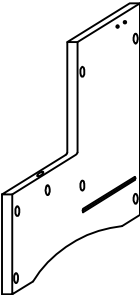
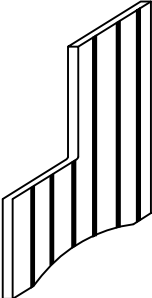
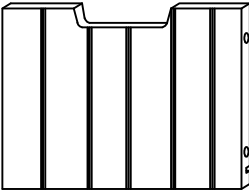
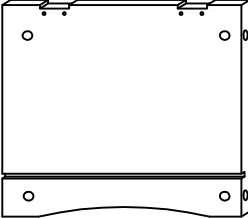




Assembly Instructions	Tools Required	Hardware Provided
	 Phillips screwdriver Assembly: 2 Adults are required to safely assemble this product.	  B1 15SETS-Camlocks  B2 2SETS-Hinges and screws  B3 1SET-Safety Hinge and screws
Furniture Parts		
 A1 1PC-Top panel  A2 1PCS-Side panels  A3 1PCS-Side panels  A4 1PC-Middle panel  A5 1PC-Back panel  A6 1PC-Front panel  A7 1PC-Bottom panel  A8 1PC-Low Top		


Step 1

Assemble the front panel A6, the middle panel A4 and the back panel A5 to the side panel A2 using camlocks B1.

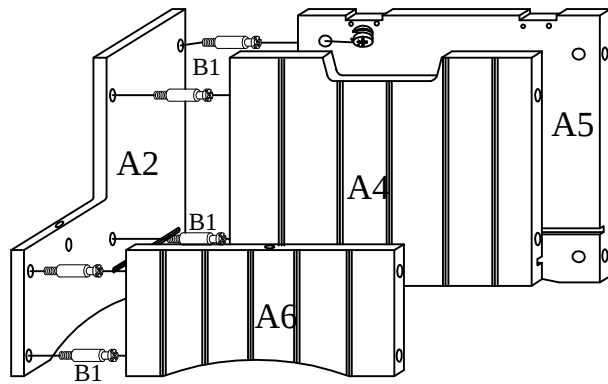


Step 2

Insert the bottom panel A7 into the grooves of middle panel A4 and back panel A5.

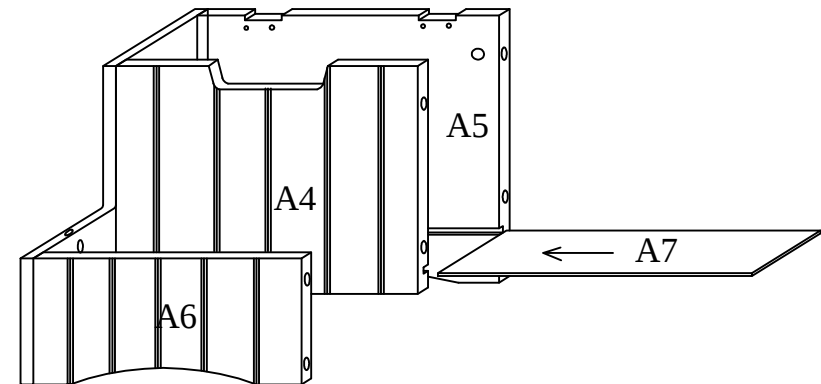


Step 3

Assemble the side panel A3 to the front panel A6, the middle panel A4 and the back panel A5 using camlocks B1 .

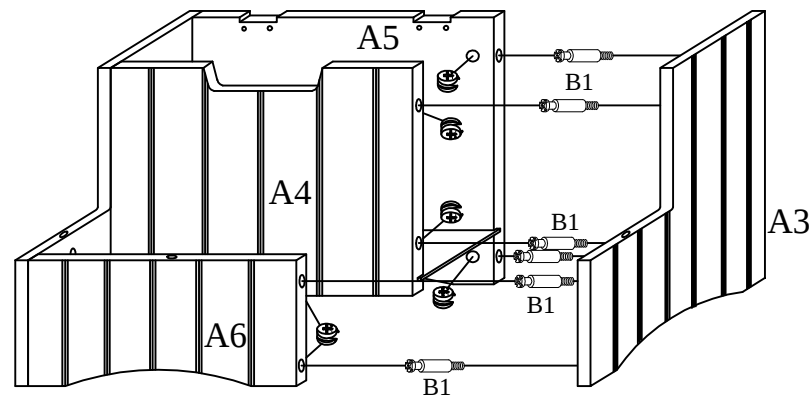

Step 4

1. Assemble the low top A8 onto the side panels A2,A3 and front panel A6 using camlocks B1.
2. Attach the hinges B2 to the top of back panel A5.

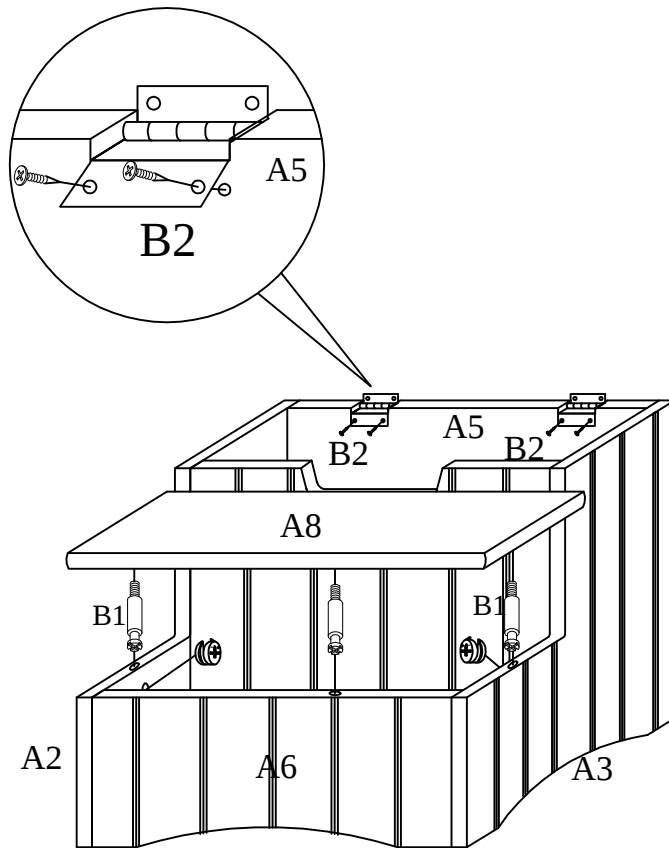

Step 5

1. Connecting the top panel A1 to the back panel A5 using hinges B2.
2. Assemble the safety hinge B3 to the top panel A1 and the side panel A2.

Warning: The Maximum Load of the top panel is 200lbs.

