



MOBILE STAND-UP COMPUTER DESK

Assembly Instructions
(For Item#: MT-M6288-1-GG)

PARTS						HARDWARE BAG			
A	Table Top Panel (round corners)	1 pc	E	Lower Tube Frame	1 pair	H1	Wood Screws (40mm)	10 pcs	
B	Bottom Panel (square corners)	1 pc	F	Connection Rod (for pouch)	2 pcs	H2	Wood Screws (20mm)	4 pcs	
C	Pouch	1 pc				H3	Nuts(4 with caps)	8 pcs	 
D	Upper Tube Frame	1 pair				H4	Retaining Screws	4 pcs	


Attention: Before you start assembling your computer desk; please prepare a soft surface work area on the floor. The only tool you will need is a screwdriver. Carefully remove all hardware from packaging and place the hardware parts on the soft work area where they will not come in contact with the laminated wood components. To avoid damage to the laminated wood surfaces, keep hardware parts separated until they are needed for assembly.

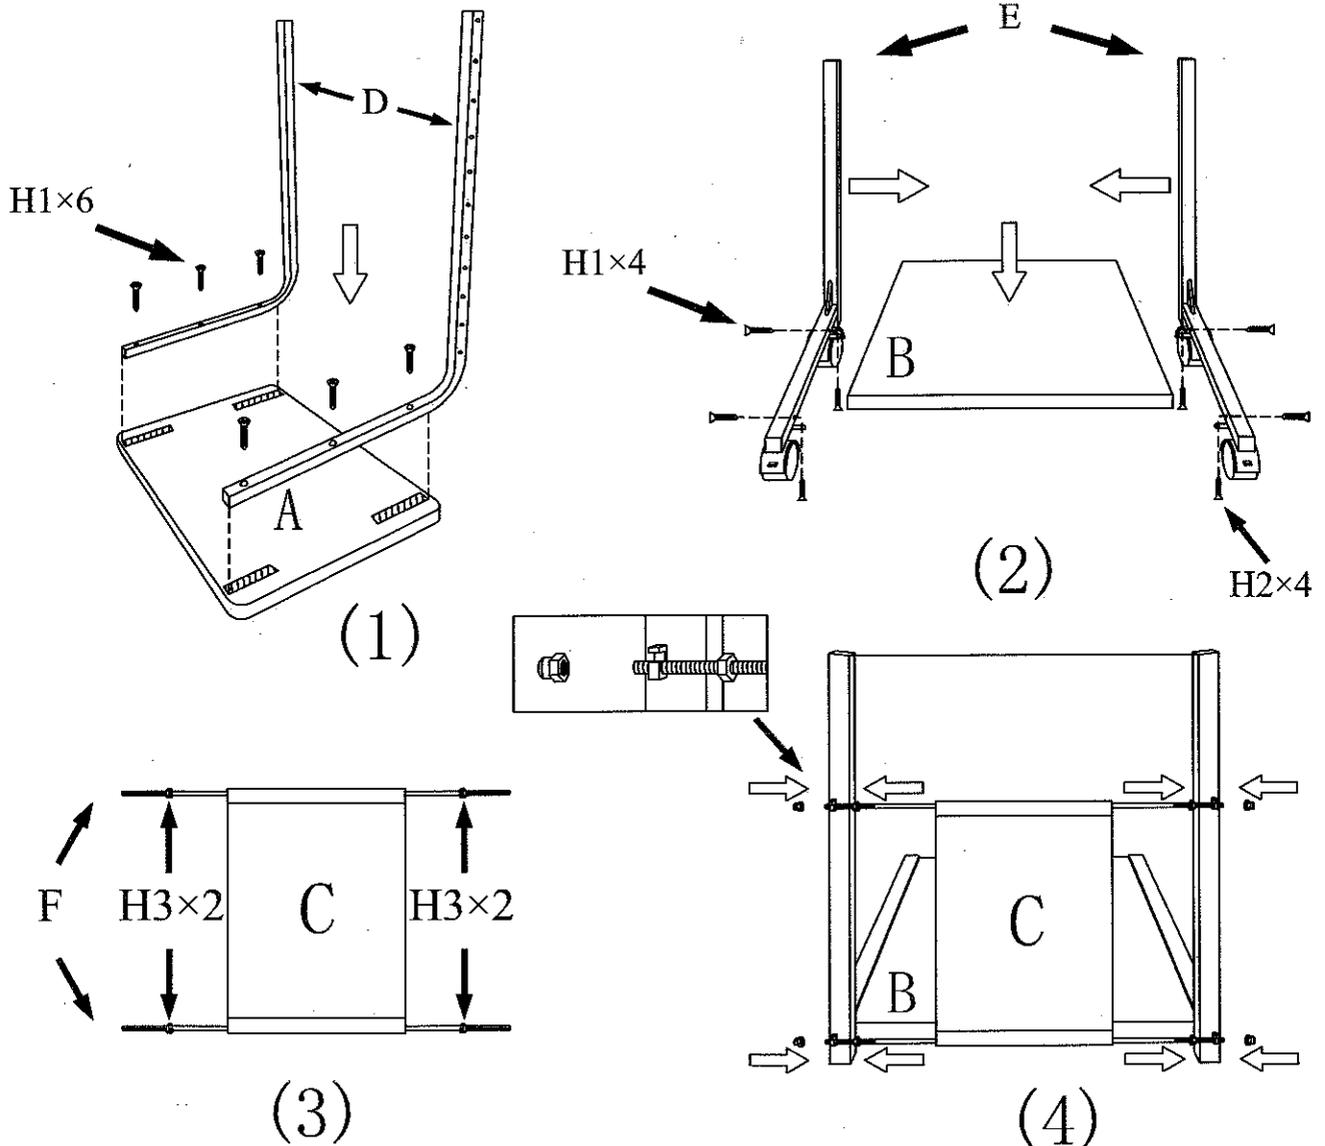

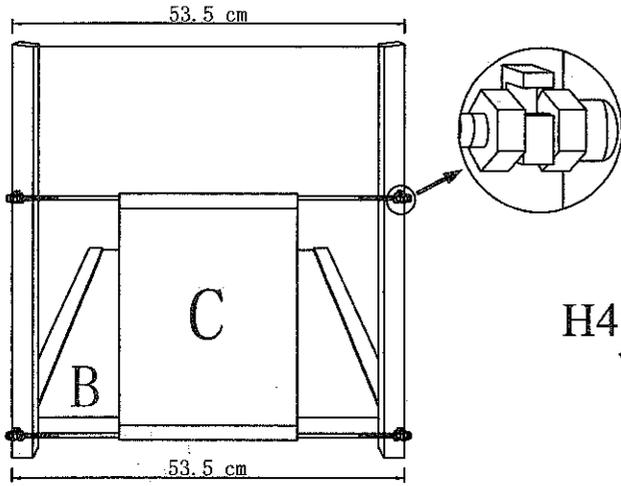


(5)

H4×4

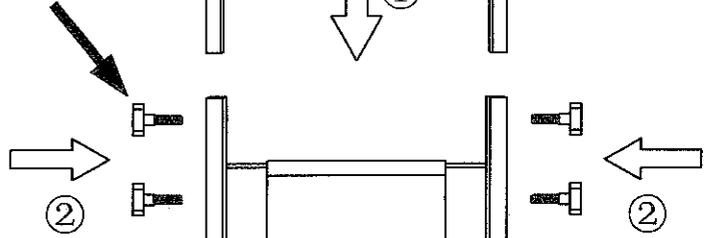

(6)

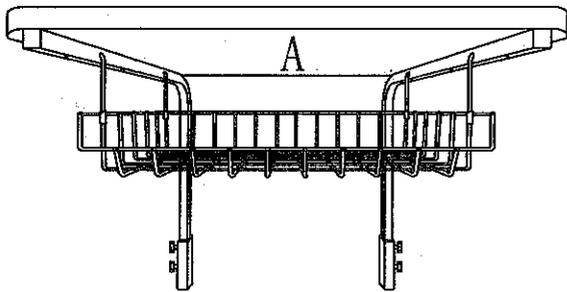

[if equipped with wire basket]

(7)

