
# PARTS LIST

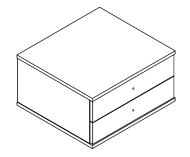

NAME: BOX CODE: 1 QTY: 1Pc



NAME: LEG (BOTTOM) CODE: 2 QTY: 1Pc



NAME: LEG (TOP) CODE: 3 QTY: 1Pc

# HARDWARE LIST



NAME: CHIPBOARD SCREW M4X32mm

CODE: A QTY: 5Pcs



NAME: WOOD DOWEL M8X35mm


CODE: B QTY: 4Pcs



<sup>-</sup>THE UNIT SHOULD BE ASSEMBLED BY 2 OR MORE PEOPLE

### STEP 1


A) Insert Wood Dowel(B) to Both Leg(2&3)

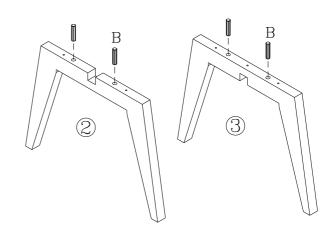

## STEP 2

A) Attach Both Leg(2&3) using Chipboard Screw (A) to secure


NOTE: Do not over tighten the screw

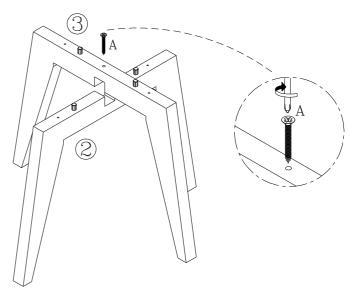



## STEP 3

A) Attach Leg to Box(1) using Chipboard Screw(A) to secure

NOTE: Do not over tighten the  $$\operatorname{\mathtt{screw}}$$ 

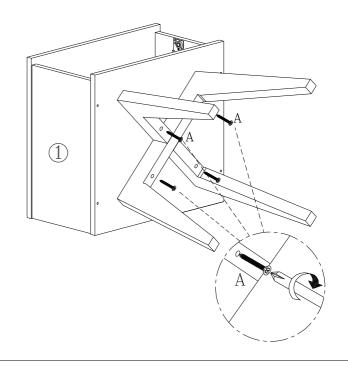

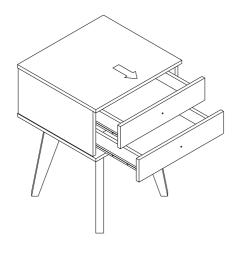

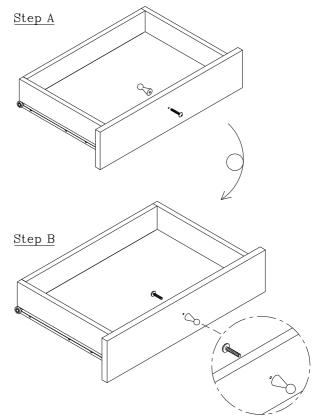

- A) Remove Handle from inside of each Drawer Front
- B) Attach Handle to outer side both Drawer Front and secure using Panhead Screw

NOTE: Do not over tighten the  $$\operatorname{\mathtt{screw}}$$ 

