

ole Required: Fluthead screwithver, Phillips screwithver, piters, who citizes, who obtypess, electrical teps, safely glasses. It is described: Fluthead screwithver, Phillips screwithver, piters, who citizes, electrical teps, safely glasses. It is supported to the support of the context of t

⚠ Wernings and Cautions
Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electricisn if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the thours. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fluture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal



A Floture Body x1

3

• Aylic x1

PART

DESCRIPTION

ALLIAMO

Hardware Contents

まる 2番×

Means Bugunoy

2008 2008 2008 2008 1008

Decorative Caps Electrical Marret Outlet Box Screw

Bare, or Green Ground wire from outlet box

Bare, or Green Ground wire

from outlet box

Ground wire from fodure

Black wire from _ outlet box (or Red)

from fixture

Black wire

from outlet box

from fluture

White wire

White wire

0 H

Once the celling campy is Crossber (EE) until the correct length is achieved and Lock Washer and Icrews (DD) in or out of the hen screwing Mounting ocurs, remove the etwo Cape (AA) Canopy

STEP 2 - Attach Groesbar to Outlet Box
A Pase the supply wires through the Crossbar (EE)
Attach the Groesbar (EE) to the Outlet Box (CD)
with the head of the Green Ground Strew facing Tighten until anug Secure It with Outlet Box Supply Wires with Outlet Box Screws Ground Wire Figure 2 Judget Box ğ 8 À

\$TEP 3 — Fit Cailing Canopy to Greenbar Assembly
A. Fit the ceiling canopy to Mounting Screws (DD) and secure
with Decorative Caps (AA). Note: The ceiling canopy should
be arrug against the ceiling and the Decorative Caps (AA).
If not, adjust the length of the
Mounting Screws (DD) by ing the Hex Nut

A. Line up a set of holes on the

on the ceiling campy. Crossber (EE) and Holes

À 9

hreed Mounting Screwe (DD)

Hend tighten until enug.

Figure 1

Figure 3


uts onto the Mounting

nhers and thread Hex abar (EE), Pass Lock

and ceiling canopy and proceed to Step 4.


and Hex Nuts to Crossbar


STEP 1 - Attach Mounting Screws, Lock Washers

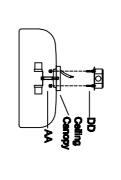

A. Use standard wire connectors to make all wire connections. Twist connectors until wires are fightly joined together. Wirep each connection with approved electrical lags and carefully stuff all the connected wires into the Outsit Box. B. Please put the Arylic to the Fixture Body (A). A.Install bulbs into sockets and screw snugly into place STEP 6 - Inetall Arylic and builb.

STEP 4 - Wire Connections

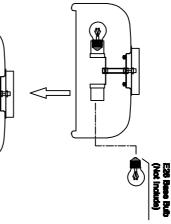

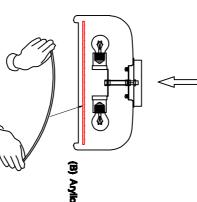

A-Carefully tuck all wires into the outlet box and position the ceiling cenopy of the Foxure Body (A) over the cutlet box. Align the holes in the ceiling canopy with the Mounting

us (DD). Secure with Decorative Caps (AA) and hand


STEP 5 - Install Celling Canopy to Celling

Figure 4

Green Ground Screw on the Crossbar

from fixture

Ground wire

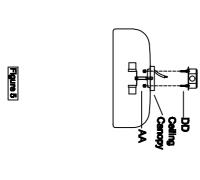

1 of 2

ReleasedDate:2018-12-26

Figure 6