

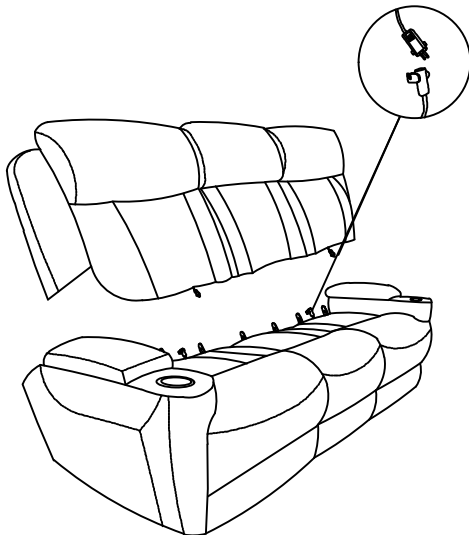





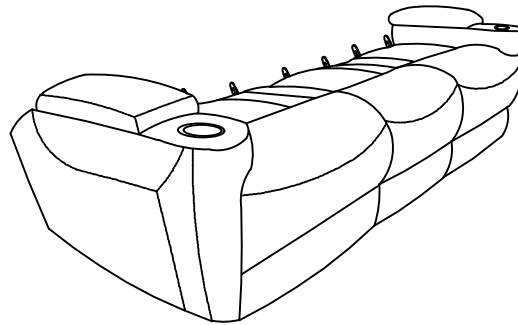


Parker Living[®]
HERITAGE

ASSEMBLY INSTRUCTIONS DALTON COLLECTION MDAL#834

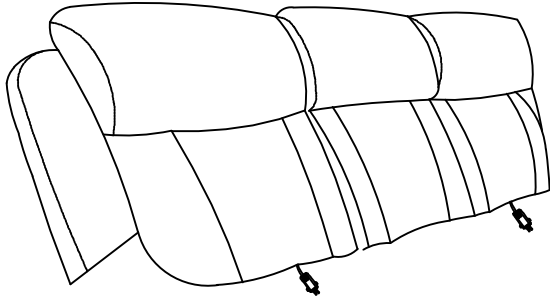

Connect wire behind seat to wire under the headrest, then slide back onto connecting brackets and push until you hear a clicking sound.

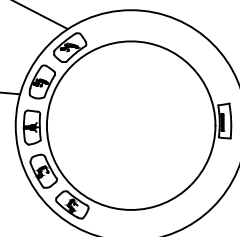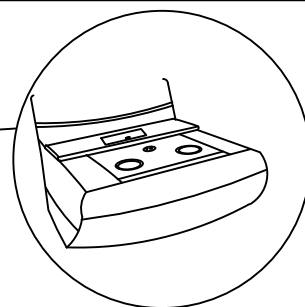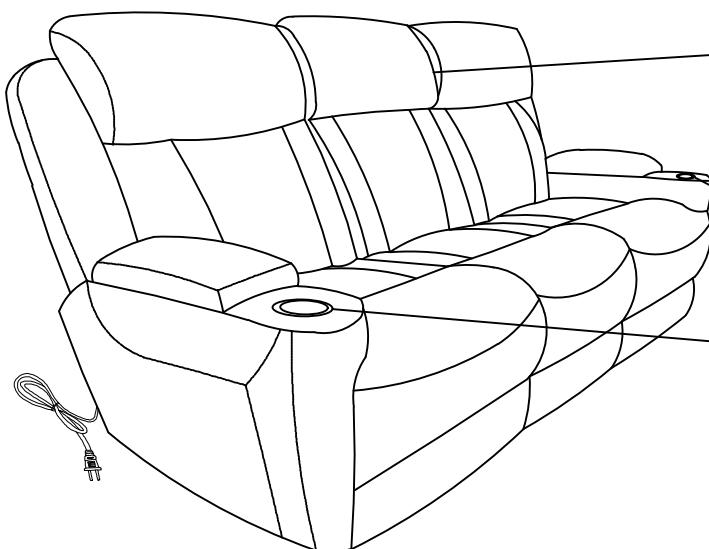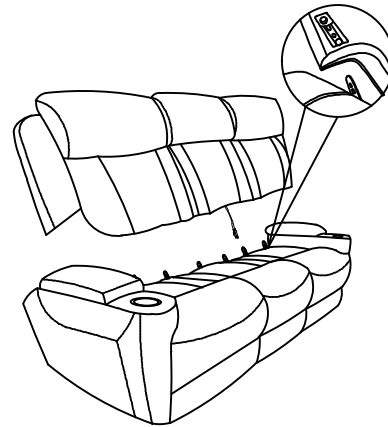

49900995