


PRODUCT ASSEMBLY INSTRUCTIONS ITEM: PHARAOH SWIVEL BARSTOOOL

Helpers needed to assemble: 1

Estimated time frame to assemble: 15 minutes

I, PARTS LIST:

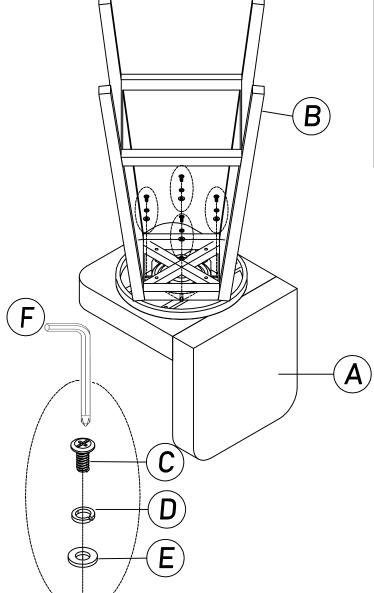

#	Picture	DESCRIPTIONS	Quantity
Α		BARSTOOL SEAT	1
В	A	BARSTOOL BASE	1
С	EMM	SCREW 1/4"-20 PPH 3/4"	4
D	9	LOCK WASHER	4
E	0	FLAT WASHER	4
F		DUEL HEX WRENCH WITH CROSSHEAD	1



II, INSTALLATIONS:

- 1. PLACE THE SEAT(A) UPSIDE DOWN ON A PADDED OR CARPETED SURFACE, MAKE SURE THE SEAT IS FACING THE FRONT. DO NOT REMOVE ANY PROTECTION PACKAGE AT THIS TIME.
- 2. TURN THE BASE UPSIDE DOWN, MAKE SURE THE FOOTREST IS FACING, THE FRONT. POSITION THE TOP PLATE OF THE SWIVEL AGAINST THE STOPPERS ON THE TWO BARS (AS SHOWN.)
- 3. PRESS THE BASE DOWN AND TURNIT TO -45° (CLOCKWISE)UNTIL YOU CAN MATCH THE HOLES OF THE SWIVEL WITH THE HOLES OF THE TWO BARS UNDERNEATH THE SEAT.
- 4. FINGER TIGHTEN 4 SCREWS (C) WITH LOCK WASHERS (D), AND THE FLAT WASHER TO THE HOLES ON THE SEAT, AS SHOWN. (IF YOU FACE THE FRONT OF THE BARSTOOL),
- 5. TIGHTEN ALL 4 SCREWS (C) WITH THE CROSSHEAD SIDE OF HEX TOOL
- 6. RELEASE YOUR HAND SO THE BASE CAN RETURN AND FACE THE FRONT AGAIN.
- 7. TURN THE BARSTOOL UPRIGHT, CAREFULLY REMOVE THE PROTECTION PACKAGES.
- 8. TURNED THE SEAT TO LEFT AND RIGHT A FEW TIMES, NOW THE BARSTOOL IS READY TO BE USED.




Product Assembly Instructions Item#: Pharaoh Swivel Barstool

Helpers needed to assemble: 1

Estimate time frame to assemble: 15 minutes

Tools Needed: Phillips Head Screwdriver

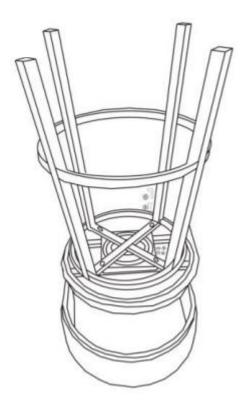


#	Picture	Description	Quantity
1		Barstool Seat	1
2		Barstool Base	1
3		Screws 1/4-20 PPH 3/4"	1
4		Lock Washer	4
5		Flat Washer	4

- Step 1: Place the Seat upside down on the floor as seen, make sure the seat is facing front..
- Step 2: Turn the base upside, wit the footrest facing the front.

 Position the top plate of the swivel against the stoppers on the two bars.
- Step 3 :Press the base down an turn 45 degrees clockwise until the holes of the swivel match the holes of the bar.
- Step 4: Finger tighten the 4 screws along with the lock washers and the flat washers to the holes of the seat.



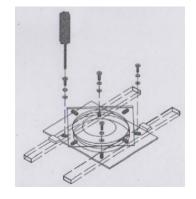

- Step 5: Tighten all 4 screws with a Phillips Head screwdriver.
- Step 6: Release the base and allow it to return and face the front.
- Step 7: Turn the barstool upright and remove all packaging.
 Sit and enjoy your new barstool.