



# ASSEMBLY INSTRUCTIONS | WARREN UPHOLSTERED BED

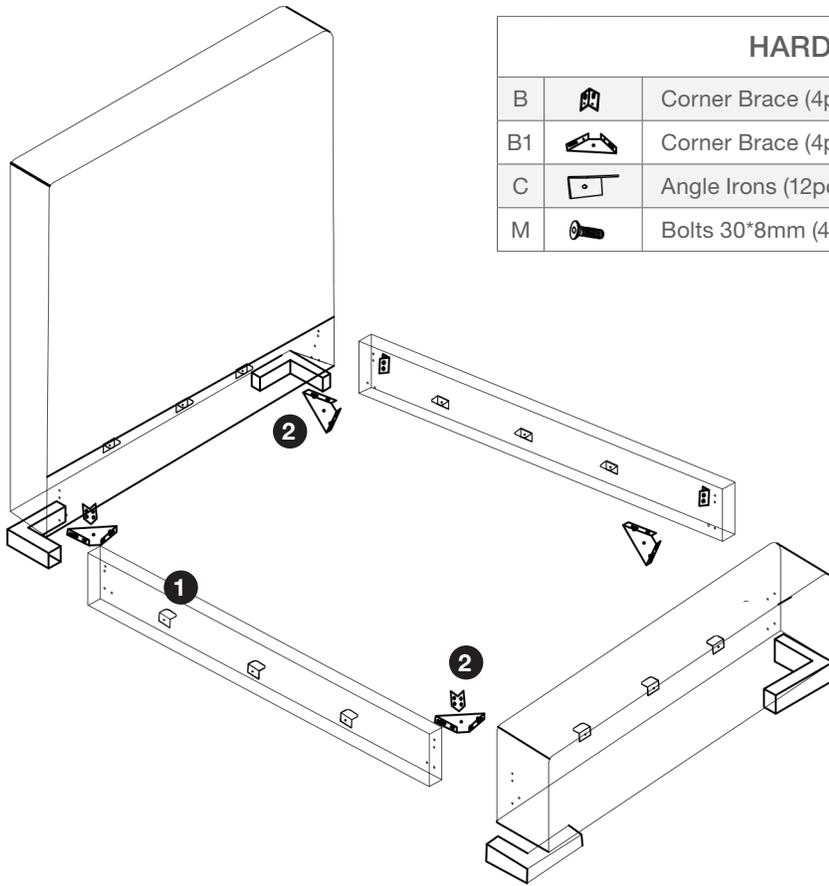

HARDWARE CHECKLIST					
B		Corner Brace (4pcs)	N		Allen Key (1pc)
B1		Corner Brace (4pcs)	X		Black Cotton Pad (12pcs)
C		Angle Irons (12pcs)	Y		Stand - 22cm (2 or 3pcs)
M		Bolts 30*8mm (44pcs)			


## Step 1

Install type C angle irons on the headboard, along the inside of the headboard, side rails and footboard. Then place type X cotton pads on top of type C angle irons

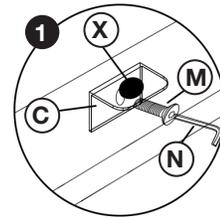

## Step 2

Use type B and B1 Corner Braces to connect the headboard, side rails and footboards

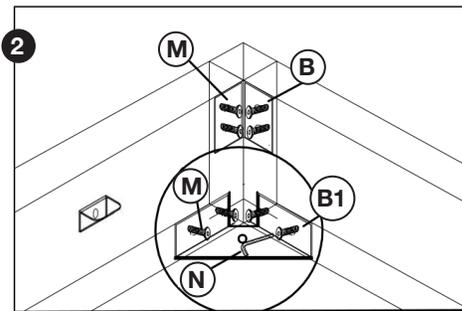

## Step 3

**For Queen Bed:** Place slats on top of angle irons. Install the 2pcs type Y stands to the middle of the slat. Type Y stand height can be adjusted further as needed.

**For Cal King & Std King Bed:** Place slats on top of angle irons. Install the 3pcs type Y stands to the middle of the slat. Type Y stand height can be adjusted further as needed.

