


"RUT-418" ASSEMBLY INSTRUCTION




1. Backrest

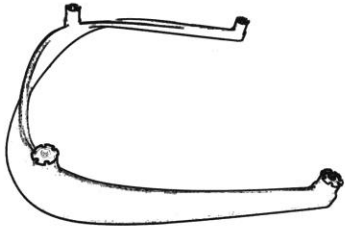

2. Frame

Hammer on the backrest evenly!

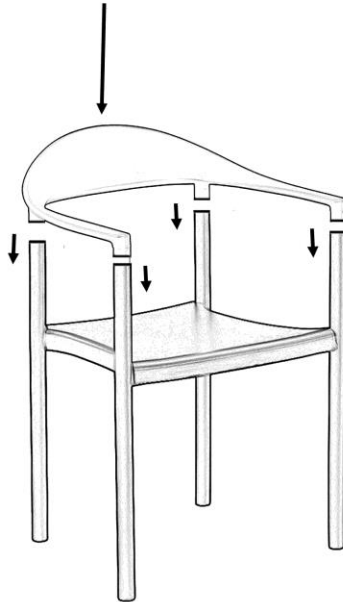

FINISHED

