







IT 1321 FC (SOFA)


ASSEMBLY INSTRUCTION

Before you begin,
Please follow Assembly Instruction carefully,
Then follow them step by step.


HARDWARE LIST

A		4 PCS	B		2 PCS	C		2 PCS
	JCBC M6 X 70MM			JCBC M6 X 50MM			BARREL NUT	
	1 SEATER	2 SEATER		3 SEATER				
D		4 PCS	E		1 PC	F		6 PCS
	CSK SCREW M4 X 38MM			ALLEN KEY M4			WOOD BUTTON	


1

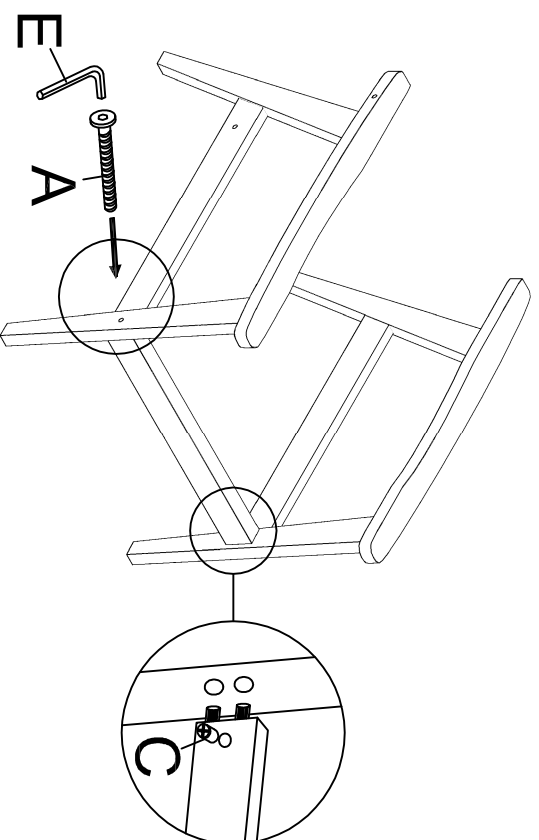

2

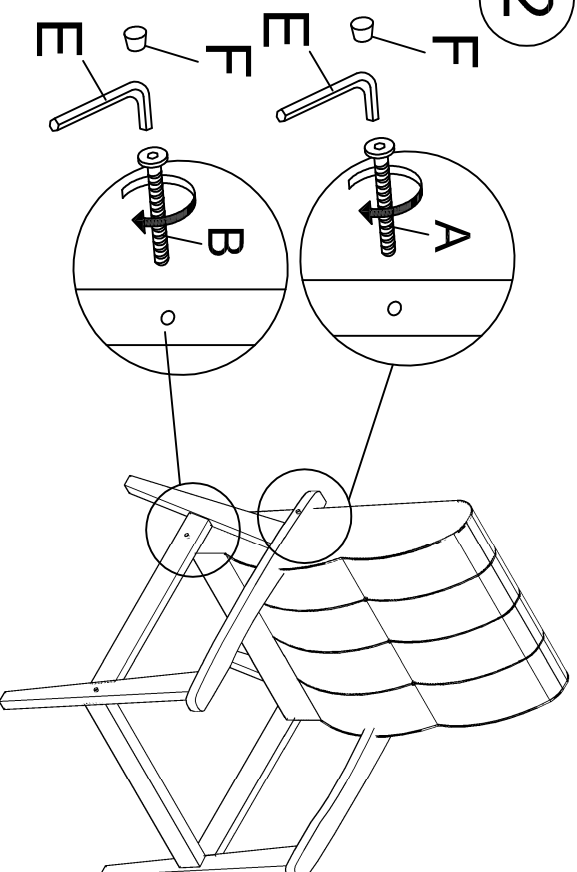

3

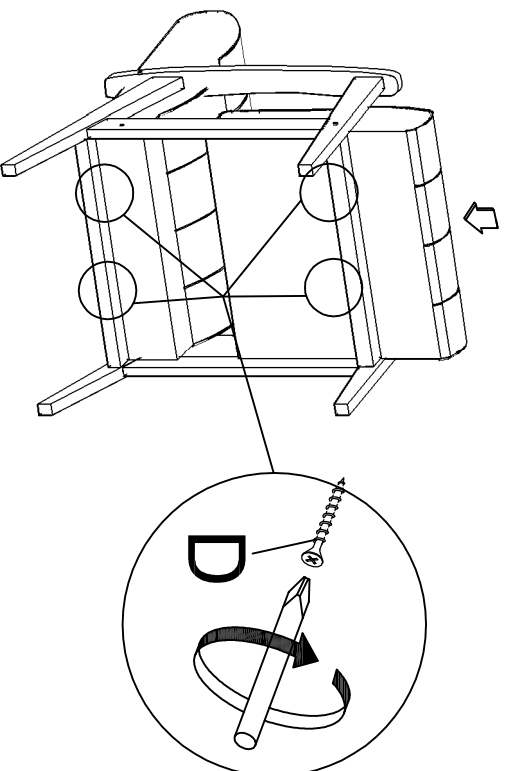

Assembly completed

