

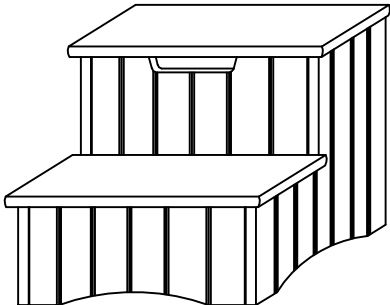



Assembly Instruction	Tools Required	Hardware Provided
 It is recommended that this item should be assembled by two adults.	 Phillips screwdriver	 B1 15SETS-Camlocks
	 Note: Please don't over tighten the cam screws. Assure the cam screw fits in the plastic threaded insert. Otherwise, the cam nut might not be able to catch the cam screws.	 B2 2SETS-Hinges and screws  B3 1SET-Safety Hinge and screws


Furniture Parts

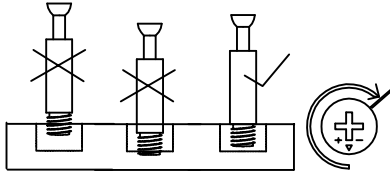


A1 1PC-Top panel

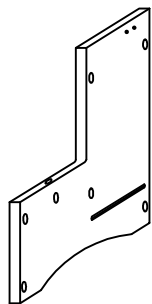


A2 1PCS-Side panels

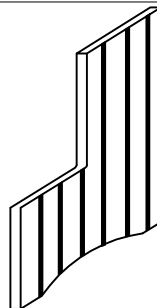


A3 1PCS-Side panels

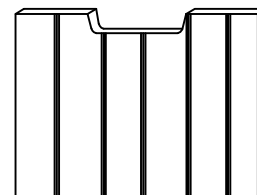

A4 1PC-Middle panel

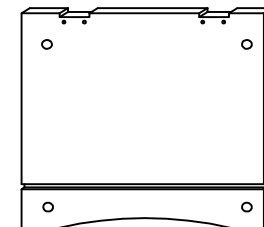

A5 1PC-Back panel



A6 1PC-Front panel




A7 1PC-Bottom panel



A8 1PC-Low Top Panel


Step 1

Assemble the front panel A6, middle panel A4 and back panel A5 to the side panel A2 using camlocks B1.

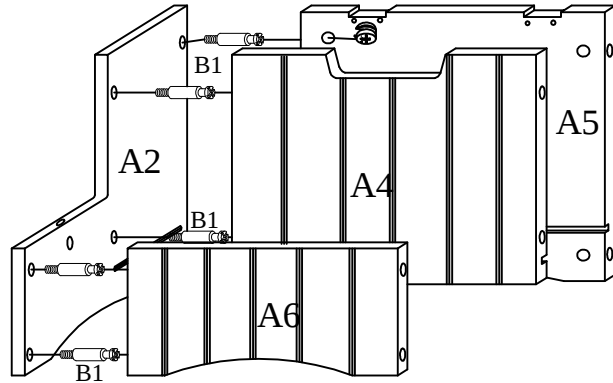


Step 2

Insert the bottom panel A7 into the grooves of middle panel A4 and back panel A5.

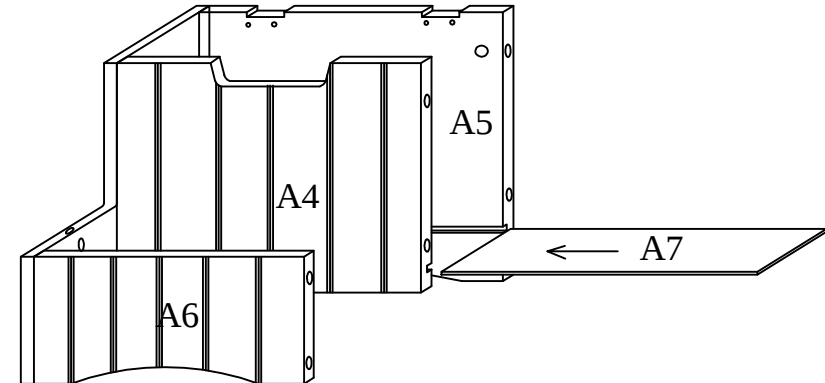


Step 3

Assemble the side panel A3 to the front panel A6, the middle panel A4 and the back panel A5 using camlocks B1 .

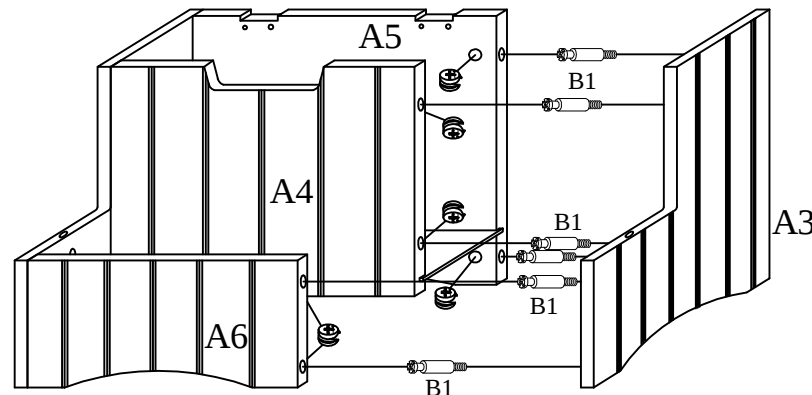

Step 4

1. Assemble the low top panel A8 onto the side panels A2,A3 and front panel A6 using camlocks B1.
2. Attach the hinges B2 to the top of back panel A5.

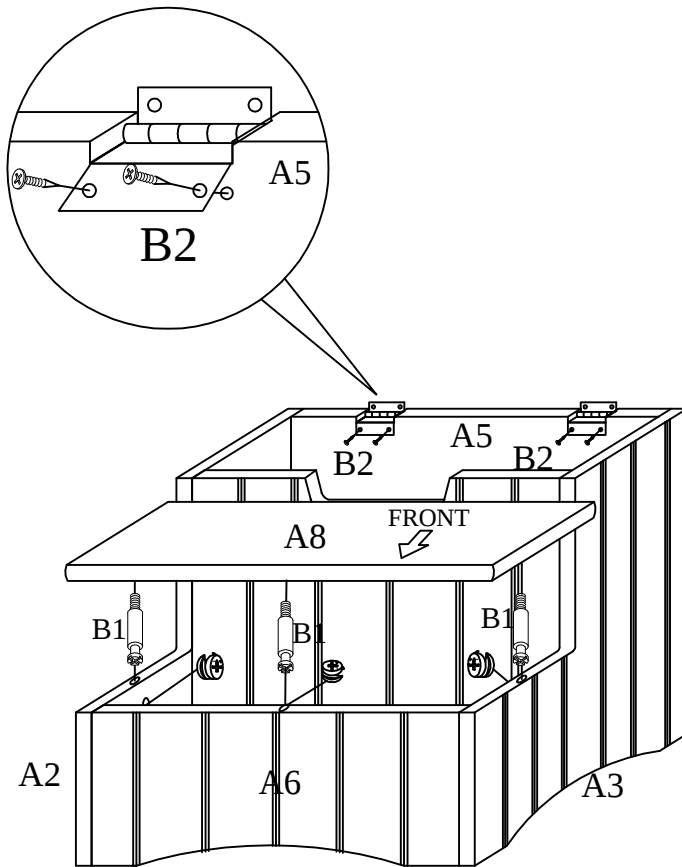

Step 5

1. Connecting the top panel A1 to the back panel A5 using hinges B2.
2. Assemble the safety hinges B3 to the top panel A1 and the side panel A2.

Warning: The Maximum Load of the top panel is 200 lbs.

