


## **Assembly Instruction**

INSTRUCTION DE MONTÂGE MONTÂGEÂNLEITUNG SÂNILEVEJILEMING

MAKE SURE THE LETTERS MATCH BEFORE ASSEMBLING NEED ASSEMBLY ASSISTANCE? CALL US AT 866-814-8325

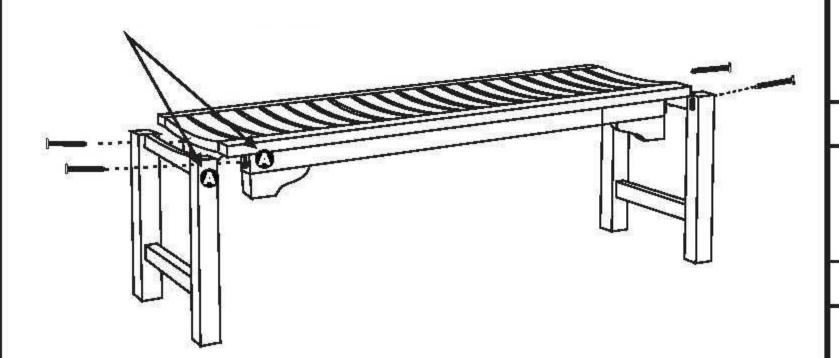

Make sure to use Gorilla Glue (Not Included) on all wood joints before assembly

Code

**HJ172** 

## **Hardware**



F. Bolt (4 Pcs)

## Tool



Socket Wrench 4m/m Ht

## **Total Section**

3 Section