

Item#54329


Parts list

Top Assembly	1 pc
Side legs	2 pcs
Metal bars	2 pcs

Assembly Instruction

Hardware list

Allen Screws	16 pcs
Wrench	1 pc

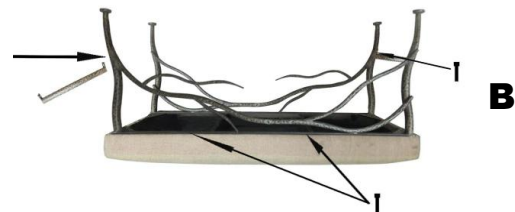

1. Take all parts out of the carton carefully and place on a clean flat surface.
2. Screw two side legs into bench top as illustrated in photo A with allen screws.
3. Screw two metal bars into two legs in separate ends as inllustrated in photo B with allen screw.
4. Use wrench to make srews tightly. Finally put upside down as shown in photo C.